

Owner's manual

FF







General remarks

This vehicle, which complies with EC homologation parameters, uses advanced technology and is capable of achieving high performance levels.

It is equipped with sophisticated active and passive safety systems (described below).

These safety features and systems do not authorise the driver to take risks other than those involved in normal driving since their preventive and protective action is guaranteed only in certain conditions. Unless otherwise instructed specifically by **FERRARI** (see the Safety chapter), the deactivation of any of the vehicle's safety systems is **PROHIBITED**.

While certain safety systems (e.g. the airbags) have been tested to ensure that they offer the highest possible levels of protection, they may nonetheless be hazardous in the event of failure by the driver or passenger to observe the instructions given by **FERRARI**. All vehicle occupants must be attentive at all times and take particular care when transporting passengers who are more subject to injury such as children, disabled and elderly persons.

Safe driving is subject to the following conditions **AT ALL TIMES**:

- the driver must be in perfect psycho-physical condition;
- road regulations (Traffic Regulations - Vienna Convention on Road Traffic that ended on 8 November 1968) must be strictly observed;
- common rules of caution must always be observed in relation to the quality/performance of the vehicle, driving conditions and contingent situations.

- Caution and discipline are the basis of safe driving.
- Driving takes place in a naturally dangerous context in which a number of different risk factors interact. For this reason, drivers must drive bearing in mind that others, whether they are pedestrians, motorcyclists or motorists, can make mistakes. Keeping a safe distance allows emergency measures to be taken. Remember that national and international legislation requires that the driver of the vehicle must be capable of performing corrective and/or emergency manoeuvres at all times.
- Correct and careful use of a vehicle derives, above all, from respect for one's own safety and that of others as well as from compliance with road regulations. Only this respect will help you experience all the emotions that driving this car can offer you.

The driver **MUST NEVER** allow passengers to increase the risks associated with driving (e.g. by not using safety systems such as the seat belts) by failing to observe the mandatory safety rules that apply to both driver and passengers.

The vehicle **MUST NOT** be modified or tampered with for any reason whatsoever since, by so doing, the manufacturer's homologation and safety parameters will be modified.



The driver must pay the utmost attention to the signals of the vehicle and, in particular, the warning lights on the dashboard and buzzers. Even when the warning lights do not indicate a situation of immediate danger, the driver must be cautious in relation to possible consequences/degeneration of the failure and other information given.

During routine operations, such as refuelling, precautions should always been taken and it is important to check that flammable liquid has not been spilled; these precautions must be observed even if the operation is performed by others. Similarly, before setting off make sure that the doors are closed by checking the warning lights and also manually. The driver must be fully acquainted with the vehicle and its controls in order to handle and drive it correctly. Command of the vehicle can be acquired/improved by attending the driving courses held by **FERRARI** which we strongly recommend.

The use of terms from the motor sports world (such as F1, SPORT and RACE) is merely indicative of the vehicle's competition-derived technology and does not endorse inappropriate behaviour on the road which does not comply with Traffic Regulations.

Most accidents are caused by distraction. The driver must use any on-board information, communication and entertainment systems responsibly, especially when the vehicle is in motion. Examples of information, communication and entertainment systems are the following: satellite navigation systems, traffic information systems (e.g. ITT), media players (e.g. iPod), telephones with Bluetooth connectivity, etc. (whether merely audio-based or with display).

It is important to bear in mind that on-board systems may be distracting when driving since they may take a driver's attention off the road for several seconds.

Aftermarket video entertainment systems for the passenger (e.g. TV) must be installed where they cannot distract the driver while the vehicle is in motion. While the vehicle is in motion, the attention required to use on-board systems must never exceed the high level of attention required to drive safely in accordance with the Traffic Regulations.

Therefore, these systems may only be used (separately or in combination with others) by the driver:

- in complete safety (stopping the vehicle before use if necessary). Operations that are not involved with driving (e.g. changing dashboard functions), must be performed in maximum safety when the vehicle is stationary;



- putting road safety first; for example, under conditions of poor or limited visibility, looking at a display with active programmes can be distracting even if you take your eye off the road only for a split second;
- ensuring, if the previous vehicle owner has installed systems on the vehicle that are NOT APPROVED by **FERRARI** (car tuning), that they are fully compatible with the original vehicle equipment.

If the vehicle owner has installed one or more new systems, either fixed or removable, on the vehicle, make sure that these

- have the necessary certification;
- are fully compatible with the original vehicle equipment (i.e. they do not interfere with it);
- are fitted by skilled staff.

The **FERRARI TECHNICAL SERVICE DEPARTMENT** and **FERRARI DEALERS** and **AUTHORISED SERVICE CENTRES** can provide all the information needed to ensure that they are compatible.

Strict priority criteria must be observed when driving a vehicle: you must not therefore take your attention off the road.

In some countries, the use of entertainment/information systems is prohibited on vehicles when driving.

The driver is responsible for use of these entertainment/information systems with video screens if they are prohibited in the country where the vehicle will be driven.

These considerations are not exhaustive, but only refer to some general issues that will be specifically dealt with in this Owner's Manual.



Introduction

The aim of this Owner's Manual is to help you get the best value from your vehicle and to provide information on routine maintenance: we advise you to read it carefully before setting out. The Owner's Manual should be considered an integral part of the vehicle and must therefore always be kept on board.

Using the vehicle in a way that does NOT comply with the Owner's Manual not only exonerates **FERRARI** of any responsibility but also puts the person at great risk.

Due to its performance qualities, the vehicle should not be driven by inexperienced and poorly trained drivers.

Special care should be taken if the vehicle is entrusted to third parties so that they are not exposed to unnecessary risk. The vehicle may also be damaged if used in a way that does not comply with the above requirements.

Updating

The high quality level of the vehicle is subject to constant technological improvements. Therefore, there may be differences between this manual and your vehicle.

The **FERRARI SALES AND SERVICE NETWORK** will provide you with all the information on any updates.

All specifications and illustrations contained in this manual are accurate as of the date of printing.

Spare parts

When replacing parts or topping up with lubricants and fluids, we recommend that you use original spare parts and lubricants and fluids recommended by **FERRARI**.

Warranty Booklet

Each new vehicle comes equipped with a "Warranty Booklet".

The contents of the warranty do not affect the buyer's statutory rights as a consumer, which derive from binding legal norms in his or her favour, in the various states or countries or from European Union regulations, towards the Dealer.

The Warranty Booklet also contains the routine maintenance indicated in the "Maintenance Schedule".

The **FERRARI** warranty is voided if **ORIGINAL FERRARI SPARE PARTS** are NOT used for repairs.



Service

The information in this manual is necessary for the use and proper care of the vehicle. In addition, Customers will get maximum satisfaction and results from the vehicle if they carefully follow the instructions contained in it.

We recommend that you have all the checks and services performed at **FERRARI AUTHORISED WORKSHOPS** since they have highly skilled staff and the necessary equipment.

Please refer to the “Sales and Service Organisation” manual for information on the location of the **FERRARI DEALERS** and **AUTHORISED SERVICE CENTRES**.

The **FERRARI TECHNICAL SERVICE DEPARTMENT** is at your complete disposal for any information and advice. If you have any doubts about the information provided in this manual or how to use or operate the vehicle, please contact the **FERRARI SERVICE NETWORK**.

Consulting the manual

To facilitate reading the manual, the topics have been divided into sections and chapters.

1. General

Provides general information about your vehicle.

2. Quick reference guide

Contains all the information you need when using the vehicle for the first time.

3. Safety

Describes the main safety systems in the vehicle.

4. About your vehicle

Provides all necessary information for use of the vehicle.

5. Advice for Emergency Situations

Provides useful advice for solving problems that may occur.

6. Care of the vehicle

Provides advice for cleaning, care and routine maintenance of your vehicle.

7. Glossary

Explains the main technical concepts.

8. Table of Contents

Allows you to quickly identify and locate the information required.



Within the various sections, special attention must be paid to the parts marked as follows:

Warning



Extreme caution required: failure to comply with the instructions could constitute a serious risk to personal safety and vehicle protection!

Important note



Important note: a note containing instructions or information.

Environment



Warning for environmental protection: useful advice for protection of the environment.

Abbreviations/Acronyms

Some descriptions and terms with particular meanings are found in this manual in an abbreviated form:

A.C.	AIR CONDITIONING
ABS	ANTI-LOCK BRAKING SYSTEM
ASR	ANTI-SKID REGULATION during acceleration
DCT	DUAL CLUTCH TRANSMISSION
EBD	ELECTRONIC BRAKE-FORCE DISTRIBUTION
ECU	ELECTRONIC CONTROL UNIT
ESC	ELECTRONIC STABILITY CONTROL
F1-Trac	Traction control derived from the technologies used in the racing sector



Environmental protection

Environment



The following chapter contains useful advice for environmental protection.

FERRARI has designed and constructed a vehicle using technologies, materials and devices capable of reducing the harmful impact on the environment to a minimum.

If you use your vehicle with respect for the environment, you too will contribute to environmental protection.

Fuel consumption as well as engine, gearbox, brakes and tyres wear mainly depend on two factors:

- use of the vehicle
- driving style.

Both factors are influenced by the driver.

Use of the vehicle

- Avoid using the vehicle for short trips.
 - Check that the tyre pressure is correct.
 - Check the fuel consumption.
 - Proper periodic maintenance will contribute to preserving your vehicle in full working order and to protecting the environment.
- We therefore advise you to respect the service due dates indicated in the “Maintenance Schedule”.

Driving style

- Do not accelerate during the starting procedure.
- Do not warm up the engine when the vehicle is stationary.
- Drive carefully and keep a safety distance that corresponds to the driving speed.
- Avoid sudden and frequent acceleration or braking.
- Turn off the engine if the vehicle is kept stationary for long periods of time.
- Shift gears using only 2/3 of the speed permitted for each gear.
- Use the air conditioning in moderation.

Important note



The vehicle is equipped with exhaust gas control and monitoring systems which must always be kept in perfect working order and controlled regularly.



End-of-life vehicle collection service (applies to EU countries only)

For many years, FERRARI has been globally committed to respecting and protecting the environment by constantly improving its manufacturing processes and developing increasingly eco-compatible products.

End-of-life vehicle regulations (EU Directive 2000/53/EC) stipulate that producers (vehicle manufacturers and professional importers) must take back end-of-life vehicle that they put on the market and ensure that they are disposed of in an environmentally responsible manner.

Therefore, to dispose of your end-of-life vehicle at no additional cost (with the exception of a de-registration fee and any transport costs), contact your nearest FERRARI dealer who is responsible for taking the vehicle to one of the authorised collection and disposal centres which have all been selected to guarantee a service that meets quality standards for the collection, treatment and recovery of recyclable materials without harming the environment.

For further information, visit **www.ferrari.com**.

To dispose of a FERRARI end-of-life vehicle, the vehicle must be:

- complete, containing the essential components including engine, transmission, bodywork, ECUs and catalytic converter;
- free from additional waste.

FERRARI thanks you for taking part in this environmental challenge.

Vehicle keys	14
Alarm system.....	15
Duplicating the keys	16
Replacing remote control batteries	17
Electronic alarm	17
Identification and homologation plates and labels ..	20
Dimensions and weights	27
Main engine specifications	28
Consumption and emissions	28
Performance.....	28
Wheel rims and tyres	29
Refilling.....	32



1



GENERAL



Vehicle keys

The vehicle is delivered with two identical keys that can be used for:

- central door locking;
- starting the vehicle;
- activating/deactivating the alarm system;
- opening the luggage compartment lid.

Important note



If the keys are lost or stolen, you can request a duplicate from the **FERRARI SERVICE NETWORK** (see section “Duplicating the keys” on page 16).

Key codes

A **CODE CARD** is supplied with the keys. This card shows the following:

- the electronic code;
- the mechanical code for the keys, to be given to the **FERRARI SERVICE NETWORK** if you request duplicates of the keys.

Warning



The code numbers on the **CODE CARD** must always be kept in a safe and protected place, not accessible to others.

Important note



In the event of a change of ownership, it is essential that the new vehicle owner is provided with all the keys and with the **CODE CARD**.





Alarm system

The FERRARI CODE system

The vehicle is equipped with an electronic immobiliser system (FERRARI CODE) which is automatically activated when the ignition key is removed.

The keys are equipped with an electronic device which transmits a coded signal to the FERRARI CODE ECU. Once this ECU has recognised the signal, it allows starting the engine.

Operation

Each time the ignition key is removed (see page 99), the protection system activates the engine immobiliser.


When starting the engine, press the **ENGINE START** button on the steering wheel:

- 1) If the code is recognised, the **CODE** warning light **A** on the instrument panel turns off when the check procedure has been completed, whereas the **EOBD** warning light **B** turns off when the engine is started once the ECU has completed its diagnostic cycle; in these conditions, the protection system has recognised the key code and deactivated the immobiliser.
- 2) If the **CODE** warning light **A** stays on, it means that the code has not been recognised. If this occurs, it is advisable to turn the key back to position **0** and then back to **II**; if the immobiliser device remains active, try with the other key provided.

Important note



If you still cannot restart the engine, contact the **FERRARI SERVICE NETWORK**.

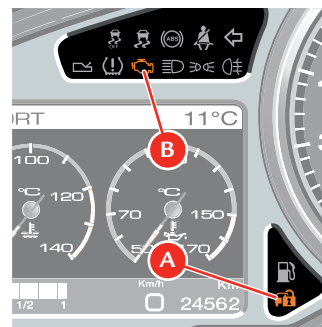



While driving, with the ignition key in position **II**:


- 1) If the **CODE** warning light **A** turns on, it means that the system is performing a self-diagnostic cycle. At the first opportunity, you can stop and test the system: switch off the engine by turning the ignition key to position **0**, then turn the key back to position **II**. The **CODE** warning light **A** will turn on and should go off within one second. If the warning light stays on, repeat the procedure described previously leaving the key at **0** for more than 30 seconds.

Important note



If the problem persists, please contact the **FERRARI SERVICE NETWORK**.

- 2) If the **CODE** warning light **A** flashes, it means that the vehicle is not protected by the immobiliser.

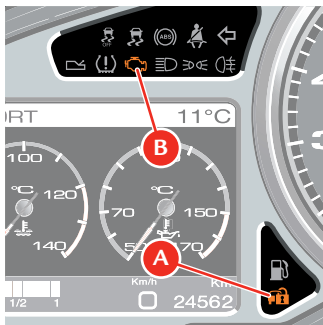

Important note



Contact the **FERRARI SERVICE NETWORK** immediately to have all the keys stored in the system memory.

Important note



Each key provided has its own specific code, which must be stored in the memory of the system control unit.

Duplicating the keys

If you request additional keys, provided that the conditions to satisfy your request are met, remember that the codes must be stored (up to a maximum of 7 keys) on all the keys. Contact the **FERRARI SERVICE NETWORK** directly and bring the following with you:

- all the keys in your possession;
- the **CODE CARD** for the **FERRARI CODE** system;
- a personal identity document;
- the documents proving ownership of the vehicle;
- a report of loss of keys made to the relevant authorities.

The codes of the keys that are not available when the new memorisation procedure is performed will be deleted from the memory, in order to prevent that any lost or stolen keys are used to start the vehicle.



Replacing remote control batteries

If you press one of the three buttons on the key and this does not activate the corresponding function, check that the alarm system functions are operating correctly by using the other remote control before replacing the two remote control batteries.



Replace the remote control batteries as follows:

- open the key cover **C** using a small screwdriver at the position indicated by the arrow;
- remove the two batteries **E** by pushing them in the direction indicated by the arrow to release them from the retainer cover **D**;
- fit two new batteries of the same type, observing the indicated polarity;
- close the key cover **C**.

Important note



Do not use sharp tools to remove the cover and be careful to avoid damaging the remote control.

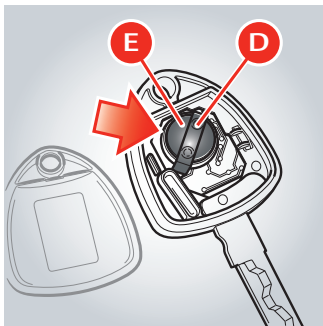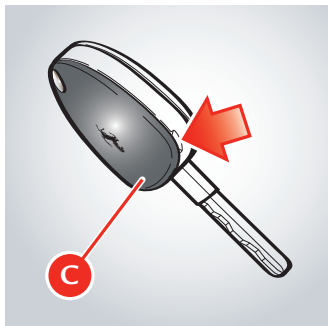

Electronic alarm

The electronic alarm system performs the following functions:

- remote control for central door locking/unlocking;
- perimeter surveillance, detecting if doors and lids are open;
- motion surveillance, detecting intrusion in the passenger compartment;
- vehicle movement surveillance.



Activation

To turn on the alarm system, press button **F** on the key:

- the turn indicators flash once;
- the system “beeps”;
- the red LED on the dashboard flashes;
- the central door locking system is activated and the doors are locked.

The system activates after approximately 25 seconds.

When the electronic alarm is activated, the user may request opening of the luggage compartment; in this case, the motion and anti-lift sensors are temporarily deactivated.

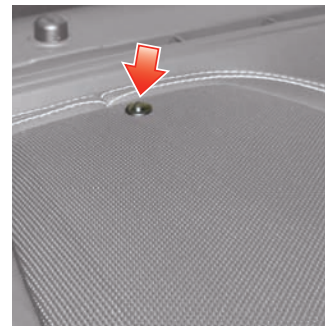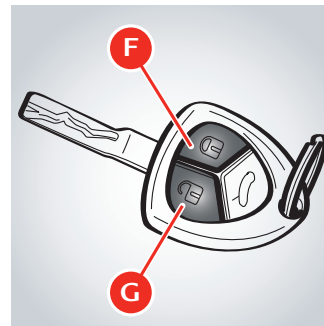

1



If the luggage compartment is then closed, the sensors will be reactivated.

If the turn indicators and the red LED on the dashboard flash 9 times when you activate the alarm system, it means that one of the doors or the front/rear lid is open or not closed properly and is therefore not protected by the perimeter surveillance. If this is the case, check that the doors and front/rear lids are closed properly and close any door or lid that is open without deactivating the alarm system: the turn indicators will flash once to indicate that the door or the front/rear lid is now closed properly and is protected by the perimeter surveillance.

Warning



If the turn indicators and the red LEDs on the dashboard flash 9 times when the alarm system is activated with doors, rear and front lids properly closed, it means that the self-diagnostic feature has detected a malfunction in the system. Contact the FERRARI SERVICE NETWORK to have the system checked.

Deactivation

To deactivate the alarm system, press button **G** on the key:

- the turn indicators flash twice;
- the system beeps twice;
- the red LED on the dashboard goes off;
- the dome lights come on;
- the central door locking system is deactivated and the doors are unlocked.

Pressing button **G** twice unlocks the doors and also turns on the low beams for 30 seconds.

The alarm system is off and you can now get into the vehicle and start the engine.

To enter the vehicle if the remote control battery is flat, insert the key into one of the two door locks and turn it to release the lock; the alarm siren will start to sound.

Start the vehicle following the standard procedures. The alarm siren will deactivate.

Deactivating the anti-lift alarm

Press button **H** on the roof panel to deactivate the anti-lift alarm system. When this function is deactivated, the indicator light on the button will flash for about 3 seconds and will then turn off.





Alarm memory

If the **CODE** symbol (see page 124) appears on the left TFT display for 10 seconds when the vehicle is started after system diagnosis together with the message “Break-in attempted”, this means that an intrusion has been attempted and has activated the alarm.

In this case, the system will indicate the reason for the alarm activation according to the following priority:

- **LED off twice:** lifting sensor alarm
- **LED off three times:** door alarm
- **LED off four times:** luggage compartment lid alarm
- **LED off five times:** ignition key alarm.

The alarm system memory is reset by turning the ignition key.

Homologation

The electronic alarm system complies with EU regulations on electromagnetic compatibility and it is marked in compliance. The homologation number is referred to with the following characters.

For those markets that require the transmitter and/or receiver marking, the homologation number is found on the component.


Satellite alarm system (optional)

In some markets, the vehicle can be equipped, on request, with a satellite alarm system. If the vehicle is equipped with a satellite alarm system, please refer to the “NavTrak Satellite Alarm System Quick Reference” booklet enclosed with the vehicle documents, for further information.





Identification and homologation plates and labels

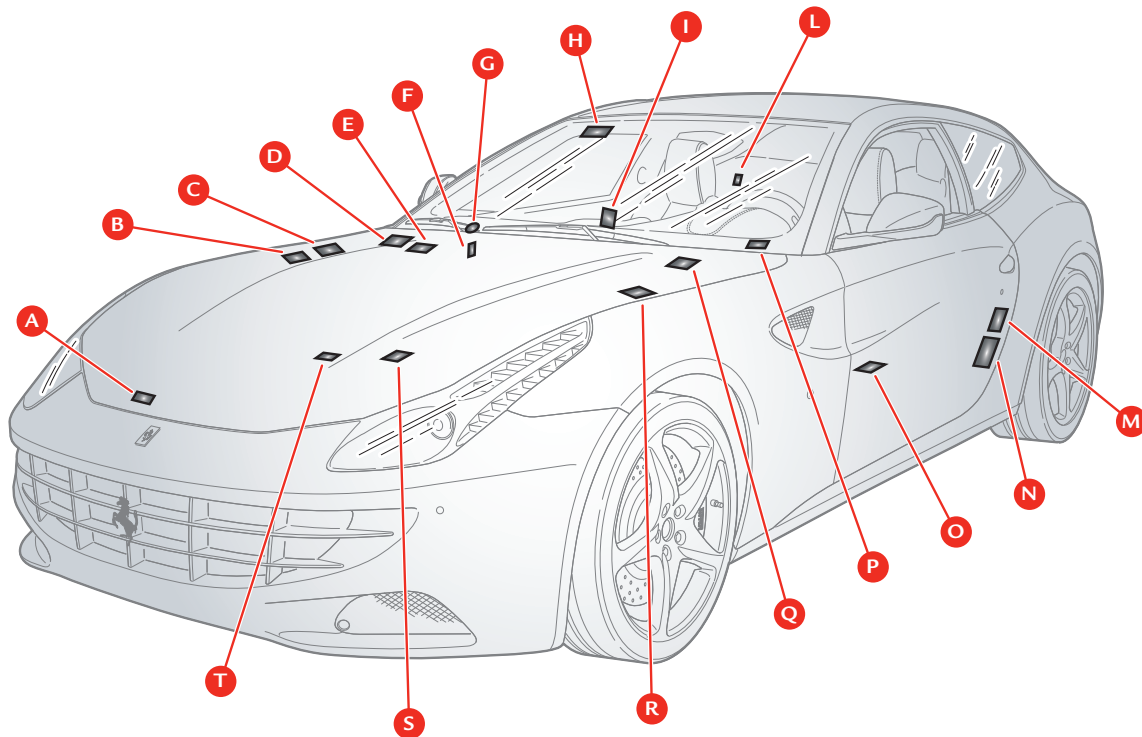



Ref.	Label/plate	Position
A	Low-beam homologation	Engine compartment lid
B	Radiator with antifreeze	RH engine compartment cosmetic shield
C	Engine and gearbox oil label	RH engine compartment cosmetic shield
D	ECE homologation	Engine compartment lid
E	Checking the engine oil level	RH engine compartment cosmetic shield
F	Airbag maintenance	Passenger-side dashboard side panel
G	Installation of rearward facing child seat not allowed	Passenger-side dashboard side panel
H	Passenger airbag warning (2)	Passenger-side sun visor
I	Vehicle identification	Rear passenger-side door jamb
L	Unleaded fuel	Fuel filler flap
M	Tyre pressure and type	Driver-side door
N	TPMS present warning	Driver-side door
O	Gearbox type and number	Gearbox housing
P	Chassis number	Windscreen
Q	Original paintwork	Engine compartment lid
R	Stop&Start system warning (only with HELE)	LH engine compartment cosmetic shield
S	Engine type and number	Crankcase
T	Assembly number	Engine compartment




A Low-beam homologation




B Radiator with antifreeze



C Engine and gearbox oil label

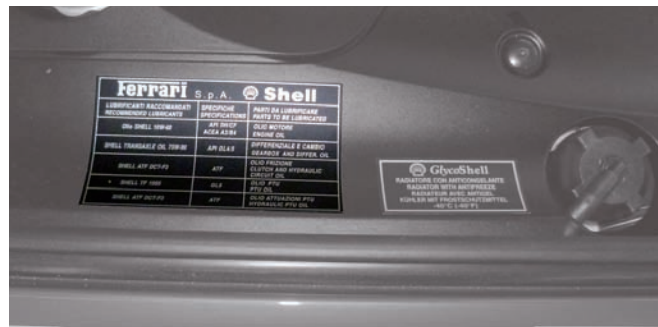

D ECE homologation

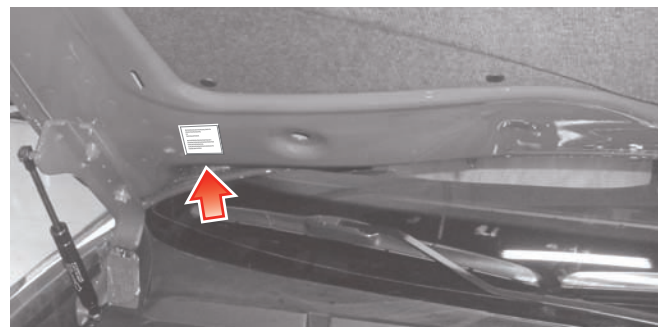



E Check of the engine oil level



G Installation of rearward facing child seats not allowed



1

F Airbag maintenance



H Passenger airbag warning






I Vehicle identification




L Unleaded fuel



M Tyre pressure and type

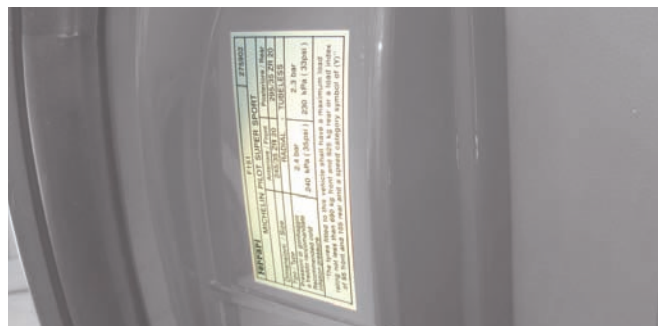

N TPMS present warning

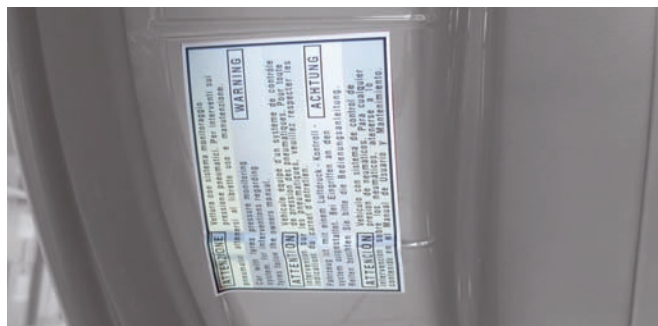




Q Original paintwork

P Chassis number

R Stop&Start system warning (with HELE system only)



S Engine type and number

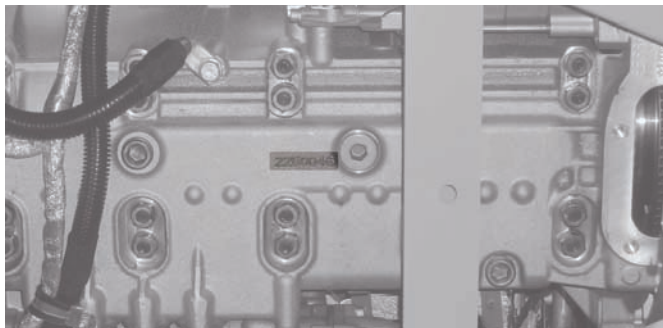


T Assembly number






Dimensions and weights

Wheelbase	2990 mm (117.7 in.)
Max. length	4907 mm (193.2 in.)
Max. width	1953 mm (76.9 in.)
Max. height	1379 mm (54.3 in.)
Front track	1676 mm (66 in.)
Rear track	1660 mm (65.4 in.)
Front overhang	899 mm (35.4 in.)
Rear overhang	1017 mm (40 in.)
Kerb weight	1880 kg (4144.7 lbs)*

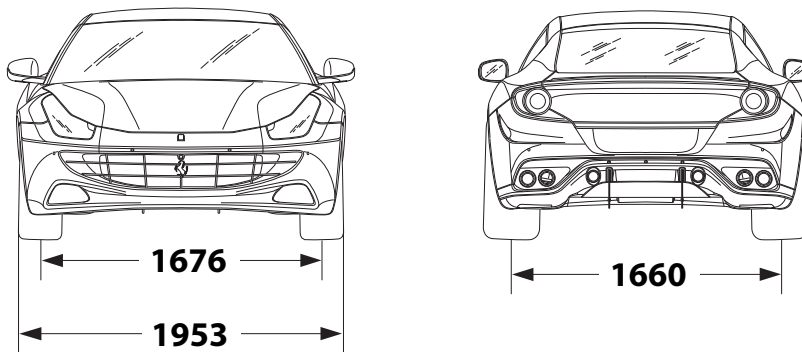

* considering the most favourable
Optional combination

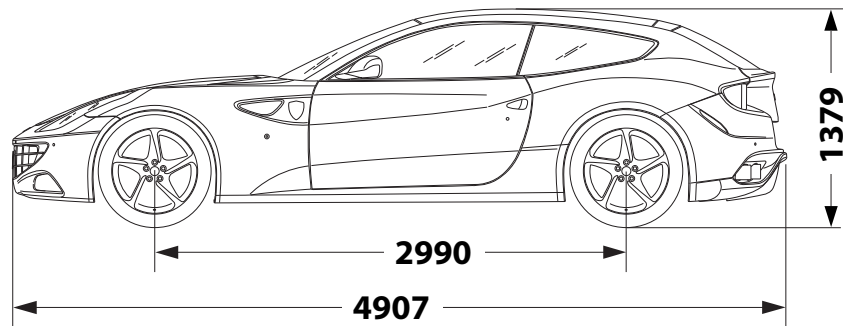



Main engine specifications

Type	F 140 EB
Number of cylinders	12
Cylinder sequence	V 65°
Cylinder bore	94 mm (3.7 in.)
Piston stroke	75,2 mm (3 in.)
Total displacement	6262 cm ³ (382.1 cu. in.)
Compression ratio	12.4:1
Maximum RPM (with limiting device)	8250 RPM
Max. power	486 kW (660 HP)
Corresponding RPM	8000 RPM
Max. torque	682 Nm
Corresponding RPM	6000 RPM

Consumption and CO₂ emissions

	Standard version		With HELE system	
	l/100 km	g/km	l/100 km	g/km
City cycle	25.6	598	23.5	550
Motorway	10.9	254	10.7	250
Combined cycle	16.3	380	15.4	360

Transmission ratios

Gearbox ratios	Differential/bevel gear pair ratio
1 = 3.397	
2 = 2.185	
3 = 1.626	3.875
4 = 1.286	
5 = 1.028	
6 = 0.839	
7 = 0.634	
R = 2.791	

Performance

0 - 100 km/h	0 - 200 km/h	Max. speed
3.7 s	11 s	335 km/h (208.2 mph)

Electrical system

Supply voltage	Alternator
12 V	Nippondenso 165 A SC3
Battery	Starter motor
Fiamm 12V - 95 A/h L5 AGM 850A EN	Nippondenso



Wheel rims and tyres

Wheel rims

Front	Rear	Spare wheel
8.5" J x 20"	10.5" J x 20"	4.5" J x 20"

FERRARI-approved tyres

	<i>Inflation pressure (cold)</i>			
	Front	Rear	Front	Rear
Michelin Pilot Super Sport	245/35 ZR20	295/35 ZR20	2.40 bar (34.81 psi)	2.30 bar (33.36 psi)
Pirelli Pzero	245/35 ZR20	295/35 ZR20	2.10 bar (30.46 psi)	2.00 bar (29 psi)

Optional tyres

	<i>Inflation pressure (cold)</i>			
	Front	Rear	Front	Rear
Vredestein spare wheel	145/60 R20		4.20 bar (60.92 psi)	

Winter tyres

	<i>Inflation pressure (cold)</i>			
	Front	Rear	Front	Rear
Pirelli Winter Sottozero	235/35 WR20	285/35 WR20	2.10 bar (30.46 psi)	2.00 bar (29 psi)

Warning



For speeds of over 280 km/h (174 mph), inflate the Michelin Super Sport tyres to a pressure of 2.7 bar (front) and 2.5 bar (rear)



Correct tyre reading

Example: 245/35 ZR20

245 = Nominal width (distance in mm from side to side)

35 = Height/width ratio as a percentage

Z = Tyre to be used for speeds of over 240 km/h (149 mph)

R = Radial tyre

20 = Rim diameter in inches

W = Tyre to be used for a maximum speed of 270 km/h (168 mph)

The tyre manufacture date is included in the description of the tyre:

DOT ... 1011 means that the tyre was manufactured in the 10th week of 2011.

Correct rim reading

Example: 8.5" J x 20"

8.5 = Rim width in inches

J = Shape of rim flange

(side projection where tyre bead rests)

20 = Rim diameter in inches

(corresponds to the diameter of tyre to be fitted)

For further information on tyres, see page 269.



Run Flat tyres (optional)

The vehicle can be fitted with “Run flat” tyres, if required. This type of tyre has a reinforced side **A** which allows the vehicle to continue travelling at moderate speed (80 km/h - 50 mph), even after a puncture, for a specific distance (100 km - 62 mi).


When the instrument panel receives the “tyre puncture” information from the tyre pressure monitoring ECU, calculates the residual tyre life, and displays a warning in the dedicated area of the left TFT display after 50 km (31 mi).

After 100 km (62 mi), a message warning the driver to stop the vehicle will be displayed (for further information, see the “Tyre pressure and temperature monitoring system” paragraph on page 84).

Warning



Observing the recommended wheel alignment values is essential in order to obtain the best performance and the longest life of these tyres.

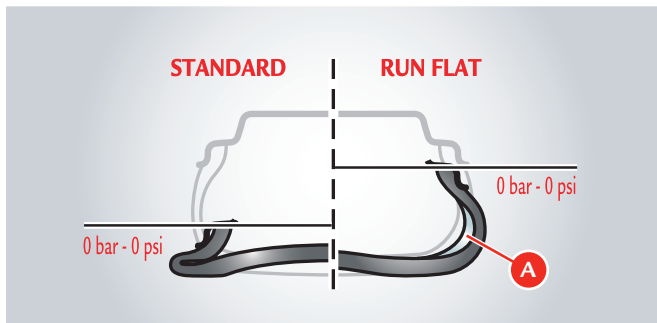

Warning



If you are going to use standard tyres on a vehicle that was originally equipped with “Run Flat” tyres, you must contact the FERRARI SERVICE NETWORK to have the dashboard reprogrammed and prevent warning messages from being displayed on the left TFT display.

Environment



Maintaining correct tyre pressure helps to improve tyre rolling and reduce fuel consumption.

1



Refilling

<i>Parts to be refilled</i>		<i>Quantity</i>	<i>Fill with:</i>	<i>Ref. Page</i>
Engine	Total system capacity	13 l	 SHELL HELIX ULTRA Racing SAE 10W-60	264
	Oil level between Min. and Max.	1.5 l		
	Oil consumption	1.0 - 2.0		
		l/1,000 km		
Gearbox and differential		3.5 l	 SHELL TRANSAXLE 75W-90 GL5 SHELL SPIRAX S5 ATE 75W-90	265
Clutch system and hydraulic controls		7.75 l	 SHELL DCT-F3	
Braking system		1.2 l	 SHELL DONAX UB BRAKE FLUID DOT4 <i>Ultra</i>	267
Cooling circuit		16.9 l	 GLYCOSHELL LONGLIFE at 50%	266
Hydraulic power steering system		1.6 l	PENTOSIN CHF 11S	266
PTU		3.2 l	 SHELL TF 1055	
Fuel tank		91 l	Unleaded fuel 95 RON	101
Reserve		13 l		
Air conditioning and heating system				
Compressor		165 cc	PAG ISO 46	
Coolant		560 ± 30 g	DELPHI RL 488 “R 134 A”	
Windscreen washer/headlight washer fluid tank		6 l	Mixture of water and glass cleaner	268

Some products are indicated with two names (before/after) because of a change in Shell fluid brand names.



Important note



This vehicle is suitable for use with unleaded fuel with a maximum of 10% ethanol (E10).

1

Warning



The use of fuels with 10% to 25% ethanol can lead to malfunctioning.

The use of fuels with over 25% ethanol can cause permanent damage to the engine fuel system.

Opening doors	36
Controls overview	37
Seat adjustment	39
Steering wheel adjustment	40
Rear-view mirrors	41
Seat belts	42
Ignition switch.....	43
External lights and turn indicators	44
Starting and driving the vehicle.....	46



2



QUICK REFERENCE GUIDE



Opening

Doors


When a door is opened or closed, the window automatically moves down by approximately 2 centimetres/0.8 inches (to its “target position”) to avoid colliding with the upper weather strip.

When the door is closed, the window automatically moves up until it reaches the “upper limit”.

Opening from the outside

Using the remote control, deactivate the alarm and the central door locking system, or turn the key in the lock to deactivate the central door locking system.

To open the door, pull handle **A**: the window will move down to its “target position”. When the door is closed, the window will move up until it meets the upper limit.

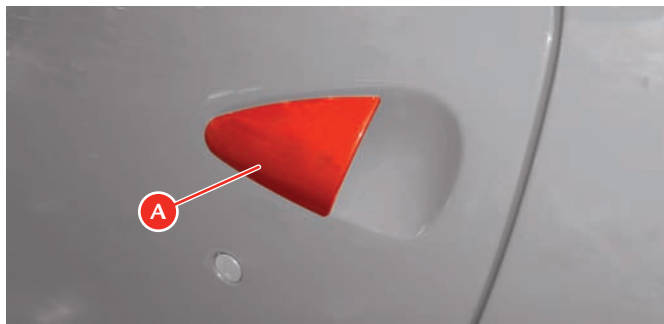

Locking and opening the doors from the inside

Warning




Always check that the doors have been closed properly to prevent them from opening while driving.

Both doors can be locked by activating/deactivating the “LOCK/UNLOCK” **B** button on the roof panel. To lock the doors, press button **B**; when the door lock is activated, the light on button **B** comes on. To deactivate the door lock, press button **B** until the light goes out.

If you pull handle **C** to open the door, the window will move down to its target position. When the door is closed, it will move up until it meets its upper limit.

When the opening handle is operated, both doors are unlocked.

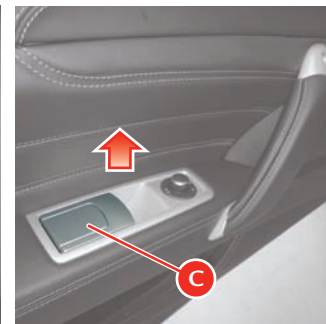



Controls overview





2

Ref.	Control	Page	Ref.	Control	Page
1	Adjustable air vents	213	4	Dual View Camera button (optional)	136
2	Glove compartment	218	5	Light switch	164
3	Glove compartment opening button	218	6	Left TFT display and Cruise Control commands	106



Ref.	Control	Page
7	Left TFT display	106
8	Rev counter and gearbox display	131-132
9	Right TFT display	134
10	Turn indicators	166
11	Windscreen washer/wiper lever	159
12	“Manettino” control	156-184
13	“ENGINE START” button	156
14	Suspension damping delink button	158-188
15	High beam and flashing lever	164

Ref.	Control	Page
16	Air conditioning controls	210
17	“LAUNCH” control	193
18	“R” reverse control	173
19	“AUTO” control	176
20	Hazard warning lights control	167
21	Power window controls	102

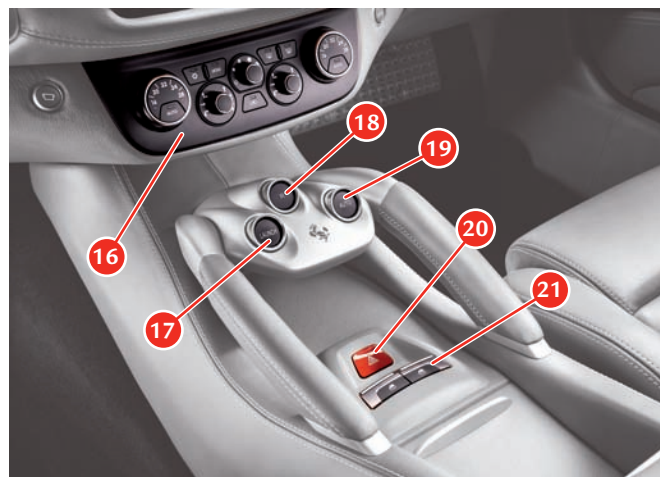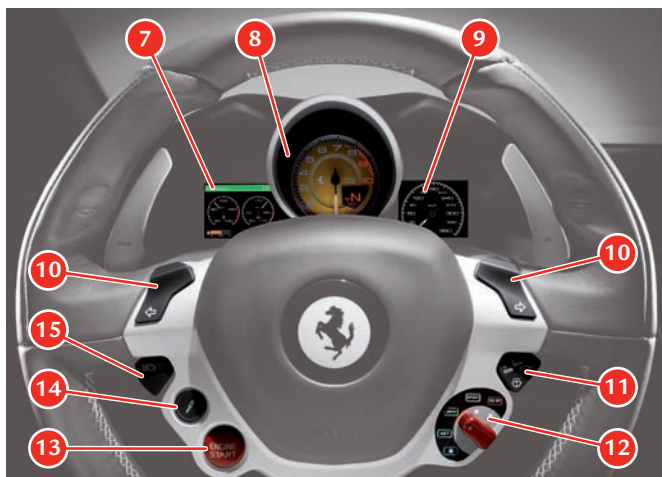



Adjustments

Seats

Warning



As with all adjustment, seat adjustment must be performed when the vehicle is stationary.

Warning



Never place your hands under the seat or near its moving parts when adjusting. If you do so, movement of the seat may cause injury to hands or fingers.

Correct adjustment is very important for enhanced driving comfort and maximum efficiency of the passive safety systems.

The seat position can be electrically adjusted using the special controls.

Three adjustments are possible using control **D**: forward/backward, height, seat inclination (tilting).

For further information, see page 204.

Warning




Forward/backward adjustment must take into account the fact that airbag devices are placed in front of the driver and the passenger.

Correct adjustment ensures there is adequate space between the airbag and the driver/passenger (see page 71).

Seat back rake adjustment

Use control **E** to adjust the seat back rake. Push the control forward or backward to adjust the seat back rake.

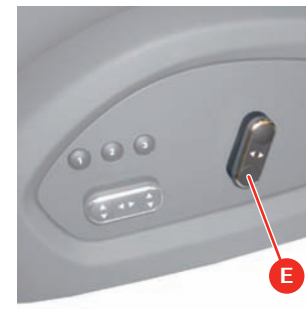

2



Tilting the backrest


To tilt the seat, pull lever **L** up and push the backrest towards the front of the vehicle.

When the backrest goes back into position, it will automatically block once it has reached the correct position.

For further information on seat adjustment, refer to pages 204-207.

Full Electric seat (optional)

For further information on adjustment of the optional Full Electric seat, refer to pages 204-207.

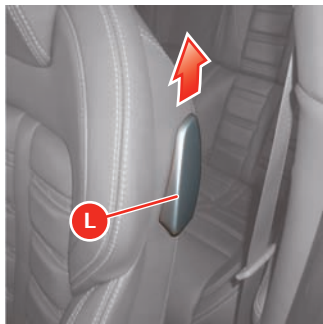

Steering wheel

The steering wheel can be electrically adjusted for rake and reach. It can only be adjusted if the ignition key is in position **II**.


Move control **A** (to the left of the steering column) in the four directions to adjust the steering wheel.

The position of the steering wheel is memorised together with the position of the external rear view mirrors when the driver's seat position is memorised (only if memorisation is available).

Warning



Do not adjust the steering wheel when the vehicle is moving.

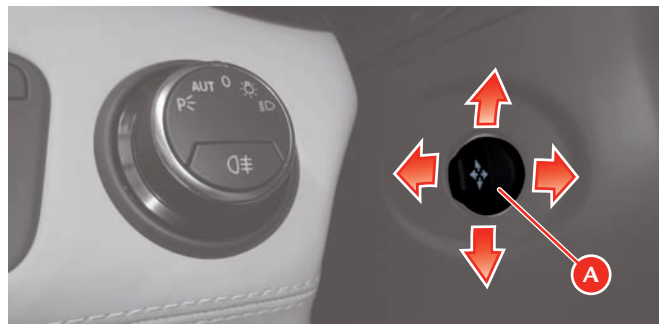

Rear-view mirrors

Internal rear-view mirror

Hold the internal rear-view mirror and move it to the required position.

On request, the internal rear-view mirror can be fitted with an electrochromic mirror that automatically darkens to reduce the dazzling effect of the reflected light on the driver. The speed with which the mirror darkens depends on the intensity of the light.

By pressing button **B** you can activate/deactivate the electrochromic mode. When the electrochromic mode is activated, the green LED **D** comes on.

External rear-view mirrors

These mirrors can be electrically adjusted using the control **C** (with the ignition key in position II) and are equipped with defogging elements.

- 1) Mirror selection: turn control **C** to the left or right lock position to select the mirror that requires adjusting.



- 2) Mirror positioning: move control **C** in the four directions (up – down – right – left) to adjust the selected mirror.
- 3) Mirror closure (optional): turn control **C** to the lower central lock position to close the rear-view mirrors.

Once adjusted, move the control **C** into the upper central position where it will be locked in order to avoid changing the external mirror setting inadvertently.

The mirrors will yield in both directions in the event of a collision: if necessary, the mirrors can be pushed both backwards and forwards.

Warning



The rear-view mirrors must always be positioned correctly while driving.

Do not adjust the rear-view mirrors when the vehicle is moving.





Seat belts

Warning





The seat belts must be properly adjusted and fastened at all times.

Correct use of the seat belts can reduce the risk of serious injury in the event of an accident or if the vehicle overturns.

Fastening the seat belts

After positioning the seat correctly:

- Grip the latch plate **A**, slowly pull the belt and insert the latch plate into the buckle **B** (if the belt locks while you are pulling it out, let it wind back a little and pull it out again without jerking it).
- Make sure that it has clicked into the locked position: hold the belt and pull it to check that the latch plate has been inserted correctly.
- Position the seat belt correctly.

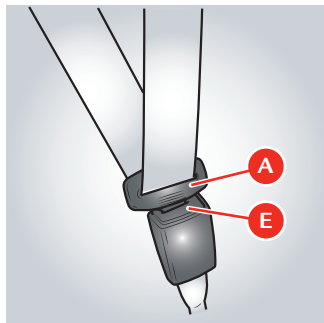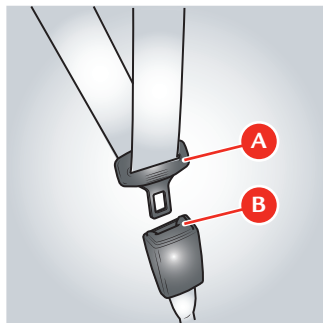

If the driver's seat belt is not fastened, when you turn the ignition key to position **II**, the warning light on the instrument panel illuminates and remains lit as long as the seat belt is not fastened.

Unfastening the seat belts

- Push the release button **E**.
- Guide the latch plate **A** back to its rest position.

Warning



Do not allow children to be held on a passenger's lap using only one seat belt for both of them.

For further information, refer to the "Safety" chapter on page 56.



Ignition switch

The ignition key can be turned to 2 positions:

Position 0 - Stop

Engine off, key removable.

When the key is even only partially extracted, the steering column is locked.

The hazard warning lights and parking lights can be activated.


To facilitate steering wheel release, turn the steering wheel slightly clockwise or counterclockwise while turning the ignition key.

Position II - Start

When the key is turned to this position (key-on) the signals generated by the vehicle systems are checked.

The left and right TFT displays are activated on the instrument panel and when the signals have been checked, the gearbox display comes on (see page 132).

For further information, see page 99.

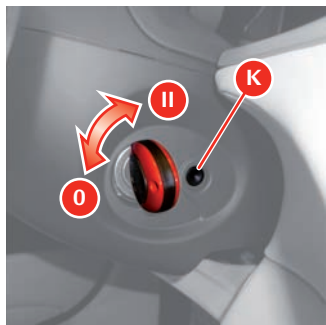

Warning



Never remove the key when the vehicle is moving!

The steering wheel will lock with the first turn of the steering wheel.

Always remember to remove the key from the ignition when you get out of the vehicle!

Never leave children unattended in the vehicle.

Key lock

If more than 20 seconds elapse after turning the key to position 0, the key lock device must be released to remove the key: press button **K** and remove the key at the same time.



External lights and turn indicators

Light switch

The switch **A**, on the dashboard to the left of the steering wheel, can be set to five different positions:

- 0** Lights off
 -  Running and number plate lights on (*)
 -  Low beams on (*)
 -  Parking lights
 - AUT** Automatic operation of the external lights according to ambient light.
- (*) The relative warning light on the instrument panel comes on.



High beams

To turn on the high beams when the light switch **A** is set to , pull back lever **B** on the steering wheel.

When the high beams are on, the relative warning light  on the instrument panel comes on.

Then push lever **B** towards the dashboard or pull it back to turn off the high beams and turn on the low beams.

Important note



Follow the regulations in force in the country you are travelling in when using the high beams.

Flashing the headlights

The headlights can be flashed by pushing the left-hand lever **B** towards the dashboard.





Turn indicators

Quickly press the left indicator or right indicator button **C** on the steering wheel to switch on the relevant turn indicator.

The relative warning light  or  on the instrument panel comes on.

The turn indicator goes off when the steering wheel is realigned.

Holding down one of the two **C** buttons (for more than 0.3 seconds) temporarily switches on the relevant turn indicator: it is switched off after 3 flashes (“lane change” function).



Rear fog lights

The rear fog lights are turned on only if the high beams or low beams are on when button **D** is pressed.

Important note



Use the rear fog lights only in poor visibility conditions.

2


Hazard warning lights

Press button **E** to turn on the hazard warning lights. All the turn indicators will start blinking intermittently; these lights will operate with the ignition key in any position.

When the hazard warning lights are on, the relative warning lights on the instrument panel and the button flash.

To turn them off, press the button again.

For further information, refer to the “Lighting” paragraph on page 164.

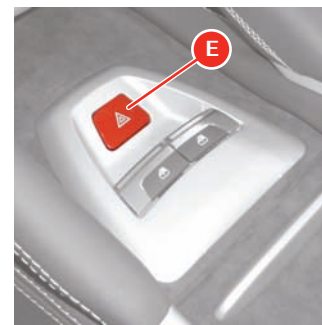



Starting and driving the vehicle

System start-up

After turning the ignition key to position II (key-on), the left and right TFT displays are activated on the instrument panel and system diagnosis is performed. During diagnosis, which lasts 5 seconds, a check is performed on the warning lights on the panel and the presence of any faults is checked.


Once the system check has been completed, the gearbox display is activated and the letter “P” (Parking) or “N” (Neutral) will be displayed.

Important note



BEFORE YOU DRIVE

If the warning light **A** does not turn off after diagnosis, indicating a fault in the gearbox also shown by the symbol and special message on the left TFT display (see page 130), contact the **FERRARI SERVICE NETWORK**.

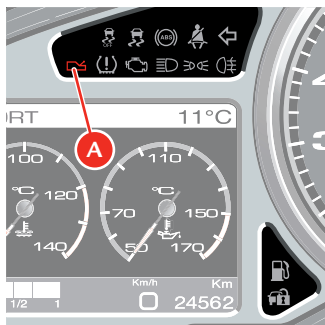

Important note



The vehicle is equipped with an electro-hydraulically controlled gearbox system operated by means of paddles on the steering wheel.

The default setting for the DCT gearbox is always “Automatic” mode (see page 176).

Every time the vehicle is started, the DCT gearbox is in “Auto easy exit” mode (see page 176) unless the vehicle was in “Automatic” mode when the engine was turned off.

To exit the “Auto easy exit” mode operate the **UP** and **DOWN** paddles (while the vehicle is moving) or press the **AUTO** button on the centre console.



Important note



Immediately release the **UP** and **DOWN** paddles or button **R** after the gearbox display shows that the gear has been engaged; a prolonged manoeuvre would cause the gearbox failure warning light to turn on (see page 130) and triggering of the buzzer.

Important note



None of the gears can be engaged if the luggage compartment lid is open or not properly closed. When the vehicle is stationary, with the driver-side door open or not properly closed and the brake pedal released, the system disengages the gear engaged after approximately two seconds.



Starting the engine

Before starting the engine, make sure that the alarm system and all electrical devices with high power absorption are turned off.

- Make sure that the electric parking brake is applied and that the doors are closed.
- Hold the brake pedal down when starting the engine.

Warning



Do not press the accelerator pedal.

- Turn the ignition key to position **II** and wait for the gearbox display to come on.
- Press the **ENGINE START** button (see page 156) and release it as soon as the engine starts.

Do not hold the **ENGINE START** button down for a long time.

If the engine does not start, turn the key back to position **0** and wait for the gear display to go off before retrying.

Warning



Hold the brake pedal down while starting the engine.



If the engine fails to start after several attempts, check for one of the following causes:

- insufficient speed of the starter motor (flat battery)
- ignition device faulty
- electrical contacts faulty
- fuel pump fuses blown.

Warming up the engine

Do not run the engine at high speed until the engine oil temperature has reached at least 65-70 °C (149-158 °F), approximately.

Starting the vehicle

With the engine started, the vehicle stationary and the brake pedal pressed, pull the right-hand **UP** paddle towards the steering wheel to engage **1st** gear.

Release the brake pedal and press the accelerator to start off.

With the engine running and the vehicle stationary, you can change directly from **1st** or **2nd** gear to **R** (reverse) by pressing **R** and from reverse to **1st** by moving the **UP** paddle.



Warning



If the “**UP**” and “**DOWN**” paddles are not working, the message “Depress brake pedal and press **LAUNCH** to engage gear” will appear on the left TFT display; you can therefore engage the gear by pressing the **LAUNCH** button on the centre console (see page 193) and the brake pedal.

In these cases, the “Launch Control” function is not available.

If the engaged gear was **R**, the **LAUNCH** button must be pressed twice to engage **1st** gear.

Important note



When reverse is selected, an acoustic safety signal beeps intermittently as long as “**R**” is engaged.

If the system automatically selects **2nd** gear when attempting to shift from “**R**” to **1st** gear, this indicates that **1st** gear has jammed. Therefore, this is not a malfunction since it is part of the system operating logic. For the same reason, when shifting from **1st** gear to “**R**”, the system will automatically engage “**N**” if the gear has jammed.

During prolonged stops with the engine running, it is advisable to keep the gearshift in “**N**”.

Important note



If you allow the vehicle to move forward in **N**, when **UP** or **DOWN** is requested, a gear will be engaged that corresponds to the speed of the vehicle.



UP-shifting

Use the right-hand **UP** paddle without releasing the accelerator pedal.

An “**UP**”-shift request is not accepted when engagement of the requested gear forces the engine to underrev or if an “**UP**”-shift is already in progress because of engine overrevving.

For further information, see page 174.

DOWN-shifting

Use the left-hand **DOWN** paddle without releasing the accelerator pedal.

A “**DOWN**”-shift request is not accepted if engagement of the requested gear forces the engine beyond a certain RPM, depending on the gear requested, or if a “**DOWN**”-shift is already in progress because of engine underrevving.

For further information, see page 174.

“N” (Neutral) request

With the engine running, pull both **UP** and **DOWN** paddles towards the steering wheel at the same time without pressing the brake pedal to request neutral “**N**”.

If necessary, “**N**” can be requested at any speed. Subsequently, if an “**UP**” or “**DOWN**” shift is requested, the system will engage the gear most suited to the speed of the vehicle.

Stopping the vehicle

When the vehicle stops, the system automatically engages 1st gear unless Neutral has already been requested.

When the vehicle is stationary and the engine is running, hold the brake pedal down until ready to move off again.

Switching off the engine

The engine can be switched off with the gearbox either in “**N**” or with a gear engaged.

After turning the ignition key from position **II** to position **0**, the gearbox display will remain on for a few more seconds to display the engaged gear. If the gearbox is in “**N**” a buzzer will sound. Before switching off, the letter “**P**” is displayed on the gearbox display to inform the driver that the Park Lock has been activated.

Warning



Never leave the vehicle with the gearbox in “**N**”. Always make sure that the letter “**P**” (Parking) appears on the gearbox display.

For further information, see page 175.

Passive safety.....	54
Active safety	55
Seat belts	56
How to fasten seat belts	58
Pretensioners.....	62
Child safety.....	64
Auxiliary Occupant Protection Systems	70
Driver and passenger airbags.....	71
Side airbags.....	76
Fuel inertia switch.....	79
ABS and EBD	80
Stability and Traction Control	81
Electric parking brake	83
TPMS (optional)	84



3



SAFETY



In order to take advantage of the safety systems described below, it is essential to comply with the indicated regulations.

Special recommendations

This vehicle has been built to comply with homologation regulations that also concern safety and environmental protection.

These high technological standards must always be accompanied by careful and cautious driving.

Particular attention must be paid to:

- Overheated components. High temperatures develop in the engine compartment near the exhaust system. Do not park the vehicle on paper, grass, dry leaves or other flammable materials. They could catch fire if they come into contact with hot parts of the exhaust system. Do not fit other heat shields or remove those fitted on the exhaust system. Do not let flammable substances come into contact with the exhaust system.
- Moving parts of the vehicle such as belts, fans, etc. They must always be adequately protected. Do not remove the guards or operate on the moving parts without taking due precautions.
- Installations under pressure such as braking system, air conditioning system, cooling system and lubrication system may create pressures inside them. Do not perform any operation which may cause gas or liquids to spill out with the risk of injury to persons and damage to things.

Emissions

Warning



- The exhaust gas generated by the running engine may be hazardous, especially when in closed spaces. As well as consuming oxygen, the engine discharges carbon dioxide, carbon oxide and other toxic gases.
- Fuel is highly inflammable and emits vapours which may be noxious if inhaled.
Do not use naked flames or create sparks near the open fuel tank or in any other condition where fuel comes into contact with air.

Lubricants

Warning



- The oils used may also be flammable: take the same precautions as those adopted for fuel.

Flammable fluids

Warning



- The fluid in the battery is poisonous and corrosive. Do not let it spill out and come into contact with the skin, eyes or objects.
Do not use naked flames or create sparks near the battery.

Fuel inertia switch

- See page 79.



Warning



Seat belts must be worn at all times and must be properly fastened and adjusted!

Correct use of the seat belts can significantly reduce the risk and severity of injury if an accident occurs or if the vehicle overturns.

Warning



For an effective restraining action, the seat belt must be fastened correctly with the seat backrest in the upright position.

Make sure that the belt is not twisted and that it passes closely over your body; if not, in the event of a head-on collision, it may move and cause injury to the abdomen.

Avoid wearing bulky clothing that may interfere with the proper operation of the seat belts.

Warning



Each seat belt has been designed to protect only one occupant. If more than one person uses the same seat belt, the risk of injury in the event of an accident is increased.

Do not sit babies, small children or other persons on your lap.

Never allow children to travel sitting on an adult's lap even if they are wearing a seat belt. If there is a collision:

- the adult's weight may crush the child against the seat belt, the dashboard or the back of the front seat;
- the weight of the child may cause the adult to lose their grip; this may lead to serious or even fatal injury to the child.

3



Passive safety

The passive safety system has been designed to reduce the risk and severity of injury if an accident occurs.

The vehicle is equipped with the following seat belts:

- 3-point driver's seat belt with pretensioner and load limiting device (see page 56)
- 3-point front passenger seat belt with pretensioner and load limiting device (see page 56)
- 3-point seat belt for seat behind front passenger with load limiting device (see page 61)
- 3-point seat belt for seat behind driver with load limiting device (see page 61).

Warning



Auxiliary safety systems are not a substitute for seat belts. All occupants must always wear a seat belt. Correct use of the seat belts combined with use of the auxiliary safety systems provides optimal protection to the occupants in various types of collisions.

The vehicle also has the following auxiliary protection systems (also see page 70 "Auxiliary Occupant Protection Systems"):

- front driver's airbag (for operating functions, see page 72)
- front passenger airbag (for operating functions, see page 72)
- driver's head protection side airbag (head bag) (for operating functions, see page 76)

- front passenger head protection side airbag (head bag) (for operating functions, see page 76)
- seats (see page 204)
- deformable body
- occupant protection system ECU
- ECU auxiliary sensors
- instrument panel warning light (see page 71)
- inertia switch
- two child seat lower anchor points in the seat behind the front passenger
- two child seat lower anchor points in the seat behind the driver
- one child seat upper anchor point in the seat behind the front passenger
- one child seat upper anchor point in the seat behind the driver.

Warning



The protective action of the airbags is always integrated with the seat belts and the pretensioners. The compulsory use of the seat belt is provided by the national regulations (in Italy, for example, by the Codice della Strada, i.e. Traffic Regulations).



Deformable body

The deformable body absorbs shock and distributes it over the entire structure of the vehicle allowing progressive deceleration.

The passenger compartment structure, on the other hand, has been designed to provide maximum resistance without undergoing deformation in order to guarantee a protective survival cell for the occupants.

Active safety

The aim of the active safety system is to reduce the risk of accidents and injury severity.

The vehicle has been designed to provide a high level of safety for whoever uses it. The following systems are specific active safety components:

- braking system
- air conditioning and heating system
- external lights
- buzzer and warning lights (flashing).

The braking system includes the mechanical brake system and the electronic stability and traction control system (ABS and EBD): this is designed to prevent the wheels from locking and to provide good handling and stability.

In some situations, fast acceleration is important to get out of dangerous situations. However, always use the accelerator with extreme caution. During acceleration of the driving wheels, the anti-skid system may help you in certain dangerous situations.

The air conditioning and heating system in the passenger compartment can add to driving comfort and keep you alert so that you can react quickly when necessary.

It is very important to be able to see the road clearly and be seen and external lights must be turned on when the conditions so require.



Seat belts

If used correctly, seat belts integrated with pretensions help to reduce the risk of injury to occupants in various types of accident.

If not unfastened, the seat belts do not provide any type of protection. Before every trip, always make sure that all occupants are wearing their seat belts.

Warning



Seat belts must be worn at all times and must be properly fastened and adjusted!

Correct use of the seat belts can reduce the risk of serious injury in the event of an accident or if the vehicle overturns.

Warning





For an effective restraining action, the seat belt must be fastened correctly with the seat backrest in the upright position.

The upper part of the diagonal section of the seat belt must lie snug on the front of the shoulder, pass across the chest and down to the abdomen. The horizontal strap must sit snug on the hips as low as possible under the abdomen.

Make sure that the belt is not twisted and that it passes closely over your body; if not, in the event of a head-on collision, it may move and cause injury to the abdomen.

Avoid wearing bulky clothing that may interfere with the proper operation of the seat belts.

The seat belts for the front seats have a lap-shoulder belt with an automatic emergency inertia locking retractor and are fitted with a pyrotechnic-powered pretensioner and an automatic system that reduces the force applied to the occupant.

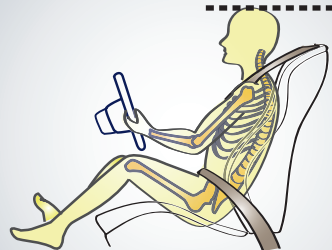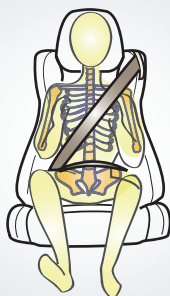



The seat belts for the rear seats have a lap-shoulder belt with an automatic emergency inertia locking retractor and are fitted with an automatic system that reduces the force applied to the occupant.

Warning



Do not let the seat belts come into contact with cutting edges. They may get damaged and may consequently break in the event of a collision.

Warning



Each seat belt has been designed to protect only one occupant. If more than one person uses the same seat belt, the risk of injury in the event of an accident is increased.

The seat belt must never be passed around a baby, child or other person sitting on a passenger's lap.

Do not sit babies, small children or other persons on your lap.

Never allow children to travel sitting on an adult's lap even if they are wearing a seat belt. If there is a collision:

- the adult's weight may crush the child against the seat belt, the dashboard or the back of the front seat;
- the weight of the child may cause the adult to lose their grip; this may lead to serious or even fatal injury to the child.

Warning



Do not attach or pin anything onto the seat belts: they may get damaged and may consequently break in the event of a collision.

Warning



If a seat belt has come into contact with cutting edges or was somehow perforated, we recommend that you have it immediately replaced by the FERRARI SERVICE NETWORK.

Warning



Periodically check the condition of the seat belts. If the belt shows signs of wear, it must be checked by a qualified person and replaced if necessary. Contact the FERRARI SERVICE NETWORK immediately.

3



How to fasten seat belts

Warning




For an effective restraining action, the seat belt must be fastened correctly with the seat backrest in the upright position.

The upper part of the diagonal section of the seat belt must lie snug on the front of the shoulder, pass across the chest and down to the abdomen. The horizontal strap must sit snug on the hips as low as possible under the abdomen.

Make sure that the belt is not twisted and that it passes closely over your body; if not, in the event of a head-on collision, it may move and cause injury to the abdomen.

Avoid wearing bulky clothing that may interfere with the proper operation of the seat belts.

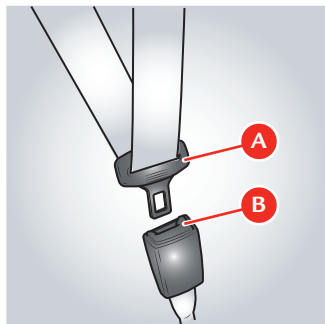

Once you have adjusted the seat correctly (see page 204):


- Grip the latch plate **A**, slowly pull the belt and insert the latch plate into the buckle **B** (if the belt locks while you are pulling it out, let it wind back a little and pull it out again without jerking it).
- Make sure that it has clicked into the locked position: hold the belt and pull it to check that the latch plate has been inserted correctly.
- Position the seat belt correctly.

If the driver's seat belt is not fastened, when you turn the ignition key to position **II**, the warning light **D** on the instrument panel lights up and remains lit until the seat belt is fastened.

55 seconds after a speed of 10 km/h (6 mph) is exceeded, a buzzer sounds warning the driver that the seat belt is not fastened.

When a speed of 20 km/h (12 mph) is exceeded, the buzzer activates immediately and stops after 90 seconds.

This acoustic signal is emitted only once, even if the vehicle speed goes above and below the above mentioned limits. It is repeated (when the vehicle speed is in the indicated ranges) only if the seat belt is fastened and unfastened again or, in any case, every time the engine is turned off and then on.

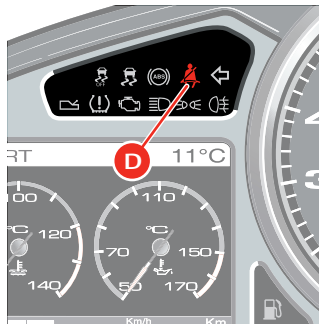



Warning




Each seat belt has been designed to protect only one occupant. If more than one person uses the same seat belt, the risk of injury in the event of an accident is increased.

The seat belt must never be passed around a baby, child or other person sitting on a passenger's lap.

Do not sit babies, small children or other persons on your lap.

Never allow children to travel sitting on an adult's lap even if they are wearing a seat belt. If there is a collision:

- the adult's weight may crush the child against the seat belt, the dashboard or the back of the front seat;
- the weight of the child may cause the adult to lose their grip; this may lead to serious or even fatal injury to the child.

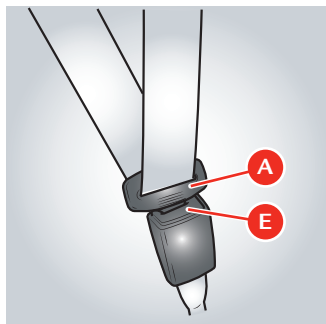

Unfastening the seat belts

- Push the release button **E**.
- Guide the latch plate **A** back to its rest position.

Pregnant women

The best protection for pregnant women and their unborn babies is to wear 3-point seat belts correctly. This significantly reduces the risk of injury to the baby. Consequently, pregnant women should always wear seat belts unless they have a specific medical exemption.

The upper part of the diagonal section of the seat belt must lie snug on the front of the shoulder, pass between the breasts down to the abdomen.

The horizontal strap must sit snug as low as possible under the abdomen.

3



Seat belt handover

The seat belt handover has been designed to make it easier for front seat occupants to fasten their seat belts. The system consists of two moving arms (one for the driver and one for the front passenger) which extend automatically and move the seat belt closer to the body of the respective occupant in the following situations:

- when the door is closed and the ignition key is in position **II**;
- when the ignition key is moved from position **0** to position **II** (key-on) with the door closed;
- when the engine is started and the door is closed.

The passenger side seat belt handover only extends when it detects an occupant's presence.

The moving arm retracts as soon as the seat belt is fastened; if

the seat belt has not been fastened, it retracts in the following situations:


- when the door is opened;
- when the ignition key is moved from position **II** to position **0** (key-off);
- after waiting for approximately one minute;
- if vehicle speed exceeds 10 km/h (6 mph).

If the system's moving arm meets resistance, it moves approximately 2 cm (0.8 in.) in the opposite direction and remains fixed in this position. To reactivate the seat belt handover, open and close the door or move the ignition key to position **II**.

Warning



Although the system has a protection mechanism, always make sure that the area near the seat belt handover is free of obstacles and that the handover fully retracts.

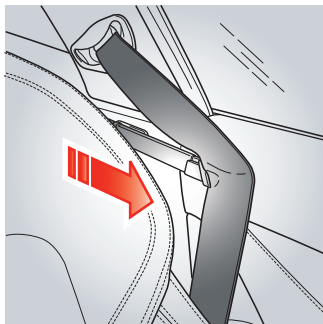



Use of rear seat belts


Warning



Remember that, in the event of a violent impact, passengers in the rear seats who are not wearing seat belts are not only subject to personal injuries (they can be projected forward, hit the windscreen and be thrown out of the vehicle) but also constitute a danger to the passengers in the front seats.

The rear seat belts must be fastened as shown in the diagram.

3

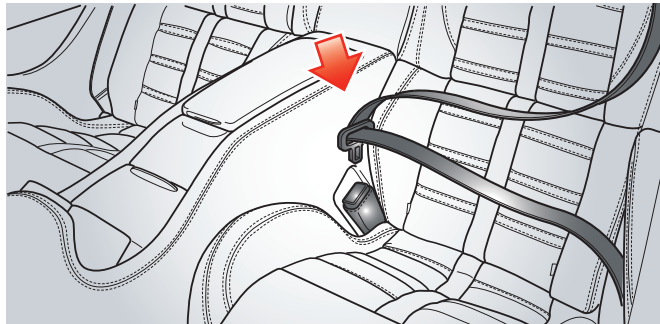



Pretensioners


The seat belts for the front seats are fitted with pyrotechnic-powered pretensioners. The pretensioner is activated by the airbag ECU when there is a sufficiently severe head-on collision (impact direction between 11 and 1 o'clock p.m.) or a sufficiently severe side collision. The belt will rewind a few centimetres just before the restraining action begins, thereby improving the fitting across the occupant's body.

Activation of a pretensioner is signalled by the illumination of the warning light **A** on the instrument panel.

Warning



Pretensioners that have been activated will no longer function and may not be repaired under any circumstances. Contact the **FERRARI SERVICE NETWORK** for replacement.

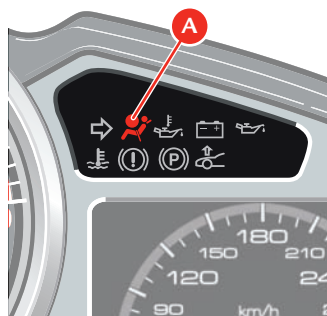

When a pretensioner is activated, a small amount of smoke is released. This smoke is not harmful.

Warning



Activation of the pretensioners only depends on the status of the seat belts and is not affected by the occupants' presence.

If the seat belt is not fastened, the pretensioner will not activate, even if the seat is occupied.

The seat belts for the front and rear seats are fitted with load limiting devices. The load limiting device is located in the belt retractor and allows controlled release of the belt during a collision thereby limiting the impact that the belt has on the occupant's body.



Seat belt and pretensioner care

- Following a serious collision, replace the seat belts that were worn at the time even if they do not appear to be damaged.
- Periodically check that the screws on the anchor points are tight and that the seat belt is in perfect condition and slides smoothly.
- The seat belt must be kept clean; the presence of any dirt could prevent the seat belt retractor from working properly.
- To clean the seat belt, wash it by hand with mild soap and water and let it dry. Do not use strong detergents, bleach or aggressive solvents, as they can weaken the fibres.

Make sure the retractors do not get wet: proper functioning is only ensured if they are kept dry.

- The pretensioner requires no maintenance or lubrication.

If immersed in water or mud, it must be replaced.

- Pretensioners must be replaced at regular intervals as indicated in the “Warranty Booklet”.

Important note



All work on any part of this safety system must be performed by the FERRARI SERVICE NETWORK.

Warning



Removing or making modifications of any kind to the seat belts, belt retractors and pretensioners is not allowed.

Maintenance work involving strong impacts, vibrations or heating of the pretensioner area may activate them; vibrations caused by road bumps will not have this effect.

3



Child safety

Warning



Never leave children **ALONE** and/or unattended in the vehicle since this may constitute a danger to themselves and others.

In a number of countries, the transportation in vehicles of children and infants is governed by specific legislation.

Drivers are obliged to comply with applicable regulations.

Warning



If we use a risk assessment matrix that combines the likelihood of an event occurring and its consequences, we can see that a child in a child seat installed on the front seat presents a serious risk and the responsibility of the driver is therefore high. All possible precautions should be taken.

Even in latest generation vehicles, statistics show that the rear seats are the safest position for transporting babies and children.

Warning



Drive slowly and pay maximum care and attention when transporting children. Sudden acceleration caused by sports-style driving may be dangerous for children even if no collision occurs.

Warning



Do not transport young children in rearward facing child restraint systems on the front passenger seat.

Because of their size, children are at greater risk than adults. Suitable child restraint or safety systems must therefore be used and seat belts should only be used to secure the child seats.

All minors whose physical characteristics (i.e. height, weight) fall within the legal limits in force in each country must be protected by approved restraint or safety systems (e.g. child seats, cradles, cushions).

You are therefore advised to **ALWAYS** use homologated child restraint systems that bear the proper test marking. Child seats homologated according to the ECE-R 44 standard bear this alphanumeric code (a letter “E” in a circle with the approval number underneath) followed by the name of the group (e.g. Group 2).

Warning



Incorrect fastening of a child restraint system increases the risk of injury to the child if an accident occurs.

The seat belts on the vehicle have been designed and tested to protect persons who are over 1.50 m tall.



To properly protect children outside these limits, specific restraint systems with dedicated belts or accessories capable of adapting the child's position to the vehicle seat belts must be fitted.

Warning



For installation and use (how to secure the child to the restraint system) of child restraint systems, follow the instructions that the manufacturer of the devices is obliged to provide.

Warning



Carefully follow the instructions provided with the child seat: keep them in the vehicle together with the documents and this manual. Do not use second-hand child seats with no instructions.

Warning



Follow the instructions given by the child restraint system manufacturer when choosing, installing, positioning (forward facing/rearward facing) and using the restraint system since failure to do so may compromise its protective action.

Warning



Always check the seat belts have been securely fastened by pulling on the seat belt.

Warning



After an accident, have all the parts of the child restraint system and vehicle seat belt system checked and replace them if necessary.

Any work must be performed at the **FERRARI SERVICE NETWORK**.

Children must always be transported in restraint systems that are suitable for their size.

Before choosing a child restraint system, always check that:

- it is homologated. The homologation standard is the ECE-R 44 (a letter "E" in a circle with the approval number underneath) followed by the name of the group (e.g. Group 2)
- it is suitable for the height and weight of the child to be transported (CAREFULLY FOLLOW the instructions in the child restraint system use and maintenance manual)
- it can be securely installed in the vehicle in compliance with the child restraint system manufacturer's instructions
- the use and installation instructions are easy to understand.

Warning



If violent braking or a collision occurs, children who are not in a restraint system may be thrown against the dashboard or the windscreen: this may lead to serious or even fatal injury to the child.

3



Warning



Never allow children to travel sitting in the lap of an adult. If there is a collision, the adult's weight may crush the child against the seat belt, the dashboard or the back of the front seat: this may lead to serious or even fatal injury to the child.

Important note



NO modifications must be made to the seat belts and child restraint systems: any modifications may seriously jeopardise the safety of the child restraint system.

Front passenger seat

The front passenger seat does not have ISOFIX hooks for child restraint systems.

Use the seat belts to secure the child restraint system to the vehicle seat and make sure you have activated the automatic belt winding locking system before installing the child seat in the vehicle.

To activate the automatic belt winding locking system, pull the seat belt until the belt completely unwinds. At this point, the belt retractor will only allow the seat belt to rewind.

The fact that the belt cannot be pulled out confirms that the belt locking system has been activated.

To deactivate the locking system, unfasten the seat belt in order to allow it to rewind completely.

Warning



If the seat belt is used to fasten a normal occupant, the automatic belt winding locking system will have to be deactivated.

Warning



ALWAYS COMPLY with the legal requirements in force in your own country: restrictions apply to the use of seat belts with regard to both age (under 12 years of age) and height (under 1.50 m).

Important note



For child restraint systems that can be installed on the front passenger seat with 3-point seat belts, see **TAB 1.** on page 90.



Rear seats

Statistics show that the rear seats are the safest position for transporting babies and children.

Warning



Before installing a child restraint system on the rear seats, the corresponding front seat must first be positioned as far forward as possible with the backrest as upright as possible.

Warning



If violent braking or a collision occurs, children who are not travelling in a restraint system can be thrown against the dashboard, windscreen or front seats: this may lead to serious or even fatal injury to the child.

Warning



Never allow children to travel sitting in the lap of an adult. If there is a collision, the adult's weight may crush the child against the seat belt, the dashboard or the back of the front seat: this may lead to serious or even fatal injury to the child.

Warning



If you carry a child in a child restraint system placed on one of the two rear seats, do not lower the backrest of the other rear seat or the central partition between the luggage compartment and the passenger compartment.

Warning



Do not lower the backrest of the rear seat where the child restraint system is installed.

To carry a child on the rear seats, use the seat belts to secure the child restraint system to the vehicle seat and make sure you have activated the automatic belt winding locking system before installing the child seat in the vehicle.

To activate the automatic belt winding locking system, pull the seat belt until the belt completely unwinds. At this point, the belt retractor will only allow the seat belt to rewind.

The fact that the belt cannot be pulled out confirms that the belt locking system has been activated.

To deactivate the locking system, unfasten the seat belt in order to allow it to rewind completely.

Warning



If the seat belt is used to fasten a normal occupant, the automatic belt winding locking system will have to be deactivated.

3



Both the rear seats of the vehicle have a universal ISOFIX fastening system consisting of two lower anchor points and a top tether anchor.

The lower anchor points **A** are located between the rear seat cushion and the backrest. The lower anchor points are marked with a special symbol to make them easier to identify.

The upper anchor point **B** is located behind the seat backrest.

Warning




Only use anchor point **B** located behind the rear seat backrest to fasten child restraint systems with a universal ISOFIX fastening system. Do not, under any circumstances, use the eyebolts for securing luggage in the luggage compartment.

Important note



For child restraint systems that can be installed on the rear seats with 3-point seat belts and with ISOFIX systems, see **TAB 1.** and **TAB 2.** on pages 90-91.

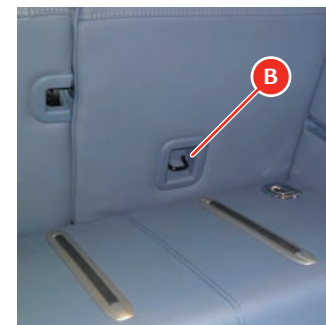



Warning



To secure child restraint systems with universal ISOFIX fastening correctly, thread the top tether anchor strap around the headrest on the inside so that it fits snugly to the backrest (Figure 1).

If the child restraint system has a double top tether anchor strap, thread the belt through both sides of the headrest as shown in Figure 2.

Warning



To secure child restraint systems with universal ISOFIX fastening correctly, always check that the belt or top tether anchor straps do not come into contact with sharp edges and are not twisted.

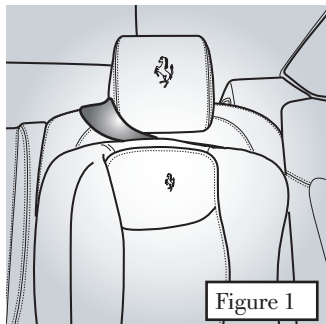


Figure 1

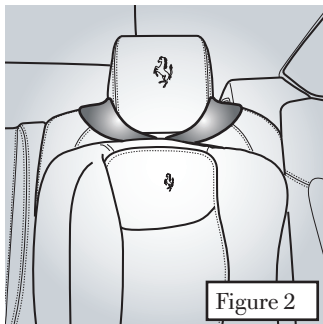


Figure 2

Warning



If a parcel shelf is fitted in the vehicle, to secure child restraint systems with universal ISOFIX fastening correctly, thread the top tether anchor strap through the space between the backrest and the parcel shelf as shown in Figure 3.

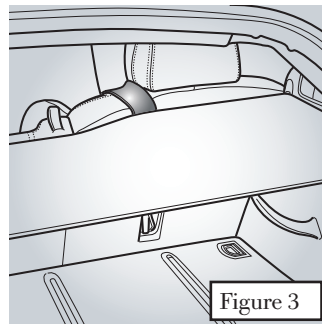


Figure 3

3



Auxiliary Occupant Protection Systems

Warning



Auxiliary Occupant Protection Systems are not a substitute for seat belts but increase their efficiency. Correct use of the seat belts, with the supplementary action of the Auxiliary Occupant Protection Systems, offers maximum protection in the event of a head-on collision or vehicle roll-over.

Auxiliary Occupant Protection System components

The Auxiliary Occupant Protection System components are:

- Seat with built-in headrest.
- Dual-stage front driver's airbag.
- Dual-stage front passenger airbag.
- Driver's head protection side airbag (head bag).
- Front passenger head protection side airbag (head bag).
- Electronic Control Unit (ECU).
- Additional sensors.
- Instrument panel warning light.
- Deformable body.

The front driver's airbag and front passenger airbag have been designed to increase the level of protection offered by the seat belts in the event of a head-on collision.

The driver's head protection side airbag and passenger head protection side airbag have been designed to increase the level of protection offered by the seat belts in the event of a side collision and are placed between the occupant's head and external structures.

Warning



The warning light **A** comes on when the ignition key is turned to position **II**. If no malfunctions are detected, it goes out after 4 seconds. If the warning light does not come on, if it remains on or if it comes on while driving, contact the **FERRARI SERVICE NETWORK** immediately.

Warning



Any changes to the vehicle set-up (suspension, rigidity, springs, supports, shock absorber adjustment), wheel rims, tyres, or the fitting of non-original front bumpers may affect the airbag activation parameters and cause the airbags to malfunction or not work at all.



Driver and passenger airbags

Warning




The front airbags do not provide protection in the event of side-on collisions, some head-on/angular collisions, roll-overs or subsequent collisions (if there is a second collision once the airbags have been deployed in an earlier collision). The seat belts have been designed to reduce the risk of injury in the event of a roll-over or subsequent collision.

Warning



The front airbags have been designed not to inflate if a minor collision occurs. The seat belts have been designed to reduce the risk of injury if a minor collision occurs.

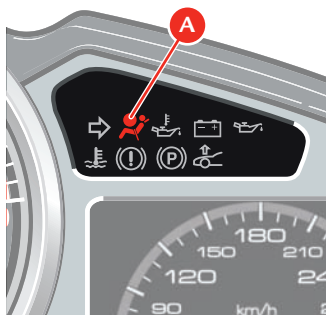

Warning



The driver and the front passenger must maintain a distance of at least 25 cm (10 in.) from the steering wheel and the dashboard.

Always drive with your hands on the rim of the steering wheel so that in the event of activation, the airbag can deploy without obstruction.


Driving with your hands on the steering wheel spokes or on the airbag cover increases the risk of injury for your wrists and arms.

3

Warning



The front passenger must be seated correctly and must avoid putting hands, feet or legs on the dashboard since if the front airbag is activated, it may cause injury to legs and prevent the airbag from working properly.

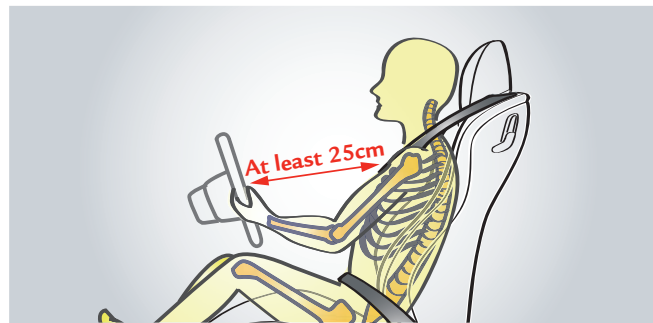



Operating

The front airbags are controlled by an ECU which activates them when there is a sufficiently severe head-on collision (direction of impact between 11 and 1 o'clock p.m.).

In the event of a collision with an impact force that causes deceleration that exceeds the value set for the internal sensor, the ECU will transmit a signal to deploy the airbags. The airbags will begin to inflate, breaking the cover along the breakage line and will deploy completely in a few tenths of milliseconds. Once deployed, they will serve as protection between the driver and/or front passenger and structures that could cause injury.

The airbags deflate immediately afterwards.

Warning



The vehicle does not have a passenger airbag deactivation device.

Warning



The driver and front passenger should not carry objects (drink cans or bottles, pipes, etc.) that may cause injury if the airbags are activated.

Persons, animals or items must not be placed between the airbags and the occupant.

Environment



When the system is activated, gases are released in the form of fumes, together with the gas used for inflating the airbags. These gases are not harmful.

The driver's airbag has been designed to be deployed according to the following strategy:

- For low severity crashes, the airbag control unit will not deploy the airbag.
- For crashes of higher severity, the control unit will deploy the driver airbag in low energy mode.
- For crashes of even higher severity, the control unit will deploy the driver airbag in high energy mode.

The passenger airbag has been designed to be deployed according to the following strategy:

- For low severity crashes, the airbag control unit will not deploy the airbag.
- For crashes of higher severity, the control unit will deploy the passenger airbag in low energy mode.
- For crashes of even higher severity, the control unit will deploy the passenger airbag in high energy mode.

Warning



Even in vehicles with Advanced Airbag Systems, statistics show that the rear seats are the safest position for transporting babies and children.

Children must always be transported on the rear seats. NEVER use rearward-facing child seats on the front seats.

Warning



The driver and front passenger must always fasten their seat belts and sit in an upright position, as far as possible away from the airbag, in order to have optimal protection in all types of collision.



Warning



Always keep the backrest of your seat in the upright position and sit with your back properly resting against it.

Important note



Do not modify the system components or wiring, under any circumstances.

With the ignition key inserted and in position **II**, although the engine is off, the airbags can still be activated when the vehicle is stationary if it is hit by a moving vehicle.

Remember that if the ignition key is set to **0** none of the safety devices (airbags or pretensioners) is activated in the event of a collision; failure of the airbags to inflate in these circumstances is not indicative of a system malfunction.



Important note



Do not cut or tamper with the connectors of the airbag harness or on the airbag modules.

Warning



Do not cover the steering wheel and the padded panel on the dashboard on the passenger's side with adhesive tape or treat it in any way.

Warning



Do not place objects above or near the top of the dashboard and the steering wheel.

In the event that the airbags are deployed, these objects would be projected into the passenger compartment at such a high speed that this would seriously jeopardise the safety of the occupants.

Warning



The airbag modules are subject to wear and tear and must be replaced at the intervals indicated in the "Warranty Booklet" **EVEN** if the vehicle has **NOT** been involved in a collision.

3



Warning



Do not modify the airbag modules in any way (indicated in the relevant picture). Do not damage the airbag modules (for example pinning something onto them or placing objects against their covers).

If, for any reason, an airbag cover gets damaged, have the airbag module immediately checked by the FERRARI SERVICE NETWORK.

Activation of a damaged module could cause serious or fatal injuries.

Important note



Do not remove or dismantle parts of the steering wheel, dashboard or door panels; if necessary, this procedure should only be performed by a FERRARI SERVICE NETWORK CENTRE.

Important note



All the airbag system components must be replaced after an accident that caused airbag deployment.

Important note



Following an accident not involving airbag deployment, contact the FERRARI SERVICE NETWORK to have the system checked and any system components that may be damaged or malfunctioning replaced.

Important note



The airbag system components have been specially designed only for this specific vehicle model. Do not use them on a different vehicle model, as this may cause serious damage and consequent injury, even fatal, to the occupants in the event of an accident.

Warning



Damaged or defective components of the airbag system cannot be repaired and must be replaced.

Improper operations performed on the system components may cause failures or accidental deployment or failure of the airbags to inflate with consequent damage and injury, even fatal.

Environment



To scrap the vehicle, please contact the FERRARI SERVICE NETWORK to have the airbag system deactivated.



Important note



If the vehicle has been stolen or there has been an attempted theft, have the airbag system checked by the FERRARI SERVICE NETWORK.

Important note



Label E on the right-hand side of the dashboard indicates the airbag system expiry date. When this expiry date is approaching, contact the FERRARI SERVICE NETWORK to have the system replaced.

Label F indicates that rearward facing child seats must not be installed because of incompatibility with the airbag system.

3





Side airbags

Warning



Airbags are not a substitute for seat belts but they increase their efficiency. Correct use of seat belts, with the supplementary action of the side airbags, offers maximum protection in the event of a collision or vehicle roll-over.

Side airbag system components

Warning



The side airbags fitted on the vehicle have not been designed to reduce the risk of being thrown out in the event of vehicle roll-overs.

The vehicle has 2 side airbags, one in the driver-side door panel and the other in the passenger-side door panel.

The side airbag system consists of 2 airbags, one on each door. In the event of a side collision, the airbag on the impact side deploys immediately to protect the occupant's head.

Warning




When the ignition key is turned to position II, the warning light A will come on. If no malfunctioning in the airbag system is detected, it will go off after 4 seconds. If the warning light does not come on, if it remains on or if it comes on while driving, contact the FERRARI SERVICE NETWORK immediately.

Operating

The side airbags are controlled by the ECU that activates them when a sufficiently severe collision occurs.

In the event of a side collision with a force of impact exceeding the limit set by the ECU, this will transmit a signal that activates the pretensioner and the side airbag on the impact side.

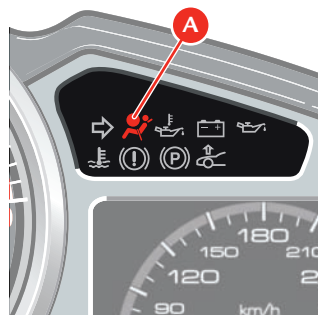



The airbag will start inflating, opening its cover along the breaking line, until it is fully deployed (in a few hundredths of seconds). Once inflated, the side airbag provides protection between the driver's or passenger's head and the external structures. The airbags deflate immediately afterwards.

Side airbag activation is not affected by the occupant's height or weight. The side bag is activated whenever the airbag ECU detects a collision of a sufficient impact force for deployment.

Warning



Never drive with your head out of the window as this places your head and neck in the airbag deployment area. In the event of a side-on collision, this position increases the risk of being thrown out of the vehicle and compromises the protective effect of the side airbags.

Warning



Never place an object over or near the airbag covers. In the event that the airbags are deployed, these objects would be projected into the passenger compartment at such high speed as to seriously jeopardise the safety of the occupants.

Warning



Never modify the airbag modules. Do not damage the airbag modules and trim panels above them (the area above the door panel), by pinning something onto them or pressing objects against their covers, for example.

If, for any reason, an airbag cover gets damaged, have the airbag module immediately checked by the FERRARI SERVICE NETWORK. Activation of a damaged module could cause serious injuries.

Important note



Please consider that the airbag ECU is not capable of automatically detecting damages involving the airbag covers.

Do not cover the upper part of the driver-door and passenger-door panels with adhesive tape or material and do not treat them in any way.

Warning



After deployment, the airbag components can no longer offer any protection; therefore, they cannot be repaired and must be replaced. After activation of a side airbag, have it replaced by the FERRARI SERVICE NETWORK.

3



Warning



The airbag modules are subject to wear and tear and must be replaced at the intervals indicated in the “Warranty Booklet” **EVEN** if the vehicle has **NOT** been involved in a collision.

Important note



Never remove the door panel. If required, this operation must be performed by the **FERRARI SERVICE NETWORK**.

Important note



Label **E** on the right-hand side of the dashboard indicates the airbag system expiry date. When this expiry date is approaching, contact the **FERRARI SERVICE NETWORK** to have the system replaced.





Fuel inertia switch

The fuel inertia switch is a safety device which deactivates the fuel pump relays if a collision occurs.

A symbol appears on the left TFT display and the hazard warning lights come on to indicate that the switch has been activated.

When the fuel inertia switch is activated, the doors are also unlocked (if locked) and the central dome light comes on.

Warning



The fuel pump relays can be reactivated by pressing button **A** on the floor in front of the driver's seat.

3





ABS and EBD

The **ABS** system is a safety device which activates to prevent wheel locking if the driver presses the brake pedal too sharply, especially under low grip conditions.

The system is composed of:

- electro-hydraulic unit
- electronic brake-force distribution **EBD**
- four speed sensors on the wheels, incorporated in the bearings
- the entire ESP sensor system (steering angle sensor, accelerometer, yaw sensor, etc.).

These features add to the vehicle's standard braking system, without changing its characteristics.

Important note



When the **ABS** system is active, during emergency braking or in poor grip conditions, a “pulsing” sensation will be felt through the brake pedal. Hold the brake pedal down to continue the braking action.

When one of the wheels starts locking, the hydraulic control unit controls the braking circuit by running a 3-phase cycle:

- reduction (if necessary)
- maintenance
- pressure increase in the hydraulic circuit.

In the event of **ABS** activation under braking, these regulation cycles will be repeated until the car comes to a stop or pressure on the brake pedal is reduced.

In addition, the system offers the following advantages:

- It improves driving stability (no skidding): even in the event of sharp braking approaching wheel locking.
- It improves manoeuvrability (no side-skidding on sharp turns).

This means that even when an emergency situation requires sudden braking, the driver has more chance of avoiding obstacles or braking on a curve without affecting vehicle stability.

Warning



ABS system performance remains unaltered as long as the speed limit for the tyre side grip is not exceeded. If this limit is exceeded, vehicle skidding cannot be avoided.

- Optimal braking distance:
depending on the type of road surface, the braking distance may be reduced by as much as 40%.

Warning



The **ABS** system does **NOT** exempt the driver from driving carefully and responsibly at all times.



Important note



The **ABS** system cannot compensate for driving too fast for traffic or road conditions, worn tyres, worn braking system components or driving errors.

The **ABS** system has been designed for the sole purpose of assisting the driver in controlling braking under extreme conditions in which he/she could instinctively cause the wheels to lock.

FBP - Ferrari Brake Prefill

Brake design parameters provide a set distance between the brake pads and discs (the “air gap”): as soon as the brake pedal is pressed, the presence of the air gap leads to a slight delay in brake response.

The FBP (Ferrari Brake Prefill) system eliminates the air gap by applying slight pressure to the braking system as soon as the accelerator pedal is released just before braking. This results in more immediate brake response and reduces braking distance during emergency braking thereby improving safety.

ESC - Stability and Traction Control

The electronic stability control **ESC** consists of two main systems:

VDC Vehicle Dynamics Control, performed through the braking system

F1-Trac traction control, performed through engine torque modulation, depending on maximum grip on the road and secondary systems that are always active such as the **ABS** and **EBD**.

To provide optimal control in different driving and grip conditions, five different settings have been developed:

- **Level 1:** (Manettino set to **ICE**) ensures stability and maximises traction on every type of road surface, both in low and very low grip conditions, by means of engine and brake control.
- **Level 2:** (Manettino set to **WET**) ensures stability and maximises traction in low-grip conditions (rain) by means of brake control and optimised setting of the F1-Trac system.
- **Level 3:** (Manettino set to **COMFORT**) ensures stability and maximises traction only in medium- to high-grip conditions by optimising engine and brake control.
- **Level 4:** (Manettino set to **SPORT**) enhances the racing features of the vehicle by reducing engine control to a minimum and maximising brake control. This mode is designed to ensure stability in high grip conditions only.
- **Level 5:** (Manettino set to **ESC OFF**) **ESC** off. Stability is NOT guaranteed, but all the other auxiliary systems such as the **4WD**, **ABS**, **EBD** and **E-Diff 3** electronic differential remain active. During braking, the **VDC** system remains active.

3



F1-Trac

F1-Trac is a traction control system that derives directly from FERRARI's expertise in F1 vehicles.

F1-Trac is faster and more accurate than traditional control systems and is capable of delaying and minimising engine torque adjustments as required in order to ensure the desired trajectory.

The system estimates the maximum available grip in advance, by continuously monitoring the relative wheel speed and using an auto-adaptive operating logic. Comparing this information with the vehicle dynamics model stored in the control system, **F1-Trac** optimises the vehicle behaviour by controlling engine torque delivery.

Important note



F1-Trac does not work when the Manettino is set to the ESC OFF driving mode.

The main feature that distinguishes the F1-Trac system from a traditional traction control system lies in its ability to estimate grip level accurately which allows the driver to make full use of the vehicle's performance driving potential.

The **F1-Trac** system guarantees:

- maximum traction when coming out of bends;
- driving stability and ease even under extreme driving conditions;
- driving comfort.

On this vehicle, integration of the **F1-Trac** and E-Diff 3 systems ensures maximum performance and stability.

E-Diff 3

The vehicle is equipped with an electronic differential, working on the rear axle, which continually performs a variable check on the locking between the two axle shafts.

The electronic differential system, integrated with **F1-Trac** traction control, is capable of improving:

- performance;
- directional stability of the vehicle;
- active safety even when close to grip limit;
- driving comfort and handling.

The system is based on the analysis and forecast of vehicle performance in all possible conditions. This is done by continually monitoring the pressure of the clutch actuator on the differential.

The input signals are the dynamic parameters of the vehicle that the control system translates into a torque difference between the two driving wheels.

On bends, the electronic differential can:

- stabilise the vehicle when the accelerator pedal is released by locking the rear axle;
- control vehicle dynamics by locking the differential according to lateral acceleration and vehicle speed;
- maximise vehicle stability and, at the same time, acceleration on bends by locking the differential according to lateral acceleration, speed, engaged gear and torque produced by the engine.

To obtain these results, the electronic differential system interacts with the **4WD**, **F1-Trac**, **ESC**, **ABS** systems, F1 gearbox and suspension damping control.



EPB - Electric parking brake

On this vehicle the parking brake is actuated by an electric motor. The parking brake can be applied and released by pulling a special lever **B** on the dashboard to the left of the steering wheel. With the ignition key in position **II**, a special warning light comes on on the panel to indicate that the parking brake has been applied (see page 130).

To release the parking brake, pull lever **B** and keep the brake pedal pressed. If the ignition key is in position **II**, the warning light will go out when the parking brake has been fully released.

The electric parking brake can be used as an emergency brake when the vehicle is in motion. If this is the case, the system acts on all four wheels until button **B** is released by communicating with the ESP system which prevents locking.



Warning



Always apply the parking brake when the vehicle is parked. The vehicle should be blocked. If this is not the case, please contact the **FERRARI SERVICE NETWORK**.

Autopark function

The EPB Autopark function automatically activates the electric parking brake when the engine is switched off. The Autopark function is activated every time the key is turned to on: this means that the driver does not have to apply the parking brake every time the engine stops.

However, the function can be temporarily deactivated before switching off the engine by pressing the **AUTO PARK C** button: the message “PARK OFF” is displayed on the left TFT display for 5 seconds. If this is the case, the parking brake should be manually applied by pulling lever **B** once the engine has been switched off. To enable automatic insertion of the EPB the next time the engine is switched off, press button **C** again; the message “PARK ON” is displayed on the left TFT display for 5 seconds.

“Automatic Vehicle Holding” AVH function

The electric parking brake provides optimised release when the vehicle starts up due to its Automatic Vehicle Holding function: once the engine has started, the system keeps the vehicle braked through intervention of the braking system rather than through the parking brake shoes.

3



Tyre temperature and pressure monitoring system (TPMS) (optional)

The vehicle can be equipped on request with a system that measures the tyre pressure and temperature using special sensors fitted inside the wheel rims next to the air valve. These sensors transmit a signal that is received by the antennas on the car body, behind the gravel guards, that are connected to the ECU.

Important note



The system may be momentarily affected by radioelectrical interference from devices that use similar wavelengths.

The ECU processes this information and transmits data on tyre pressure and temperature and any system errors to the instrument panel.

The signal transmitted by the ECU activates symbols on the left TFT display (see page 94) with two priority levels: a **soft warning** (SW) if the pressure loss is **0.2 bar more** than the rated pressure and a **hard warning** (HW) if it is **0.5 bar more** or there is a dynamic decrease of over 0.2 bar/min.

The TPMS can be calibrated using the special menu item in the left TFT display (see page 108).

Important note



System calibration using the special menu item on the left TFT display is necessary after replacement or inflation of a tyre or tyres.

Warning




The TPMS warns the driver that the tyre pressure has decreased. However, this does **NOT** exempt the driver from periodically checking that the tyres are inflated to the indicated pressure.

In addition, the system does **NOT** warn the driver of damage to the tyres by external agents.

Displaying messages on the left TFT display

By using the commands on the left TFT display (see page 106), the driver can access the TYRES screen page which displays the vehicle symbol with the pressure and temperature values of each tyre as shown in example 1.

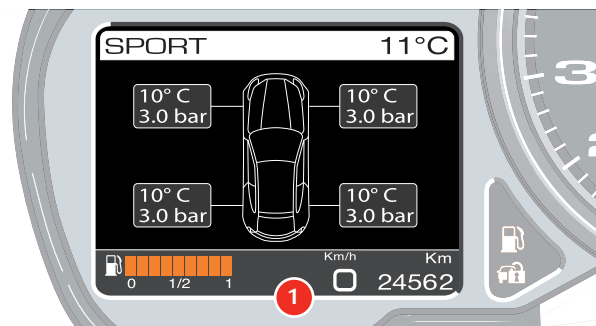



If an event occurs that needs to be displayed as a symbol and/or special message when the TYRES screen page is displayed, the screen page is reduced as shown in example 2. For further information, refer to the “Fault displaying logic” paragraph on page 121.





Low pressure

Regardless of the type of screen page on the left TFT display, when the instrument panel receives the signal from the tyre pressure ECU that the pressure level of one or more tyres is below the alarm threshold, the screen page shown in example 3 (for a warning related to only one tyre) or example 4 (for a warning related to several tyres) appears immediately.

The screen page is displayed for 20 seconds and then the screen page that was previously displayed reappears. If the failure persists, the screen page shown above (example 3 or 4) will be automatically displayed for 20 seconds the next time the engine is started.

The driver can call up the TYRES screen page at any time to display which tyres have low pressure (example 5).

3

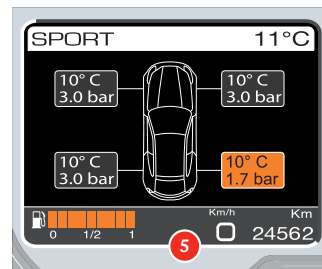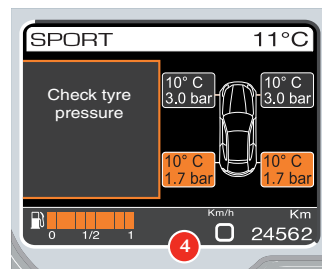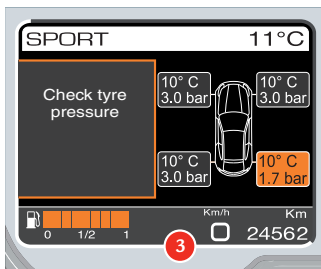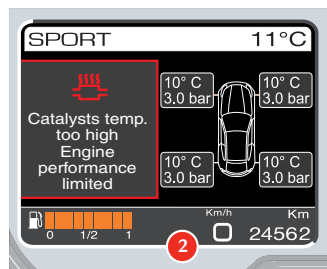



Occasionally, the system may not detect which wheel signals a failure. If this is the case, then only the message “Check tyre pressure” will be displayed as shown in example 6.

Tyre puncture





Regardless of the type of screen page on the left TFT display, when the instrument panel receives the signal from the tyre pressure ECU that the pressure level of one or more tyres is below the alarm threshold, the screen page shown in example 7 (warning not to proceed for vehicles fitted with normal tyres) or example 8 (warning to proceed at a maximum speed of 80 km/h (50 mph) for vehicles fitted with Run Flat tyres) appears immediately. At the same time, a warning light comes on on the panel (see page 128) in fixed mode.

The screen page is displayed for 20 seconds and then the screen page that was previously displayed reappears whereas the warning light remains on in fixed mode.

If normal tyres are used, the failure follows the same display logic as the other priority level 0 faults (see the “Fault displaying logic” paragraph on page 121) until the situation is corrected and the system is recalibrated.

If the vehicle is fitted with Run Flat tyres, the maximum distance allowed in a “tyre puncture” state is 100 km (62 mi). The instrument panel will calculate the residual tyre life and will redisplay the screen page shown in example 8 after 50 km (31 mi). The same screen page (warning not to exceed a maximum speed of 80 km/h) is displayed if the vehicle exceeds 80 km/h (50 mph). Once the distance of 100 km (62 mi) has been exceeded, the panel displays the screen page shown in example 7 (warning not to proceed).

If you call up the TYRES screen page, you can identify the punctured tyre at any time (example 9).

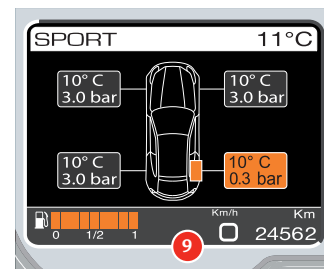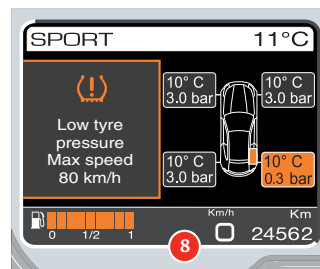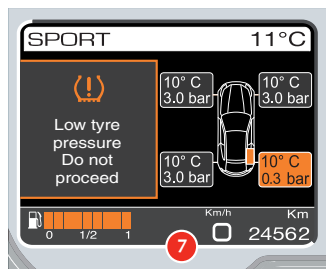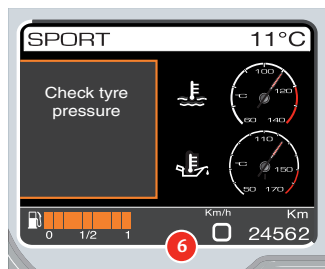



If another tyre is punctured, the instrument panel will update the number of km (mi) which can still be driven according to the distance driven after the previous puncture and will display the screen page shown in example 10.

While priority level 0 (normal tyre puncture) or priority level 2 (Run Flat tyre puncture with maximum speed limit not exceeded and tyres still usable) faults are being displayed, the driver can press the **OK** button with “ESCAPE” function (see page 121): the screen page disappears whereas the warning light on the panel remains on in fixed mode.




As above, the TYRES screen page can be called up at any time to display which tyres are punctured (example 11).

Occasionally, the system may not detect which wheel signals a failure. If this is the case, the screen page shown in example 12 (for vehicles fitted with normal tyres) or example 13 (for vehicles fitted with Run Flat tyres) will be displayed.

The symbol and message are displayed for 20 seconds and then the screen page that was previously displayed reappears whereas the warning light remains on in fixed mode.

If the vehicle is fitted with Run Flat tyres, the instrument panel will calculate the residual tyre life and will redisplay the screen page shown in example 13 after 50 km (31 mi). The same screen page (warning not to exceed a maximum speed of 80 km/h) is displayed if the vehicle exceeds 80 km/h (50 mph). Once a distance of 100 km (62 mi) has been exceeded, the panel displays the screen page shown in example 12 (warning not to proceed).

3

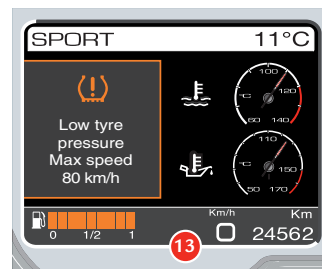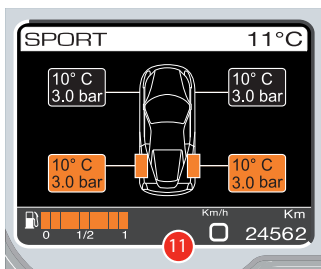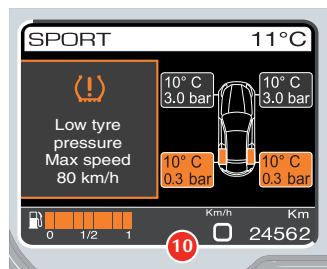



System not calibrated

If the system has not been calibrated or one or more tyres have been replaced, the symbol and message shown in example **14** will be displayed. At the same time, the warning light on the instrument panel (see page 128) will flash for 90 seconds.

When the display cycle ends (20 seconds), the symbol and message disappear and the screen page that was previously displayed reappears whereas the warning light remains on until the system has been calibrated.

The TPMS can be calibrated using the special menu item in the left TFT display with the ignition key in position II and the engine off.



To calibrate the TPMS, call up the MENU screen page on the left TFT display (see page 108) with the ignition key in position II and the engine off. Once the MENU screen page appears, select the items “Calibr. TPMS” and “OK”.

When the Menu item is displayed and the subsequent calibration accepted, the screen page shown in example **15** appears for 5 seconds.

Warning



Before calibrating the system, make sure that the tyre pressure corresponds to the indicated pressure values (see page 29). If this is not the case, the TPMS may issue wrong low pressure indications.

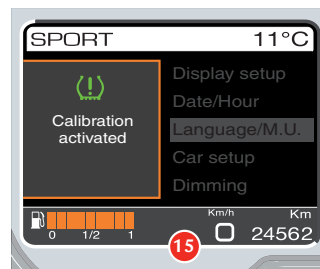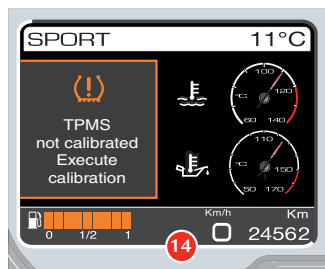



TPMS failure

The screen page shown in example **16** is displayed in the following circumstances:

- malfunction in the circuit and/or wiring connecting the ECU
- signal is not received by one or more sensors due to a faulty, broken or flat battery
- fault in the TPMS ECU.

At the same time, a warning light comes on on the panel (see page 128) in flashing mode for 90 seconds. The warning light then remains on in fixed mode until the situation is corrected.

The TYRES screen page cannot be called up by the driver.

System temporarily not active

The screen page shown in example **17** is displayed in the following circumstances:

- overheating of sensors
- during calibration (the TPMS ECU does not recognise the sensors)
- radio frequency that interferes with the wheel sensor signal.

At the same time, a warning light comes on on the panel (see page 128) in flashing mode for 90 seconds. The warning light then remains on in fixed mode until the situation is corrected.

The TYRES screen page cannot be called up by the driver.




System not active

For a few seconds at key-on, if the TPMS has been deactivated by a diagnostic tool, the screen page in example **18** is displayed.

At the same time, a warning light comes on on the panel (see page 128) in flashing mode for 90 seconds. The warning light then remains on in fixed mode until the situation is corrected.

The TYRES screen page cannot be called up by the driver.

3

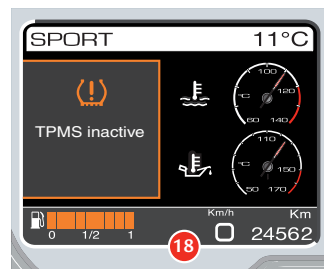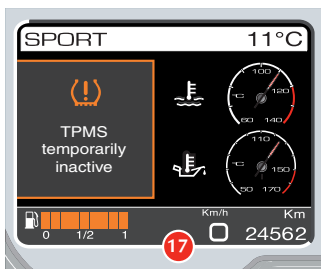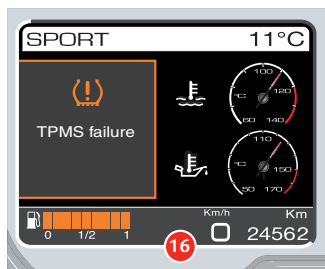



TAB 1. Child restraint systems that can be installed with 3-point seat belts

GROUP	WEIGHT RANGE	SEAT	
		Front passenger	Rear driver-side and rear opposite driver-side
0	0 - 10 kg	X	U
0+	0 - 13 kg	X	U
1	9 - 18 kg	0UF	U
2	15 - 25 kg	0UF	U
3	22 - 36 kg	0UF	U



TAB 2. Child restraint systems that can be installed on the rear seats with ISOFIX

GROUP	WEIGHT RANGE	SIZE CLASS	FASTENING	SEAT
				Rear driver-side and rear opposite driver-side
0	0 - 10 kg	E	ISO/R1	X
0+	0 - 13 kg	E	ISO/R1	X
		D	ISO/R2	X
		C	ISO/R3	X
1	9 - 18 kg	D	ISO/R2	X
		C	ISO/R3	X
		B	ISO/F2	IUF
		B1	ISO/F2X	X
		A	ISO/F3	X

3

Key

U = suitable for “Universal” category restraint systems homologated for use in this weight group.

OUF/IUF = suitable for forward-facing “Universal” category restraint systems homologated for use in this weight group.

X = seat not suitable for children in this weight group.

Doors	94
Engine compartment lid.....	96
Luggage compartment lid	97
Ignition switch.....	99
Fuel filler flap and neck	100
Power windows	102
Instruments and gauges	104
Infotainment system	138
Controls on the steering wheel	156
Lighting.....	164
Driving the vehicle	170
EPB - Electric parking brake	190
Park Lock	192
Launch Control	193
Stop&Start system (optional).....	194
Seat adjustment	204
Air conditioning and heating system	210
Passenger compartment accessories	218



4



ABOUT YOUR VEHICLE



Doors


When a door is opened or closed, the window automatically moves down by approximately 2 centimetres/0.8 inches (to its “target position”) to avoid colliding with the upper weather strip.

When the door is closed, the window automatically moves up until it reaches the “upper limit”.

Opening from the outside

Using the remote control, deactivate the alarm and the central door locking system, or turn the key in the lock to deactivate the central door locking system.

To open the door, pull handle **A**: the window will move down to its “target position”. When the door is closed, the window will move up until it meets the upper limit.

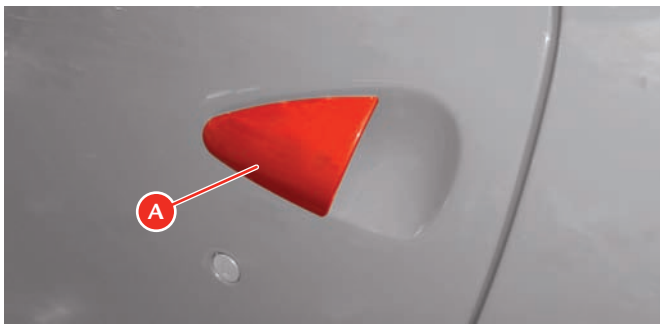

Locking and opening the doors from the inside


Warning



Always carefully check manually that the doors have been closed properly to prevent them from opening while driving.

Both doors can be locked by activating/deactivating the “LOCK/UNLOCK” **B** button on the roof panel. To lock the doors, press button **B**; when the door lock is activated, the light on button **B** comes on. To deactivate the door lock, press button **B** until the light goes out.

A function that automatically inserts the door lock when the vehicle is moving at a speed of 20 km/h (12 mph) or over can be activated on the “Car setup” menu on the left TFT display of the instrument panel (see page 108).

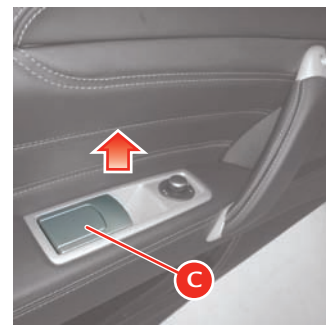



If you pull handle **C** to open the door, the window will move down to its target position. When the door is closed, it will move up until it meets its upper limit.

If handle **C** is lifted without opening the door, the window will move down to its target position and stop and if the door is not opened within 2 seconds, the window will move back up until it meets the upper limit. Therefore, to open the door, release handle **C** and pull it again.

When the opening handle is operated, both doors are unlocked.



Engine compartment lid

Opening

To unlock the engine compartment lid, pull the lever **D** underneath the steering column.

Stand in front of the vehicle, slightly lift the lid and pull the retaining lever **E** to the side of the lock and lift it.

The lid is held open by two gas struts.

The engine compartment lid can also be opened with the ignition key at off.


Closing

Lower the lid until it is closed and press down near the lock until you hear it click in place.

Warning



Always check manually that the engine compartment lid has been closed properly to prevent it from opening while driving.

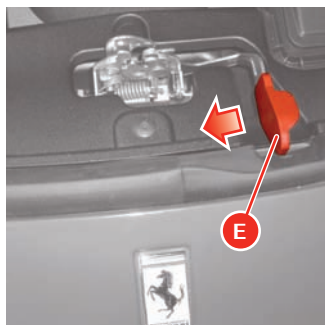



Luggage compartment lid

Opening

The luggage compartment lid can also be opened with the ignition key at off.

Push release button **G** on the left edge of the driver-side floor or press button **H** on the ignition key for more than 2 seconds.

The lid is held open by two gas struts **L**.

The luggage compartment is illuminated by two lights at the sides that come on automatically when the lid is opened.

Warning




To avoid damage, check there is enough room to open the luggage compartment lid.

Important note



After removing the battery from the vehicle or disconnecting it from the electrical system, a door lock/unlock cycle must be performed using the buttons on the key when reconnecting so that the release button **G** resumes normal operation (electronic system self-acquisition procedure).

4

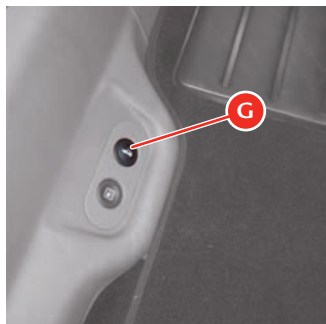



Closing

Grasp the handle on the right of the luggage compartment lid, lower it until it is closed and press down near the lock until you hear it click in place.

Warning



Always check manually that the luggage compartment lid has been closed properly to prevent it from opening while driving.





Ignition switch

The ignition key can be turned to 2 positions:

Position 0 - Stop

Engine off, key removable.

When the key is even only partially extracted, the steering column is locked.


The hazard warning lights and parking lights can be activated.

To facilitate steering wheel release, turn the steering wheel slightly clockwise or counterclockwise while turning the ignition key.

Position II - Start

When the key is turned to this position (key-on) the signals generated by the vehicle systems are checked.

The left and right TFT displays are activated on the instrument panel and when the signals have been checked, the gearbox display comes on (see page 132).

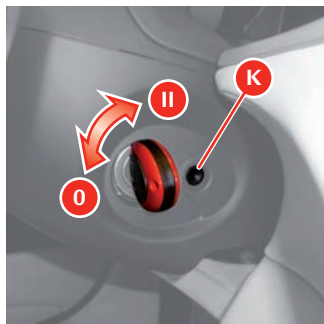

Warning



Never remove the key when the vehicle is moving!

The steering wheel will lock with the first turn of the steering wheel.

Always remember to remove the key from the ignition when you get out of the vehicle!

Never leave vulnerable persons (children, the elderly) unattended in the vehicle.

Key lock

If more than 20 seconds elapse after turning the key to position 0, the key lock device must be released to remove the key: press button **K** and remove the key at the same time.

4



Fuel filler flap and neck

Warning



Always turn off the engine during refuelling.

Do not smoke or use naked flames when refuelling. There is a risk of fire.

The following can be harmful for your health:


- fuel coming into contact with your skin
- inhaling fuel vapours.

Opening

To open the fuel filler flap, press button **M** on the left edge of the driver-side floor.



Closing

To close the fuel filler flap, push it until it clicks in place.

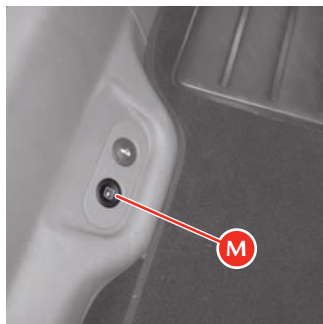

Emergency Opening

If the opening button does not work, the fuel filler flap can be opened manually by pulling the cable **P** on the right-hand side of the luggage compartment: to access it, remove the shield **R** by pulling the two tabs shown in the figure.

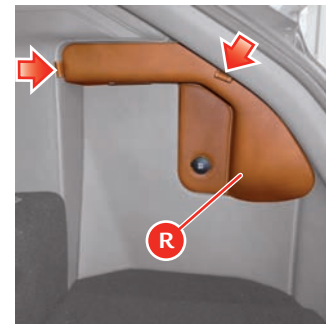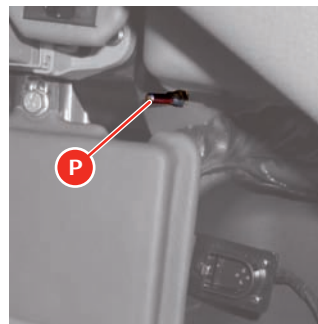



Capless filler neck

This vehicle has a capless filler neck for fuelling. This system allows you to refuel by opening the fuel filler flap and simply placing the nozzle in the filler neck without having to unscrew a cap and screw it up again.

Two flaps placed in series, both with airtight seals, act as a cap. The external flap is locked by a series of “teeth” and the only way to open the external flap correctly is by inserting a petrol pump nozzle.



Warning



Place the nozzle in the filler neck carefully to avoid damaging the device seal.

Do not try to open the external flap of the filler neck by pushing it with your fingers or lever it open using unsuitable tools (e.g. screwdrivers). This may damage the external flap mechanism and the seal.

Warning



Do not overfill the fuel tank: this may cause the fuel to leak out. After fuelling, wait for about 5 seconds before slowly removing the nozzle from the filler neck: in this way, the last drops of fuel will flow into the tank and will not drip onto the vehicle.

4

Warning



Do not place funnels or portable container nozzles in the filler neck.

If you need to refuel from a portable fuel container, use only the funnel in the tool kit (see page 224) that releases the automatic closing device.




Power windows

The power windows can only be used with the ignition key in position II.

Driver-side power window

Press button **A** to move the window up or down.

This allows manual operation (partial opening/closing) or automatic operation (complete opening/closing): press button **A** and quickly release to activate manual operation; if the button is pressed at length (over 0.3 seconds), automatic window operation is activated. The window will only stop when it reaches the end of its travel or by pressing the button again.

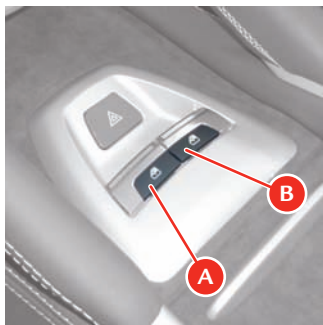

Passenger-side power window

Press button **B** to move the window up or down.

Only manual operation is possible (partial opening) to raise the window: when button **B** is released, the window stops at the position reached.

To lower the window, automatic operation is also possible (full opening): if the button is pressed at length (over 0.3 seconds) automatic window operation is activated. The window will only stop when it reaches the end of its travel or by pressing the button again.

When the door is open, the window moves down to its “target position”; this is to prevent the window from colliding with the upper weather strip when it is closed.



Warning



Improper use of the power windows can be dangerous. Before use, always check that people and objects are at a safe distance.

Pay particular attention during the automatic operation of the driver-side power window.

To protect the passengers remaining in the car against accidental activation of the power windows, always remove the key from the ignition.



Instruments and gauges





- 1 Left TFT display
- 2 Rev counter
- 3 Right TFT display
- 4 Gear display
- 5 Warning lights on the panel
- 6 Manettino status
- 7 Fuel level

4




Left TFT display

Located on the instrument panel, it performs the following functions:

- displays the control parameters
- displays general information while driving
- displays fault warnings.

The driver can interact with the system by selecting the configuration and setting the parameters using the controls on the dashboard to the left of the steering wheel.

The display is activated and set by pressing the MAIN (A), VDA (B), OK (C) and UP, DOWN, LEFT, RIGHT (D) buttons.

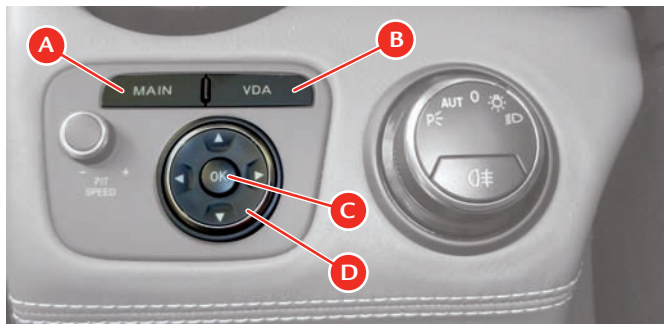

MAIN screen page

If you press the MAIN button, you activate the MAIN screen page which can be used to access the four screen page groups **SETUP**, **VDA**, **TRIP** and **STATUS**. These groups contain the following screen pages:

SETUP (pressing the UP button)

MENU screen page

STATUS (pressing the DOWN button)

SPORT screen page

SPORT 2 screen page

TYRES screen page (only if TPMS is present)

VDA (pressing the LEFT button)

Manettino status screen page

TRIP (pressing the RIGHT button)

TRIP A screen page

TRIP B screen page






Press the **RIGHT** and **LEFT** buttons to sequentially switch between screen pages in a group. Press **RIGHT** to go to the next screen page (for example, in the **STATUS** group from **SPORT** to **SPORT 2**) and press **LEFT** to go to the previous screen page. Press the **RIGHT** button after the last screen page to go back to the first screen page and press the **LEFT** button after the first screen page to go back to the last screen page.

When a screen page is called up, it remains on the display until you decide to select another one.

Every screen page consists of four display areas:

- A** - selected driving mode (Manettino position), windscreen wiper status, outside temperature and “Warning: danger of ice” icon
- B** - display of virtual control gauges, parking sensor screen page, display of abnormal events/warnings (message text and special symbol, when available), display of brightness adjustment function
- C** - total or trip odometer (TRIP A or B), range
- D** - fuel level gauge, area for minimised symbol for faults that do not have a specific warning light on the panel (see page 121), speed repetition.

4

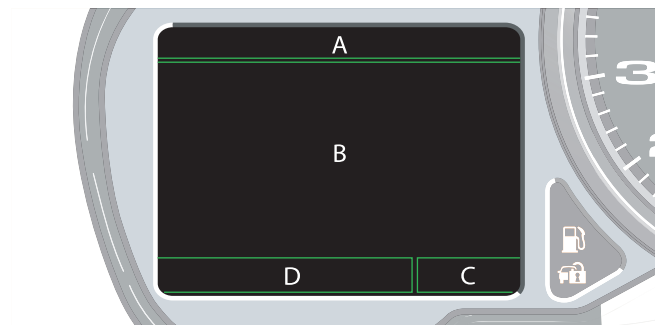



Display setting and configuration of vehicle parameters

Warning



Display setting and parameter configuration should be performed when the vehicle is stationary

MENU screen page

Display setting and configuration of the various vehicle parameters is possible using the MENU screen page (the only screen page in the SETUP group) that can be directly called up by pressing the UP button when the MAIN screen page is activated.

Navigation within the menu is on several levels; the first level offers a list of items through which the following parameters can be set or the following information can be displayed:

- **Dimming**: display dimming setting
- **Display setup**: display setup
- **Date/Hour**: date and time setting
- **Language/M.U.**: language and units of measurement setting
- **Car setup**: vehicle parameter configuration
- **Calibr. TPMS**: TPMS calibration (only if present)
- **Service**: information on scheduled maintenance.

These items are the main menu functions. To scroll through the list of items, press the UP and DOWN buttons; to select the required function, press and quickly release the OK button or the RIGHT button.





Once the function has been selected, the individual subfunctions or parameters that can be activated are displayed. To select them, use the **UP** and **DOWN** buttons and press and quickly release the **OK** (or **RIGHT**) button to activate a subsection or activate the selected parameter.

To go back to a previous level in the menu hold down the **OK** button, press the **LEFT** button or select the **BACK** item which is normally in the list of subfunctions. If no operation is performed for at least 10 seconds, the first menu level reappears on the display.

Adjusting brightness

The brightness of the two TFT displays on the instrument panel can be adjusted by selecting the special item on the MENU screen page or by using the **UP** and **DOWN** buttons when the MENU screen page is not displayed or the chronometer is off if the Chronometer screen page is displayed.

The first time one of the two buttons is pressed, the screen page is displayed. The next time the buttons are pressed, the brightness can be adjusted.

The adjustment made, which can be activated even when the vehicle is moving, can be seen immediately and does not affect the brightness of the warning lights on the panel.

The screen page disappears when the **OK** button is pressed or automatically if it is not used for 5 seconds and is replaced by the screen page that was previously displayed.

4





Date and time setting

To set the date, call up the MENU screen page, select “Date/Hour” and “Date” and set the day, month and year using the UP, DOWN and OK buttons.

To set the time, call up the MENU screen page, select “Date/Hour” and “Hour” and set the time using the UP, DOWN and OK buttons.

By selecting “Date/Hour” and “Hour” you can also choose to display the time in the 24h or 12h format.



Fuel level gauge

The fuel level gauge is always displayed in area **D** of the display (see page 107). The gauge has 9 yellow bars that gradually “turn off” as the fuel level drops.




When the second bar goes off, the first bar turns red until fuel runs out.



In “Fuel level low” condition, a warning light comes on on the panel (see page 124) and a special symbol and message are displayed for 10 seconds together with information on driving range in km. If the condition that has generated it persists, this signal is repeated every 8 km (5 mi).

In limited cruising range conditions, the information on driving range in km is replaced by the words “Limited cruising range”.

4

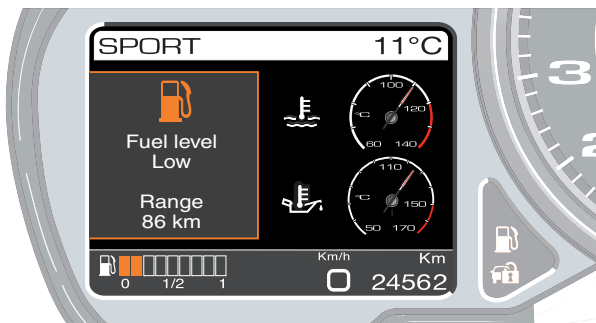



SPORT screen page

The SPORT screen page displays the following virtual gauges:

- Engine coolant temperature
- Engine oil temperature



If the SPORT screen page is being displayed and an event occurs that needs to be displayed as a symbol and/or special message, the virtual gauges are minimised. For further information, refer to the “Fault displaying logic” paragraph on page 121.

SPORT 2 screen page

The SPORT 2 screen page displays the following virtual gauges:

- Engine oil pressure
- Voltmeter

If the SPORT 2 screen page is being displayed and an event occurs that needs to be displayed as a symbol and/or special message, the virtual gauges are minimised. For further information, refer to the “Fault displaying logic” paragraph on page 121.

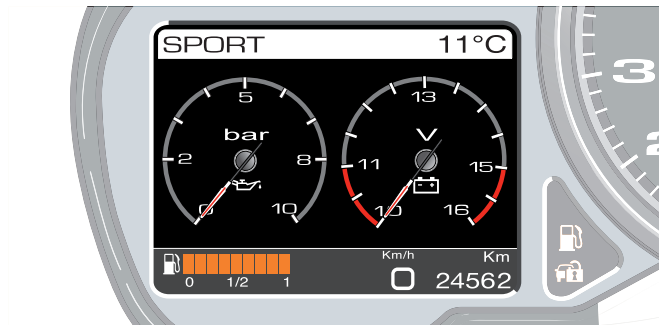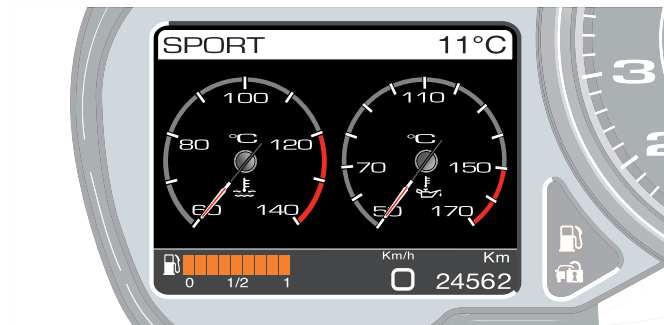




TYRES screen page (only if TPMS is present)

The TYRES screen page, available only if the TPMS is present, displays a symbol of the vehicle with the pressure and temperature values for each tyre.

If the TYRES screen page is being displayed and an event occurs that needs to be displayed as a symbol and/or special message, the screen page is minimised. For further information, refer to the “Fault displaying logic” paragraph on page 121.

4

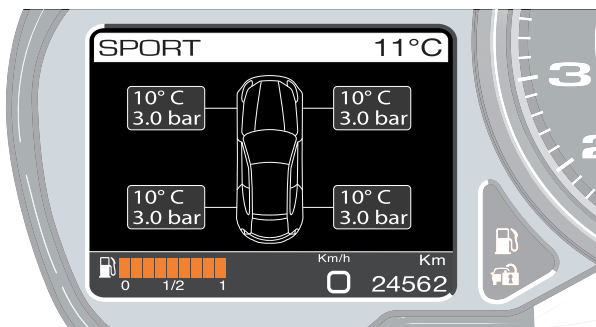



Manettino status screen page

The “Manettino status” screen page, which can be called up by pressing the **LEFT** button when the **MAIN** screen page is displayed or by pressing the **VDA** button when any screen page is displayed, displays a list of parameters which can be configured using the “Manettino” driving mode selector (see page 156) and indicates the configuration each one assumes in a specific driving mode.


The systems involved are the following:

- **F1-Trac**: traction control
- **E-Diff**: electronic differential
- **4WD**: 4WD traction system
- **ESC**: stability and traction control
- **F1-DC**: dual clutch F1 gearbox
- **SCM**: magnetorheologically controlled suspension.

Important note



If there is a Manettino failure, the “Manettino Status” screen page cannot be displayed or recalled.

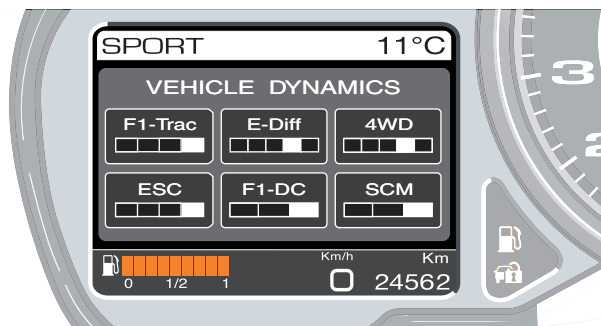



TRIP A and TRIP B screen pages


The TRIP A or TRIP B screen page displays the following information:

- **Maximum speed**
- **Average speed**
- **Travel distance**
- **Travel time**
- **Range**

If the TRIP A or TRIP B screen page is being displayed and an event occurs that needs to be displayed as a symbol and/or special message, the screen page is minimised. For further information, refer to the “Fault displaying logic” paragraph on page 121.

To activate/deactivate display of the TRIP B screen page, call up the MENU screen page, select “Display setup”, “TRIP B”, and select either “ON” or “OFF”.

4

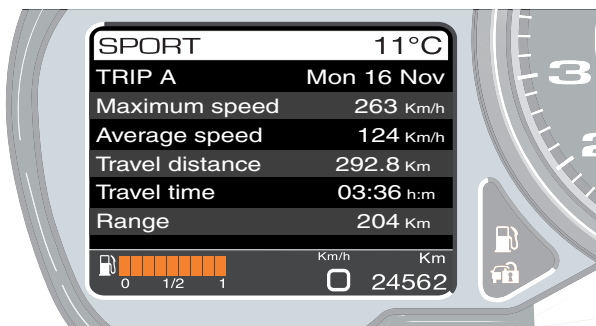



“Warning: danger of ice” message

To warn the driver of the presence of ice on the road if the outside temperature is 3 °C (38 °F) or below, the “snow” symbol and the “warning: danger of ice” message are displayed for 10 seconds in the top right of the display.

When they are displayed, the symbol and message appear instead of the outside temperature; after 10 seconds, the outside temperature is displayed again and the “snow” symbol appears next to it as long as the outside temperature remains 6 °C (43 °F) or below.

Speed limit setting and


“Speed limit exceeded” message

The MENU screen page can be used to set a speed limit in the range 30 - 250 km/h (17 - 155 mph) with 5 km/h (3 mph) steps which sends a message to the driver when exceeded. To set the speed limit, call up the MENU screen page by pressing the **UP** button when the MAIN screen page is activated. Select “Car setup” and “Speed limit”.

To set the value, use the **UP** and **DOWN** buttons. When the minimum limit of 30 km/h (17 mph) is reached, press the **DOWN** button again to deactivate the function or press the **UP** button after reaching the maximum speed of 250 km/h (155 mph). The function is normally deactivated (OFF).

When the set limit is exceeded, the driver is informed in the following way:

The symbol showing the set limit and a “speed limit exceeded” message appear in the top right of the display for 10 seconds accompanied by an acoustic signal. Once the warning cycle has ended, the message disappears whereas the symbol continues to be displayed next to the outside temperature until the speed decreases to 5 km/h (3 mph) below the set limit.

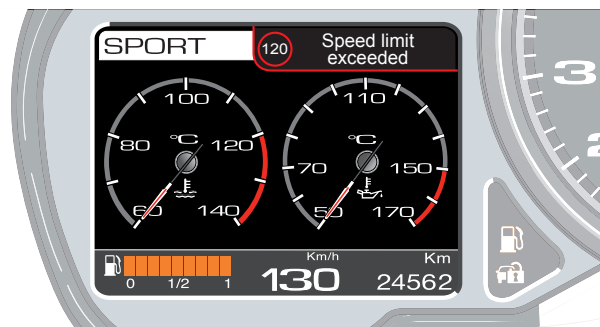



Parking sensors

To help the driver when parking, the vehicle is fitted with four sensors in the rear bumper (rear parking sensors). The vehicle can be fitted on request with four sensors in the front and rear bumpers (front and rear parking sensors).

Warning



The system will only operate correctly if the sensors on the bumpers are free of mud, dirt, snow or ice.

When approaching obstacles in front of or behind the vehicle, the parking sensors inform the driver of the distance between the vehicle and the obstacle by way of acoustic signals, which become more frequent as the obstacle approaches, and visual signals in area **B** of the left TFT display (see page 107). By supplementing the driver's direct visual information with that provided by the system acoustic signals and visual warnings, potential collisions can be avoided when parking.

Warning



It is the driver, however, who holds full responsibility for parking manoeuvres and other potentially dangerous situations. The system has only been designed as an aid during parking manoeuvres since it detects obstacles that are outside the driver's field of vision.

Use of the sensors therefore does not mean that the driver can be less careful and attentive and not watch out for persons and obstacles during parking manoeuvres.

The rear parking sensors are automatically activated when the key is in position **II** and reverse gear is engaged. When the rear sensors are activated, an acoustic signal warns the driver that the system has been activated. If the vehicle is also fitted with front sensors, these can be activated or deactivated by pressing the relative button on the roof panel (see page 169).

“Stop and Go” function

The “Stop & Go” function, available on vehicles with front and rear parking sensors, automatically activates the front sensors when vehicle speed is 10 km/h (6 mph) or below. This system has been designed to assist the driver in certain traffic conditions (e.g. tailbacks) and signals when the minimum distance is reached between the vehicle and the vehicle in front.

To activate or deactivate the system, call up the MENU screen page, select the items “Car setup”, “Parking sensor”, and select one of the two options, “STOP&GO ON” and “STOP&GO OFF”.

Indication of obstacles

The parking sensor system emits acoustic signals as soon as an obstacle is detected which become more frequent as the obstacle approaches. The acoustic signal stops immediately if the distance from the obstacle increases whereas the tone cycle remains constant if the measured distance from the central sensors remains unchanged.



The vehicle symbol and sensor detection zones appear on the left TFT display: these zones indicate which part of the vehicle is approaching an obstacle (if front or rear and if left, right or central) and the distance from the obstacle (maximum, medium or minimum).



If an obstacle is detected at maximum distance in the central front part, it will be displayed as shown below (green).

If an obstacle is detected at medium distance in the central front part, it will be displayed as shown below (orange).

If an obstacle is detected at minimum distance in the central front part, it will be displayed as shown below (red).

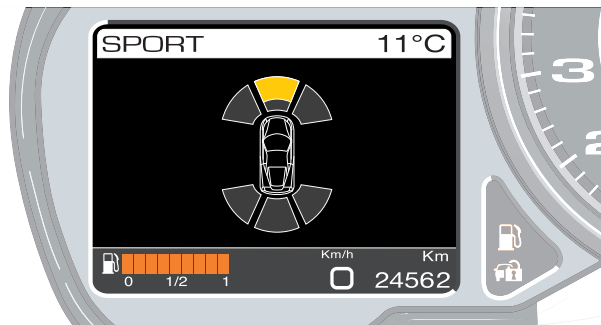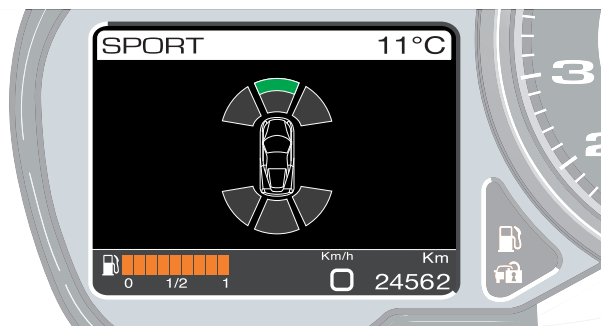

The maximum, medium and minimum distances of obstacles displayed in green, orange and red vary according to whether they are rear or front sensors:

Rear sensors:

Maximum distance (green): 80 to 70 cm - 31 to 28 in. (central area, 150 to 70 cm - 59 to 28 in.)

Medium distance (orange): 69 to 41 cm (27 to 16 in.)


Minimum distance (red): 40 to 0 cm (16 to 0 in.)

Front sensors:

Maximum distance (green): 73 to 53 cm - 29 to 21 in. (central area, 110 to 70 cm - 43 to 28 in.)

Medium distance (orange): 52 to 31 cm (20 to 12 in.)

Minimum distance (red): 30 to 0 cm (12 to 0 in.)

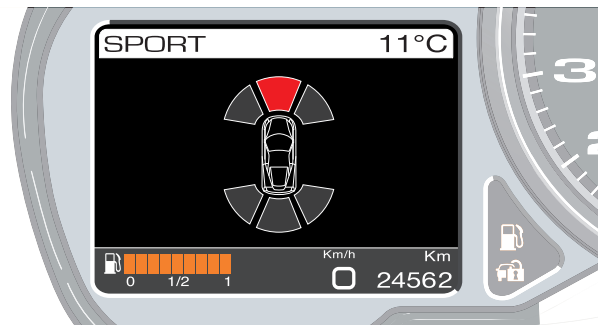





If the front sensors are deactivated or not present, the display does not show the symbols in the front. In the same way, if front sensors are fitted and the rear ones are not activated, the display only shows the symbols in the front. If all the sensors are activated, the system can give several pieces of information at the same time: if an obstacle is detected at a maximum distance in the front central part and at a minimum distance in the rear right part, it will be displayed as shown below.

If the parking sensor system symbols are being displayed and an event occurs that needs to be displayed as an icon and/or special message, the symbol is moved from the centre of the display to the right as shown below.

Cleaning the sensors

When cleaning the sensors, be very careful not to scratch or damage them and avoid using dry, rough or hard cloths. The sensors must be washed with clean water and car shampoo added if necessary. In car washes that use steam jet or high pressure water cleaning equipment, quickly clean the sensors keeping the nozzle at a distance of at least 10 cm (4 in.). For the repainting of bumpers or retouching the paintwork in the sensor area, contact the FERRARI SERVICE NETWORK. If paint is applied incorrectly, it may prevent the parking sensors from working properly.

4

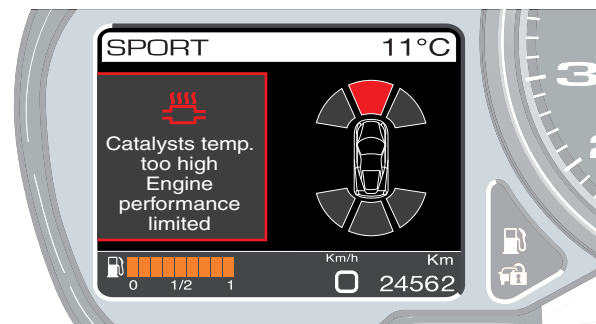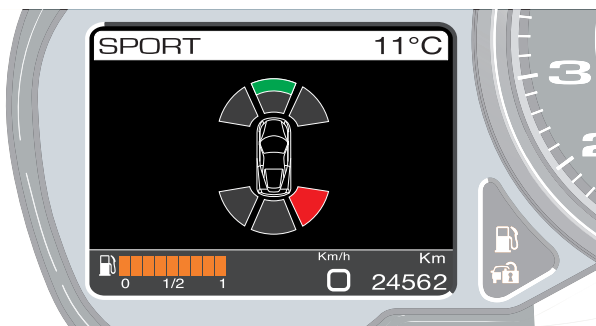



Indication of parking sensor failure

The system ECU checks all the components each time the reverse gear is engaged. If at least one parking sensor is faulty, the special symbol (see page 129) is displayed on the left TFT display together with the message “Parking sensor failure. Warning! Possible obstacles” accompanied by an acoustic signal.

Important note



The sensors are able to detect obstacles with reasonably large, even surfaces (e.g.: poles with diameters of over 60 mm (2.4 in.), walls, barriers, trees). Detection is not optimum with obstacles with sharp projections or uneven surfaces.

Important note



During parking manoeuvres, always take the utmost care since obstacles may be located above or below the sensors.

Important note



Objects placed close to the rear part of the vehicle are not always detected by the system and may therefore damage the vehicle or be damaged themselves.

Important note



The signals sent by the sensors may also be affected by damage to the sensors caused by dirt, snow or ice on the sensors or by ultrasound systems (e.g. pneumatic brakes on lorries or pneumatic drills) in the vicinity.

Warning



It is the driver, however, who holds full responsibility for parking manoeuvres and other potentially dangerous situations. The system has only been designed as an aid during parking manoeuvres since it detects obstacles that are outside the driver's field of vision. The sensors are therefore not a substitute for the driver's care and attention when parking and checking for the presence of persons or objects.



Fault display

Fault displaying logic

When a fault occurs, the corresponding warning light (if present) comes on on the panel whereas a description of the fault (if available) and the relevant symbol (if available) are displayed on the left TFT display. The message appears on the display as soon as the warning light (if present) comes on and the main screen page that is displayed at that time is reduced.

The fault remains on the display for 20 seconds. When the display cycle ends, if the fault does not have a special warning light on the panel, the symbol remains minimised in area **D** of the display (see page 107) until the cause of malfunctioning has been resolved. In area **B** the main screen page is displayed in “maximum” size.


When the display cycle ends, if the fault has a special warning light on the panel, the screen page that was displayed prior to the event reappears and the symbol is not minimised in area **D**. The warning light remains on until the cause of malfunctioning has been resolved.

If the fault is resolved within 20 seconds, it remains displayed and the warning light remains lit for 2 seconds.

“ESCAPE” function

Displaying a fault on the screen can be interrupted by pressing and quickly releasing the OK button with “ESCAPE” function. When the OK button is pressed, the screen page that was displayed prior to the event reappears. If the fault does not have a special warning light on the panel, the symbol remains minimised in area **D** until the cause of malfunctioning has been resolved.

4

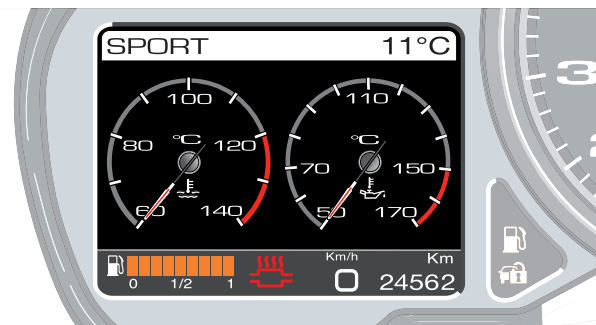



Fault priority levels

The simultaneous display of several faults follows a logic that depends on the priority level assigned to it:

Priority level 0 - Extremely critical fault

Priority level 1 - Critical fault


Priority level 2 - Non-critical fault

When several fault events occur at the same time, faults with priority level 0 are displayed first, followed by priority level 1 and then priority level 2. The information on the various faults is displayed in turn for 5 seconds each. In any case, the total display time for each fault is never less than 20 seconds.

If a fault message with priority level 1 or 2 is being displayed, the priority level 2 message is only displayed once the priority level 1 message has been displayed for at least 2 seconds. If, on the other hand, another new priority level 0 fault occurs, this is displayed immediately.

Indication of failure of turn indicators and running lights



A failure of the running lights (front and/or rear) and turn indicators (front and/or rear) is indicated in the same way as other faults but the vehicle symbol with the faulty running light or turn indicator indicated in red is displayed together with a description of the failure instead of the “Lamp failure” symbol (see page 125). When the display cycle ends or the **OK** button with “ESCAPE” function has been pressed, the “Lamp failure” symbol is minimised.

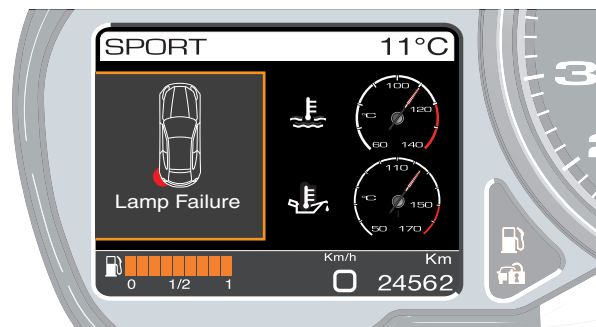



“Doors, engine or luggage compartment lid open” function display

If one or more doors or the engine and/or luggage compartment lid are open, the vehicle symbol appears on the display and indicates which doors or lids are open together with a special message. If the vehicle is in motion, an acoustic signal is also emitted. When the display cycle ends or the **OK** button with “ESCAPE” function has been pressed, the special symbol is minimised (see page 130).

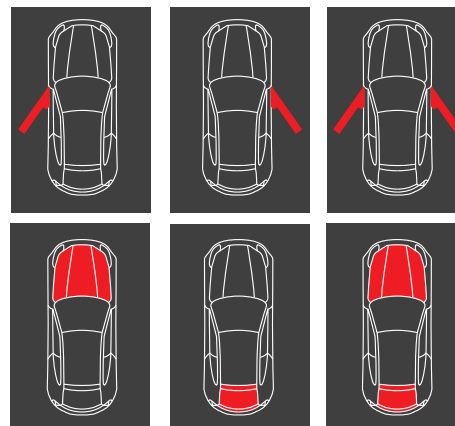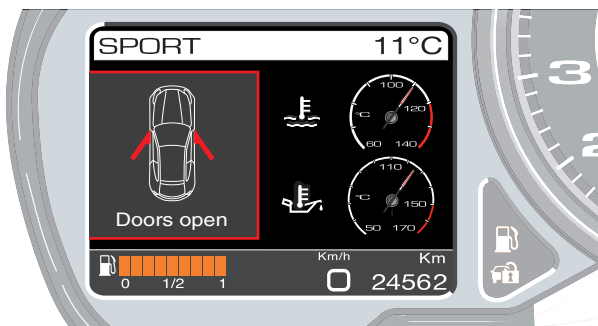

4



List of left TFT display symbols and warning lights on the panel

TFT	Warning light	Description and warnings
	 orange	Alarm system failure Indicates a fault in the alarm system (priority level 1). System not programmed (priority level 2). Failure and system not programmed (priority level 1).
	orange	Alarm system failure (priority level 2). Break-in attempted (priority level 2).
	 orange	Fuel level low Indicates that the fuel level is too low (priority level 2).
	red	Battery conditioner connected When the instrument panel is on, it indicates that the battery conditioner is connected (priority level 0).
	orange	Inertia switch Indicates activation of the inertia switch following an accident and the resulting cut-out of the fuel supply (priority level 0).

The hazard warning lights are also automatically activated.

	red	Alternator failure Indicates there is a fault in the recharging system (priority level 1).
	orange	Low windscreen washer fluid level Indicates a low level of washer fluid in the windscreen washer tank (priority level 2).
	red	Oil temperature Indicates that the oil temperature is too high (priority level 0).
	orange	Adaptive headlights failure Indicates there is a failure in the adaptive headlight system (priority level 2).
	orange	Windscreen wiper motor failure Indicates a windscreen wiper motor failure (priority level 2).
	red	Engine coolant temperature Indicates that the engine coolant temperature is too high (priority level 0).

Turn off the engine and contact the FERRARI SERVICE NETWORK.

Turn off the engine and contact the FERRARI SERVICE NETWORK.



red



Oil pressure

Indicates that the engine oil pressure is too low (priority level 0).

Turn off the engine and contact the FERRARI SERVICE NETWORK.



red

A flashing warning light indicates an engine oil pressure sensor failure (priority level 2).

Contact the FERRARI SERVICE NETWORK.



orange



Engine diagnostic system (EOBD) failure

While the engine is running, it indicates a fault in the emission control system and in the ignition/injection system (priority level 0).

Turn off the engine and contact the FERRARI SERVICE NETWORK.

After turning the ignition key to position II, it remains on for a self-check for a few seconds after the engine has started.



green

Running lights

Indicates that the running lights or low beam lights are on.



orange

Stop lights failure

Indicates a system failure or blowing of the STOP light bulb (priority level 2).



orange

External lights failure

Indicates a system fault or blowing of a bulb in the running, turn indicator or rear fog lights (priority level 2).



orange

Number plate lights failure

Indicates a system failure or blowing of the number plate light bulb (priority level 2).



orange

Rear fog lights

Indicates a rear fog light failure.



orange

Twilight sensor failure

Indicates a twilight sensor failure (priority level 2).



blue

High beams

Indicates that the high beam lights are on. The light also comes on when flashing.



green

Right turn indicator

Indicates that the right turn indicator is on.



green

Left turn indicator

Indicates that the left turn indicator is on.

4



green

Hazard warning lights

Simultaneous switching on of the right and left turn indicator warning lights indicates that the hazard warning lights are on.



red

Catalytic converter temperature

Indicates that the catalytic converter temperature is too high: stop the vehicle (priority level 0).

Contact the FERRARI SERVICE NETWORK.



orange

Indicates that the catalytic converter temperature is very high: reduce speed until the symbol goes out (priority level 1).

Indicates a failure of the catalytic converter temperature sensor (priority level 0).



orange

Checking the engine oil level

Indicates a low engine oil level (priority level 0).



orange

Seat heating

Indicates that the heated seat function has been activated (the symbol and message remain displayed for 5 seconds).



orange

Seat ventilation

Indicates that the seat ventilation function has been activated (the symbol and message remain displayed for 5 seconds).



orange

Power steering failure

Indicates that the power steering system is inefficient (priority level 2).

Contact the FERRARI SERVICE NETWORK.



orange



orange

ABS

Indicates an ABS system failure (priority level 1).

The standard braking system is still functioning.

Contact the FERRARI SERVICE NETWORK.



orange



orange

ESC deactivated

Symbol and warning light indicate that the ESC system has been deactivated (priority level 1).

The symbol is displayed for 5 seconds together with the "ESC off" message.



orange

4WD system failure/4WD system not available

Together with a special message, the symbol indicates:

A 4WD traction system failure (priority level 0).

Warning



If this is the case, the 4WD traction system is not available. Slow down and drive carefully, especially in low-grip conditions.

Contact the FERRARI SERVICE NETWORK as soon as possible.

Contact the FERRARI SERVICE NETWORK even if the message disappears.

The 4WD traction system temperature is too high.
The 4WD traction system oil pressure is too low.

Warning



In these two cases, the 4WD traction system functions are reduced or temporarily unavailable. Slow down and drive carefully, especially in low-grip conditions until the failure is no longer displayed.



orange



orange

4WD and ESC system failure

Indicates a failure in the 4WD traction system and ESC system.

Warning



Stop the vehicle and avoid sudden braking or steering. Stop driving and contact the FERRARI SERVICE NETWORK immediately.

Warning



The vehicle can still be driven at low speed (max. 40 km/h - 25 mph) to clear the road.



orange



orange

ESC system failure

Indicates a failure in the ESC system (priority level 1).

Warning



Stop the vehicle and avoid sudden braking or steering. Stop driving and contact the FERRARI SERVICE NETWORK immediately.

Warning



The vehicle can still be driven at low speed (max. 40 km/h - 25 mph) to clear the road.

4



orange

ESC system activation (flashing warning light)

Indicates that the ESC system has been activated (priority level 1).



orange

CCM brake discs worn

Indicates that the carbon ceramic brake discs are worn (priority level 2).

Contact the FERRARI SERVICE NETWORK.



orange



orange

TPMS

Indicates a puncture in one or more standard tyres (priority level 0) or Run Flat tyres (priority level 2).

With the warning light in flashing mode for a maximum of 90 seconds after which it remains on in fixed mode, it indicates:

A failure in the TPMS (priority level 2).

TPMS temporarily inactive (priority level 2).

TPMS inactive (priority level 2).

TPMS not calibrated (priority level 2).



red

Doors/front and rear lids open

The symbol, which is minimised, indicates that one or more doors and/or lids are open.



red



red

Airbag system failure

Indicates an airbag system failure (priority level 0).

With the warning light in flashing mode, it indicates that the airbag test cycle has not been completed (priority level 0).

Contact the FERRARI SERVICE NETWORK.



red

Driver-side seat belt not fastened

Indicates that the driver-side seat belt has not been fastened (priority level 0) together with an acoustic signal lasting 90 sec.



red



red

Passenger-side seat belt not fastened

Indicates that the passenger-side seat belt is not fastened (priority level 0).



Speed limit exceeded

Indicates that the speed set by the driver has been exceeded (priority level 2), the figure shown indicates the set speed.



orange

E-Diff system failure

Indicates an electronic differential failure (priority level 1).



red



red



red

Brake malfunction

Indicates that the brake fluid level is low (priority level 0).

Indicates an EPB (electric parking brake) failure (priority level 0).

Indicates an overhaul of the Parking Brake system (priority level 0).



red



red

Indicates an EBD system failure (priority level 0).



orange



orange

Rain sensor failure

Indicates a rain sensor failure (priority level 2).



orange

Suspension control system failure

Indicates a malfunction in the suspension control system (priority level 2).

Contact the FERRARI SERVICE NETWORK.



green

“LIFT” status

When on in fixed mode, it indicates that the Lift system is activated (vehicle raised).

When on in flashing mode, it indicates that the Lift system is being operated (activation or deactivation cycle).



orange



orange

“LIFT” system failure

Indicates a Front Lift system failure (priority level 1).

Generic failure

Indicates an airbag warning light failure (priority level 2).

Indicates a Manettino failure (priority level 1).

Indicates a failure in the electronic system (priority level 2).

TPMS

Indicates that calibration of the TPMS has been activated.



green



red



red

Brake pad wear

Indicates excessive wear of the brake pads (priority level 2).

Contact the FERRARI SERVICE NETWORK.



orange

Parking sensor failure

Indicates that the parking sensor system is faulty (priority level 2).



green

Scheduled Maintenance (Service)

Indicates the Scheduled Maintenance deadline.



orange

AVH system

Indicates an AVH system failure (priority level 0).

4



Ice hazard

Indicates that the outside temperature is 3 °C (38 °F) or lower, highlighting the risk of icy road surfaces.

Drive carefully in these conditions and slow down since tyre grip is significantly reduced.

Warning



In this condition, activate the “Low grip” driving mode.



red

Parking brake

Indicates that the parking brake is applied.



red



red

Gearbox failure

Indicates a system failure (priority level 1).

Contact the FERRARI SERVICE NETWORK.



green



green

Cruise Control

Indicates that the Cruise Control has been activated/deactivated.



orange

Stop&Start on/Stop&Start system warnings

Together with a special message, it indicates:

Stop&Start system on.

Stop&Start system active.

Stop&Start system not available or temporarily deactivated.



orange

Stop&Start off.

Indicates that the Stop&Start system has been deactivated.



orange

Stop&Start failure

Indicates a failure in the Stop&Start system (priority level 1).



red

Stop&Start failure

Indicates a failure in the Stop&Start system (priority level 0).



Electronic rev counter

The electronic rev counter indicates the engine RPM. The numbers on the dial multiplied by 1000 correspond to the engine RPM in one minute.

Avoid engine speed rates in the red sector.

There is a space to the bottom right of the rev counter for the display which gives information on dual clutch transmission (DCT).

Important note



If the rev counter has a white or yellow background, backlighting is not activated in daytime conditions (i.e. with the running lights off or with the running lights on but with the twilight sensor detecting daytime conditions) to improve visibility of the gauge.



Engine RPM LED on steering wheel (optional)

The five LEDs on the steering wheel rim (available on request) light up in sequence and inform the driver that the maximum engine RPM has been reached for gearshifting. When 5,400 RPM is reached, the first LED comes on; the others come on in sequence when 6,050, 6,700, 7,350 and 8,100 RPM are reached.

The LEDs on the steering wheel can be deactivated using the MENU screen page on the left TFT display (see page 108): call up the MENU screen page, select the items “Car setup” and “RPM on steer” and then select OFF. To reactivate the function, select ON.

4





Gearbox display

The display which gives information on dual clutch transmission (DCT) is found to the bottom right of the rev counter; with the ignition key in position II, it displays the following information:

- Gear engaged;
- Indication of “Automatic gearbox” mode;
- Indication of “Auto easy exit” mode;
- Indication of gearbox in “Parking” mode;
- Indication of Launch Control activated;
- Indication of AVH system activated.

Important note




Information on the gearbox is useful in all operating conditions.

Gear engaged

The gearbox display shows the number or letter indicating the engaged gear in the centre.

N	Neutral
R	Reverse
1	1 st gear
2	2 nd gear
3	3 rd gear
4	etc.

When the key is turned off, the display remains on for at least 3 seconds and displays the engaged gear. If the control panel reads N (Neutral), the letter N is displayed and a buzzer will sound.

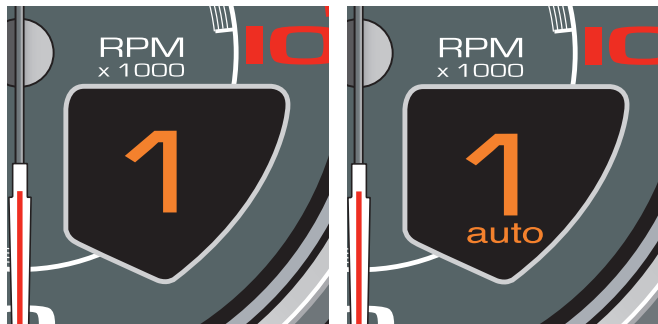



Indication of “Automatic gearbox” mode

When the gearbox is used in “automatic” mode (see page 176), the word “auto” appears in the bottom of the gearbox display together with the number or letter indicating the engaged gear.

Indication of “Auto easy exit” mode

When the gearbox is used in “Auto easy exit” mode (see page 176), the word “auto” appears in the bottom of the display together with a small “arrow” pointing downwards on the left.

Indication of gearbox in “Parking” mode

When the gearbox is in “Parking” mode, i.e. the Park Lock gearbox locking device is activated (see page 192), the letter “P” appears in the centre of the gearbox display.



Indication of Launch Control activated

When the gearbox is used in “manual” mode and the Launch Control function is requested by pressing the special button on the centre console (see page 193), the word “launch” appears in the bottom of the gearbox display. The word remains while the function is activated.

Indication of AVH system activated

In certain circumstances, when the AVH system is activated (see page 191), the word “HOLD” appears in the top of the gearbox display.

4

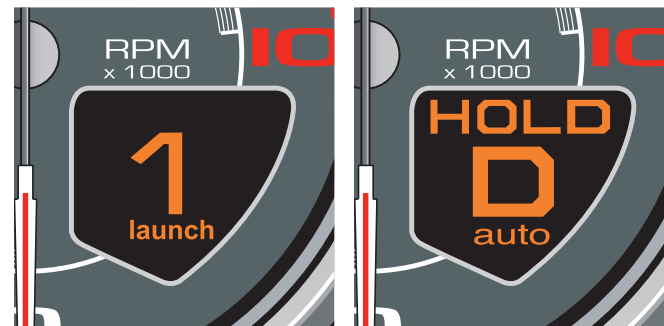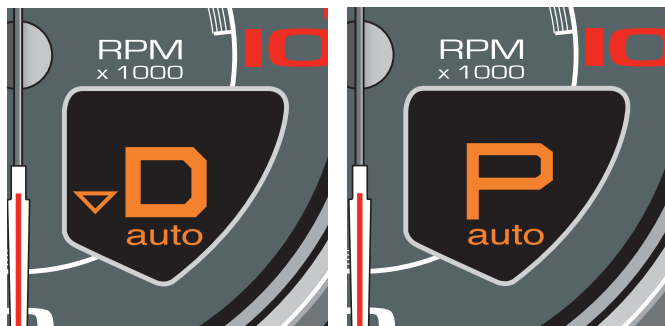



Right TFT display

Located on the instrument panel, it performs the following functions:

- it displays the speedometer
- it displays the “Rear Parking Camera” and “Dual View Camera” (optional) screen pages
- it displays infotainment system information in minimised form

Speedometer display

The speedometer can be displayed on the right TFT display in “Speedometer” or “Digital speed” mode.

To select the desired display mode, call up the MENU screen page on the left TFT display (see page 108) and select the items “Display setup”, “Display right”.

“Speedometer” screen page

The “Speedometer” screen page indicates the speed by displaying a virtual analogue speedometer.

“Digital speed” screen page

The “Digital speed” screen page indicates the speed in digital form.

Important note



The speedometer is always also displayed in digital form in area **D** of the left TFT display (speed repetition, see page 107).

Time display

By selecting the special item on the MENU screen page of the left TFT display, you can activate/deactivate the time display in the top right of the “Speedometer” and “Digital speed” screen page. The time is displayed approximately 10 seconds after key-on.






“Rear Parking Camera” screen page (optional)

If the vehicle has a rear parking camera (optional), the “Rear Parking Camera” screen page is automatically displayed on the right TFT display when reverse gear is engaged. This screen page, which continues to be displayed until reverse gear is disengaged, shows the field of vision of the camera mounted on the rear bumper and helps the driver when parking.

The image is integrated with static green, yellow and red grids that indicate the distance of the obstacles that come into the camera's field of vision: the area inside the red grid covers approximately 0 to 60 cm (0-24 in.), the yellow grid 60 to 130 cm (24-51 in.) and the green grid 130 to 190 cm (51-75 in.).

4

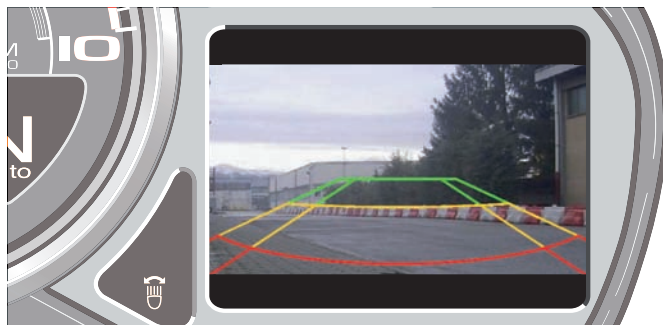



“Dual View Camera” (optional) screen page

If the vehicle has a “Dual View Camera” system consisting of another camera mounted in the front bumper in addition to the rear parking camera, the following views are displayed on the right TFT display:

- central front view with wide-angle lens
- front side angle view

and, with only reverse gear engaged:

- rear view with grids (“Rear Parking Camera”)
- rear view with wide-angle lens.

The view can be selected by pressing button **C** on the dashboard: if the speedometer is displayed on the right TFT display, quickly press button **C** to display the central front view. Press the button again to switch between the two front views available.

The front camera images are not displayed if the vehicle exceeds 12 km/h (7 mph).

When reverse gear is engaged, the “Rear Parking Camera” view is automatically displayed on the right TFT display. With reverse gear engaged, press button **C** to switch between the two rear views available.

To display the speedometer again, hold down button **C** or disengage reverse gear if it is engaged.






Passenger display (optional)

The passenger display **B** (available on request) has been designed to allow the front passenger to participate more in trips and provides access to a number of vehicle parameters which are normally only available to the driver.

The passenger display shows information displayed on the following screens on the instrument panel:

- **Performance:**
engaged gear, RPM, speed
- **TRIP A:**
distance travelled, travel time, average and maximum speed
- **TRIP B (if activated):**
distance travelled, travel time, average and maximum speed
- **Manettino status:**
Manettino position and vehicle parameter status.

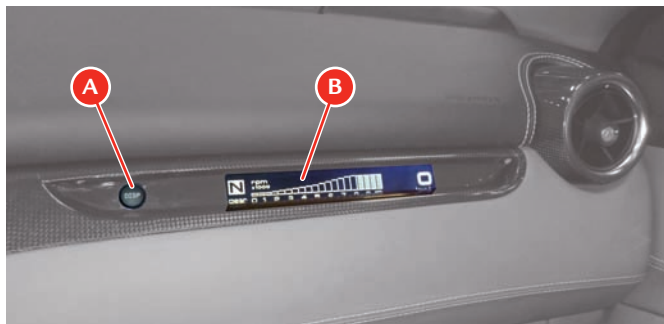

Hold down the **DISP** button **A** to switch the passenger display on and off. Quickly press button **A** to switch from one screen to another.

4





Infotainment system



- 1 Open/close display to access CD/DVD player
- 2 SEEK +/- functions
- 3 Change RADIO/MEDIA mode
- 4 Switch on/off system and volume adjustment
- 5 Activate voice commands

- 6 Activate telephone function
- 7 Call up context/system settings menu
- 8 Call up Navigation mode
- 9 USB/iPod®/iPhone® connector
- 10 AUX connector



Characteristics

The vehicle infotainment system has the following functions:

- 6.5" touchscreen display
- MW/LW/FM radio
- Retractable CD/DVD player
- 40 GB hard disk drive
- USB/iPod®/iPhone® connector
- AUX connector
- Satellite navigator
- Bluetooth connection
- Voice commands.

User interface

The infotainment system information is displayed on the 6.5" display in the centre of the dashboard. Users can interact with the system by pressing the screen which uses touchscreen technology and using the controls located on both sides of the display and behind the steering wheel.

Warning



Do not touch the display with hard or sharp objects because they may damage the touchscreen surface.



Controls on dashboard

1) open/close display

Press button 1 to open or close the display. After opening the display, it takes a few seconds to eject any CD/DVD that is in the player.

Important note



When placing a disc in the player slot, make sure the label is facing upwards.

The display closes automatically after inserting the disc.

Important note



It may take a few seconds to recognise the type of disc inserted (CD, DVD, MP3, etc.).

2) SEEK

Press buttons 2 (SEEK +/SEEK -) to search for radio stations on LW, MW or FM or search for tracks in MEDIA mode.

3) RADIO/MEDIA

Press button 3 to go from RADIO mode to MEDIA mode and vice versa.

4) ON/OFF and volume control

Press control 4 to switch the system on or off. Turn it to adjust the volume.

5) activate voice commands (Voice Recognition)

Press button 5 to activate the voice commands. Before issuing a voice command, wait for the confirmation beep.

6) activate telephone function

Press button 6 to activate the telephone function. If there are no paired devices, pair a new telephone (see page 151).

7) call up context menu

Press button 7 to call up the context and system settings menu.

8) Navigation mode

Press button 8 to call up the Navigation mode. With Navigation mode activated, press button 8 to go from the Navi menu to the Map and vice versa.

9) USB/iPod®/iPhone® connection

Lift flap 9 to access the USB connection. For more information on the supported devices and the second USB connection on the passenger side dashboard, see page 147.

10) AUX connection

The AUX connection 10 can be used to connect external audio devices.



Controls on the steering wheel


As well as using the commands on both sides of the touchscreen display, the infotainment system can be controlled using buttons located on the back of the steering wheel as indicated by the arrows in the figure.

Buttons **A** and **B** for volume control and button VR/TEL **C** are on the left-hand steering wheel spoke: press button **A** to increase the volume and press button **B** to decrease it. Hold down button **B** to mute the volume (MUTE function). To deactivate volume muting, press button **A**.

Button **C** is used to activate the voice commands; if the voice recognition function is already activated, it can be deactivated by quickly pressing button **C**. If there is an incoming call, quickly press button **C** to accept it or hold it down to refuse it.



The SCAN + **D** and SCAN - **E** buttons are on the right-hand steering wheel spoke. They are used to scan the radio stations (if RADIO mode is activated) or go to the next or previous track (if MEDIA mode is activated). The SOURCE **F** button is used to select the available sources (MW, LW, FM, DISC, HDD and AUX).

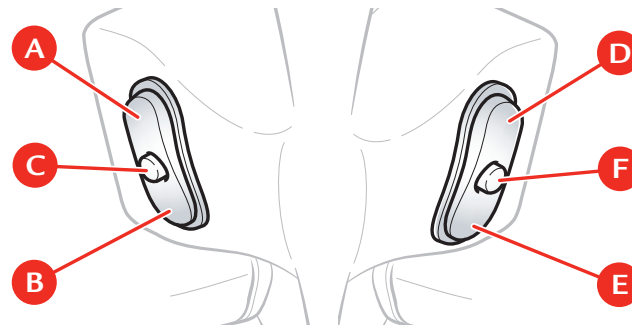



Repetition on display of infotainment system information

You can select whether to also display infotainment system information on the right TFT display of the instrument panel via the MENU function on the left TFT display (see page 108).

If repetition is activated, the information is displayed in minimised form in the bottom part of the right TFT display as shown in the figure below (example with “Audio” and “Navigation” repetitions activated).

To activate/deactivate repetition of infotainment system information, call up the MENU screen page using the controls on the dashboard to the left of the steering wheel and select the item “Display setup”, and select either ON or OFF for repetition of audio information (“Audio repetit.”), the telephone function (“Tel. repetition”) and navigation (“Nav. repetition”).



System settings

Press the MENU button to the right of the display.


Audio control

Press the electronic “Audio Control” button to adjust the balance, fading and equalisation of the Hi-Fi system.

Daytime/nighttime colour mode and adjusting brightness

In the top right of the display, press the electronic “Display Setting” button to set display brightness. Select “Daytime Colours” to activate the daytime mode or “Nighttime Colours” to activate the nighttime mode. In both cases, the brightness can be adjusted using the electronic UP and DOWN buttons on the right of the display.

If “Auto Colour Mode” is selected, the display automatically adopts daytime or nighttime mode depending on the ambient light or how the vehicle light switch is set (see page 164).

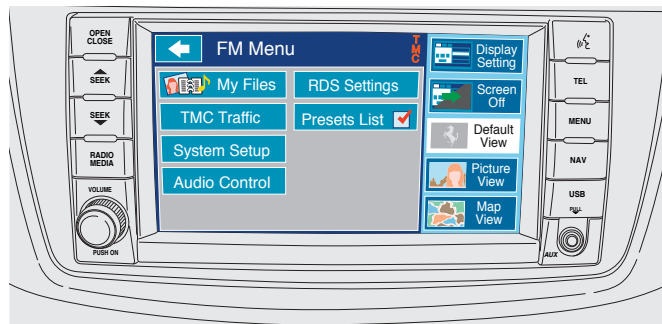




Display mode: Default/Picture/Map

While using the RADIO or MEDIA functions, the system displays three types of information on the right of the display: the FERRARI logo (Default display); an image selected from those on the hard disk (Picture display) or the Navigation system map (Map display).

To select the desired mode, once you have pressed the MENU button, select one of the three electronic buttons, “Default View”, “Picture View” or “Map View”, on the left of the display.

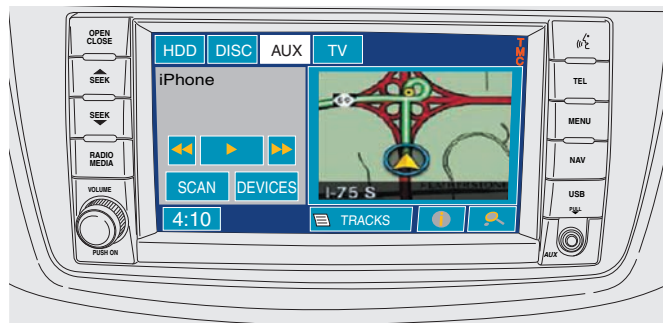

RADIO function


In RADIO mode you can select the three frequency bands available by pressing the electronic buttons, MW, LW and FM displayed in the top left of the display.

Once you have selected the desired band, you can change the station you are listening to using the SEEK + and SEEK - buttons to the left of the display, the electronic “SCAN” and “DIRECT TUNE” buttons or the left and right arrows.

Storing radio stations

You can store 12 radio stations for each band: to display the list of stored stations, press the electronic “PRESETS” button in the bottom of the display. The list of 12 preset stations is divided into three parts: to scroll through the list, use the UP and DOWN arrows.

To store a new station, once you have tuned in, press one of the 12 preset stations for approximately 2 seconds until you hear a confirmation beep.

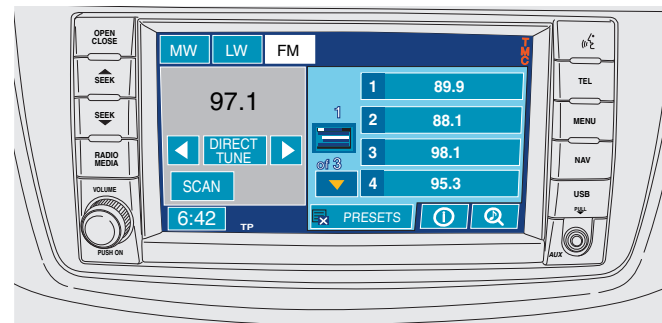

4



MEDIA function

Four different Audio/Video sources are available in MEDIA mode: disc (DISC), Hard Disk (HDD), AUX (if an external device is connected via USB, AUX cable or Bluetooth connection), and TV (optional).

To select the desired source, press the electronic buttons displayed in the top left of the display.

Disc mode (DISC)

The system has a retractable CD/DVD player: to access the player and insert a disc, press the OPEN/CLOSE button to the right of the display.

Important note



When placing a disc in the player slot, make sure the label is facing upwards.

The display closes automatically after inserting the disc.

Warning



The player only accepts 12 cm (4 3/4 inch) discs. The use of different-sized discs may damage the player mechanism.

After opening the display, it takes a few seconds to eject any CD/DVD that is in the player. If the disc is not removed within 10 seconds, the unit will reload it.

The system can play compact discs (CD), recordable compact discs (CD-R) and rewritable compact discs (CD-RW), DVD-Rs, DVD+Rs, DVD-RWs and DVD+RWs.

The system plays these formats: MP3, WMA, CD Audio, DVD Audio and DVD Video, DVD-ROM, DVD Plus, DualDisc, SA-CD (CD Layer).

Insert supported CD/DVD formats only.

The formats SACD (SACD Layer) VCD, SVCD and VCD on MPEG-4 DVDs are not supported.

Important note



It may take a few seconds to recognise the type of disc inserted (CD, DVD, MP3, etc.).



Playing an audio disc

After inserting an audio disc in the player, the system selects the appropriate mode once it has recognised the disc and starts to play the first track.

To go on to the next or previous track, you can use the SEEK + and SEEK - buttons to the right of the display, the **D** and **E** buttons behind the right-hand steering wheel spoke or the electronic buttons which appear on the display.

To display and run through the list of tracks, press the electronic “TRACKS” button in the bottom of the display.

Playing an MP3/WMA disc

An MP3/WMA disc can contain audio files in a folder structure. By pressing the electronic “TRACKS” button, the list of folders is displayed. To open the folders, press the corresponding symbols.




Playing a video DVD

Important note



You can only watch video DVDs on the infotainment system screen if you stop the vehicle and engage the parking brake. The option is not available in all countries.

Once you have inserted a video DVD in the player slot, playing starts automatically. To watch the video on the screen, press the electronic “VIDEO” button; to view and select the available chapters, press the electronic “CHAPTERS” button.

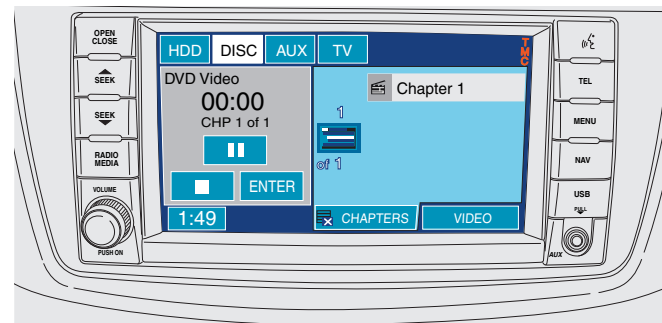

4




Video DVD playing controls

In video playing mode, touch any part of the screen to display the DVD playing controls which include: stop, pause, fast rewind, fast forward, next chapter (“NEXT”) and start of chapter being played/previous chapter (“PREV”).

Video DVD menu

If a video DVD is inserted in the player and you are in disc mode, press the MENU button to the right of the display to display the video DVD menu. To set the DVD parameters, press the electronic “DVD Setup” button.

The parameters which can be configured are: “Menu Language”, “Audio Language”, “Subtitles”, “Camera Angle” and “Brightness”.

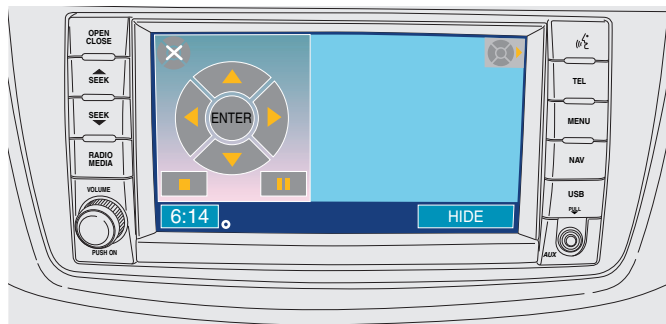

Hard Disk (HDD) mode

The Hard Disk (HDD) mode provides access to the audio files in the 40 GB hard disk which is part of the system.

Playing audio tracks is the same as the disc mode except that the internal hard disk can contain more tracks.

Before using the HDD mode, the tracks must be copied onto the internal hard disk.

Copying an audio CD onto the hard disk

To copy an audio CD onto the hard disk, insert the CD and press the electronic “COPY” button.

The progress of the copying tracks on the CD process is shown on the display.

Important note



During the copying procedure, the audio CD cannot be played but you can use the RADIO function.

Important note



When an audio CD is copied onto HDD, the audio files are converted from Audio CD to WMA. Audio DVDs cannot be copied onto HDD.



Copying files from a WMA/MP3 CD or USB device onto the Hard Disk

The system allows you to select the individual tracks you want to copy onto the hard disk from a WMA/MP3 CD or from an external USB device: insert a WMA/MP3 CD or a USB device and press the MENU button to the right of the display. Select the items on the display “My Files”, “My Music”, “Add Music Files to HDD”, “From disc” or “From USB” and then select the folders or tracks you want to copy onto HDD. Once you have completed the selection, press the electronic “DONE” button to start the copying process.

Important note



Some MP3 players do not allow tracks to be copied onto other devices.

External device mode (AUX)

In AUX mode, you can play audio files stored on external devices. These can be connected to the system via the two USB connectors located to the right of the display and (if present) on the passenger side dashboard respectively, the AUX connector to the right of the display or the Bluetooth connection once the device has been paired (audio streaming).


USB/iPod®/iPhone® connection

The USB connector to the right of the display has a small cover to protect it from dust or damage. To access the connector, put your finger under the arrow indicating the opening and pull.

If the vehicle does not have the “passenger display” option (see page 137), there is a compartment with a second USB connector **G** on the passenger side dashboard. To open the compartment and access the connector, press on the left-hand side of the flap.

Using the two USB connectors, you can also play audio files from iPod® and iPhone® devices using the special USB cable supplied with the device.

4

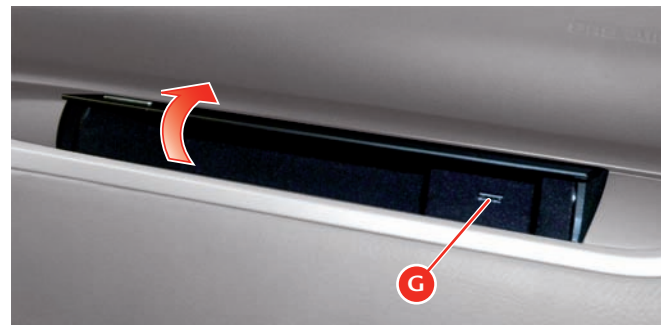



AUX connection

The AUX connector is used to connect the headphone output of an external audio device (e.g. MP3 player) to the system and play the tracks. To connect the device, insert a 3.5 mm stereo mini-jack cable (not supplied with the vehicle) in the connector located to the right of the display and in the device headphone connector.


When the cable is connected, the system automatically goes into AUX mode.



Bluetooth connection (audio streaming)

The audio files on mobile telephones paired via Bluetooth can be played by the system in audio streaming. For further information on pairing a mobile phone to the infotainment system, see page 151.

Playing tracks is the same as other external devices connected via USB connection or AUX cable.

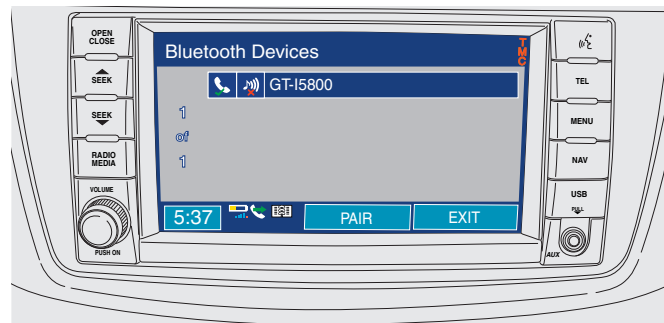



Navigation function (NAV)

Press the NAV button to the right of the display to go to Navigation mode. Press the NAV button again to switch from the Main Menu to the Map and vice versa.

Entering a new destination


To enter a new destination, access the main NAV menu and press the electronic “New Destination” button. The options available appear on the display: the destination can be entered by selecting it from the places or addresses previously saved (“Favourite Places” or “Address Book”), by pressing on a section of road or on an icon displayed on the Map (“Point on Map”) or by selecting a route previously saved (“Saved Trails”).

To enter the destination by manually entering the address, press the electronic “Street Address” button. To change the country, press the button with the name of the country currently selected in the bottom of the display.

Select a country from the list and press “CHANGE”. Once the country has been set, press “Input Street”. A keyboard appears on the display which you can use to enter the name of a street located in the set country. As you type in the name, the number of possible roads decreases: to display a list of possible street names, press “LIST”. Once you have selected the road, enter the number and then press “CONTINUE”. If the number is not entered, the navigator takes you to the part of the street nearest to the current position.

On the “Confirm Route to” screen, you can change the destination by going back to the previous screens or pressing the arrow in the top left of the display. Otherwise, press “GO” to start the guided tour.

4

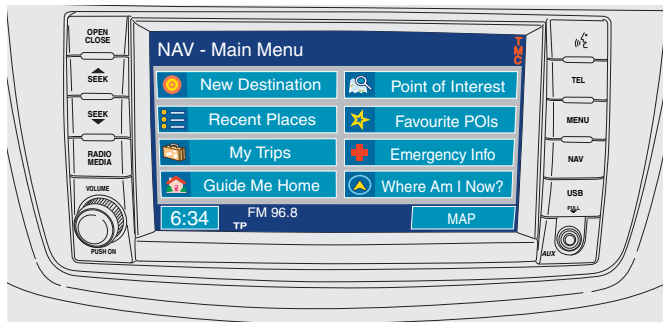



Voice Recognition (VR)

The Voice Recognition (VR) system controls the Radio, Media, Navigator and Telephone functions by using simple voice commands.

To activate the voice commands, press the button (5) to the right of the display (see page 138). Once the confirmation beep has been emitted, you can issue commands. If no command is given after a few seconds, the system scans the list of available options and displays the most important ones on the display.

To stop the system while it lists the options, press button (5) again, wait for the acoustic signal and issue the command. Each time the system does not recognise a command, it will ask you to repeat it.

The universal commands which can be given regardless of the function in use are: CANCEL, REPEAT, HELP and MAIN MENU. All the other commands can be used according to the application in use at that time.

Voice training

If you have problems getting the system to recognise your own voice commands, you can use the voice training function.

Press button (5) to activate the VR function, say “start voice training” and repeat the words and phrases when the system prompts you to do so. To achieve the best results, the voice training session should be performed when the vehicle is parked, the engine is running, all windows are closed and the air conditioning and heating system is off.

If the system does not recognise the words “start voice training”, press the MENU button to the right of the system and then the electronic “System Setup” and “Voice Recognition” buttons.



Telephone function

The telephone function is a hands-free in-vehicle communications system which allows you to dial a phone number with your mobile phone using simple voice commands or the electronic keyboard that appears on the display.

To use the telephone function, you must first of all pair a Bluetooth-compatible mobile phone.

You can pair up to seven mobile phones to the system. However, only one mobile phone connected to the system can be in use at any given time.

Important note



For an up-to-date list of compatible phones, contact the **FERRARI SERVICE NETWORK**.



Pairing a Bluetooth telephone/device

Press the MENU button to the right of the display and then press the electronic “System Setup” and “Device Pairing” buttons. A list of the Bluetooth devices already connected appears on the display.

To pair a new device, press “PAIR”. Using the keyboard on the display, enter a 4-digit pairing PIN and then press “PAIR” again: the pairing process begins. For further information, refer to the User's Manual for your phone to complete the procedure.

Once pairing has been completed, you are then asked to assign a priority level between 1 and 7 (with 1 being the highest priority) and a name to the device which has just been paired.

Making a call

To make a call, you can use the voice commands or manually type in the phone number using the keyboard that appears on the display.

Press the TEL button to the right of the display to activate the Telephone function voice commands: if no command is given after a few seconds, the system scans the list of available options.

If you want to manually dial the number, press the TEL button and then press the electronic “DIAL” button in the bottom of the display to display the keyboard. Dial the number and press the electronic “CALL” button.

4



Rear Seat Entertainment (optional)

On request, the vehicle comes with a rear seat entertainment system which includes:

- Two LCD screens mounted on the front headrests
- TV tuner (DVB - Digital Video Broadcasting)
- 6 CD/DVD changer in the luggage compartment
- Two wireless headphones
- Remote control
- RCA connection for audio/video sources.

To switch on the LCD screen, hold down the POWER button under the screen. Press the SELECT button to select the desired function - DVD, AUX (audio/video devices connected via RCA connection) and TV.

To display and select the video DVD chapters or change channel on the Digital TV, use the remote control supplied with the system.


The volume can be adjusted using the controls on the wireless headphones supplied with the system.

The 6 CD/DVD changer is on the right-hand side of the luggage compartment: to access it, open flap **H** by pulling the indicated tab.

Warning



The player only accepts 12 cm (4 3/4 inch) discs. The use of different-sized discs may damage the player mechanism.

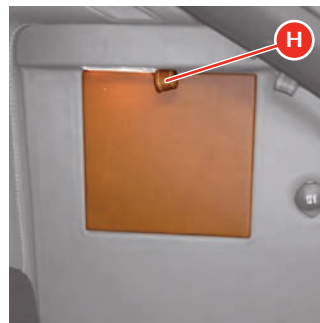



The RCA connection **L**, which can be used to connect audio/video devices, is located in the oddment storage compartment under the rear armrest.

4





Cruise Control (optional)

The Cruise Control is an electronic device designed to help the driver drive at a constant speed of between 50 km/h and 220 km/h (31-137 mph) without having to keep the accelerator pedal pressed.

Important note



We recommend only using the device on long, dry stretches of road requiring few gear changes (e.g. motorways). Do not use the device for city driving.

Important note



PIT SPEED is a term taken from the motor sports world used by FERRARI to indicate the speed memorised using the device and does not endorse inappropriate behaviour on the road which does not comply with Traffic Regulations.



Activating the device

To activate the device, hold down control **A** for at least 2 seconds.

When it is activated, a warning light comes on on the instrument panel (see page 130), and a “Cruise Control ON” message accompanied by a special symbol appears on the left TFT display for 5 seconds.

The device cannot be activated when reverse or 1st gear are engaged.

When going down slopes with the device on, the vehicle speed may be slightly higher than the memorised speed.

Memorising the speed

Proceed as follows:

- with the device activated, bring the vehicle to the desired speed by pressing the accelerator pedal;
- turn control **A** clockwise (+) for at least 3 seconds and then release it: the speed of the vehicle is memorised and you can release the accelerator pedal.

If necessary, you can accelerate by pressing the accelerator pedal: when the pedal is released, the vehicle will return to the previously memorised speed.

Resetting the memorised speed

If the device has been turned off by pressing the brake pedal, the memorised speed can be reset as follows:

- gradually accelerate until the vehicle reaches a speed which is close to the memorised speed;
- quickly press control **A**.



Increasing the memorised speed

This can be done in two ways: by pressing the accelerator and memorising the new speed reached or by turning control **A** clockwise (+).

One turn of the control corresponds to an increase in speed of about 2 km/h (1.2 mph); if the control is kept turned on the other hand, the speed continually increases.

Reducing the memorised speed

This can be done in two ways: by deactivating the device and then memorising the new speed or by turning control **A** counterclockwise (-).

One turn of the control corresponds to a decrease in speed of about 2 km/h (1.2 mph); if the control is kept turned on the other hand, the speed continually decreases.

Deactivating the device

Hold down control **A** for at least 2 seconds or turn the ignition key to position **0**. The device is also automatically deactivated by pressing the brake pedal.

When it is deactivated, the warning light on the instrument panel goes out and a "Cruise Control OFF" message accompanied by a special symbol appears on the left TFT display for 5 seconds.

Warning



While driving with the device activated, do not put the vehicle into "N" (neutral).

Warning



If the Cruise Control is malfunctioning or faulty, deactivate the device and contact the **FERRARI SERVICE NETWORK**.



Controls on the steering wheel

Start button

Press the ENGINE START button **A** to start the engine. When the engine has started, release the ENGINE START button.

Do not hold the ENGINE START button down for a long time.

For more information on starting the engine, see page 171.

“Manettino” driving mode control switch



The driver can select the desired driving mode by using the “Manettino” **B**.

The driving mode selected does not exempt the driver from complying with the rules of safe driving.

Important note



In the event of a failure of one of the onboard systems, signalled by the special symbol on the left TFT display, the Manettino” moves to a “recovery” position, but still allows the vehicle to be driven. In these cases, contact the FERRARI SERVICE NETWORK.

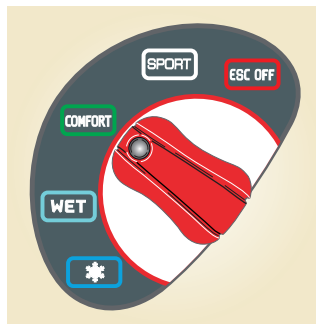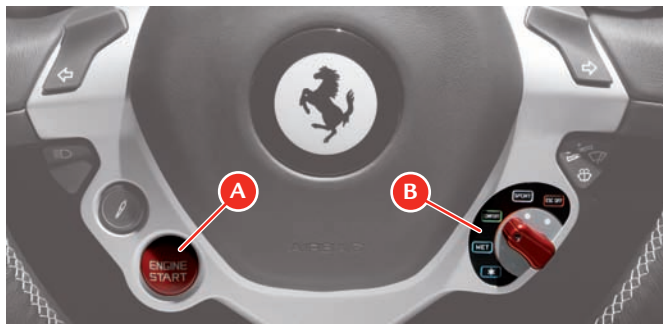



Driving modes that can be selected with “Manettino”

ICE mode

Performance optimised to obtain maximum stability and improved traction in very low-grip conditions (snow or ice).

WET mode

Ensures stability on dry as well as on wet roads. Recommended in low-grip conditions (rain).

COMFORT mode

This mode offers an optimal compromise between performance and comfort and is recommended for everyday driving in medium-high grip conditions.

SPORT mode

This mode is for sports-style driving in high-grip conditions. This mode is designed to ensure stability only in medium-high grip conditions.

ESC OFF mode

In this mode, the ESC system is disabled: it allows the driver complete freedom and control of the vehicle for track use. No electronic systems other than the 4WD system and the E-Diff control vehicle stability.

Warning



In low- to medium-grip conditions (e.g. wet, icy, sandy roads), do not deactivate the **ESC** system.

For further information on the driving modes that can be selected, refer to the paragraph “Driving using the driving mode control switch” on page 184.



Suspension damping delink button

By pressing button **C** on the left of the steering wheel, the driver can choose to separate the suspension damping control from the logic of the “Manettino” driving mode control switch.

For further information, see page 188.



Horn control

The horn sounds when you press on the horn symbol on the steering wheel rim.





“UP” shift paddle

Pull the right-hand **UP** paddle towards the steering wheel to shift gears up.

“DOWN” shift paddle

Pull the left-hand **DOWN** paddle towards the steering wheel to shift gears down.



Windscreen washer/wiper lever

Important note



The windscreen wipers and washer only work when the ignition key is in position **II**.

The windscreen wipers and washer are operated using lever **A** on the steering wheel: the lever must be pressed towards the dashboard or pulled back according to the function you require.

The windscreen wipers have 4 different speeds:

OFF Windscreen wipers stationary.

AUTO The rain sensor adjusts the windscreen wiper timing to the intensity of the rain.

- 1 Slow continuous operation
- 2 Fast continuous operation

4





With the wipers stationary (**OFF**), quickly pressing lever **A** towards the dashboard activates the windscreen wipers in **AUTO** speed.

With the wipers on, quickly pressing the lever towards the dashboard increases windscreen wiper speed (from **AUTO** to **1**, from **1** to **2**).

With the wipers set to **AUTO** or **OFF**, holding the lever towards the dashboard activates maximum speed (**2**). With speed **1** or **2**, on the other hand, the windscreen wipers stop.

With the wipers on, quickly pulling lever **A** back decreases windscreen wipers speed (from **2** to **1**, from **1** to **AUTO**, from **AUTO** to **OFF**).

With the wipers stationary, quickly pulling the lever back activates fast temporary operating of the wipers (antipanic wiping).

The windscreen wiper speed is indicated in the top of the left TFT display as shown in the figure below.



Important note



Windscreen wiper operating is always guaranteed even if there is an electronic system failure. If there is a failure, the windscreen wipers can be activated by pressing lever **A** and deactivated by pulling it back.

If there is a particularly serious failure, operating may not be automatically maintained: if this is the case, the windscreen wipers can be kept activated by holding down lever **A**.

Windscreen washer

To activate the windscreen washer, keep lever **A** pulled. When the lever is released, the windscreen wiper returns to the preset speed.

Warning



Do not start the windscreen washer during the cold months until the windscreen has warmed up. If it has not warmed up, the liquid could freeze on the glass and interfere with visibility.

Headlight washer

The headlight washer is activated automatically when the windscreen washer is operated and the low beams are on. The headlight washer and windscreen washer share the same fluid tank and a low fluid level is indicated by the relative symbol on the left TFT display.



Rain sensor

The rain sensor automatically adjusts the windscreen wiper timing to the intensity of the rain. The system is activated by moving the windscreen wiper to **AUTO**.

When operating automatically, the wiper speed ranges from a minimum intermittent setting (one wipe every 5 seconds approx.) when the windscreen is damp to fast continuous operation in heavy rain.

Important note



The rain sensor function is deactivated by turning the ignition key to position **0** and leaving the windscreen wiper in position **AUTO**. To reactivate the system at the next key-on, set the wipers to **AUTO** by quickly pressing the lever **A** towards the dashboard.

Warning



Before cleaning the front windscreen (for example in service stations) make sure the rain sensor is deactivated or that the key is in position **0**. The rain sensor must be deactivated also when washing the vehicle by hand or in automatic car washes.

In case of ice or snow on the front windscreen, do not activate the rain sensor to avoid damaging the wiper motor and/or blades.

Rain sensor failure

If there is a rain sensor failure, indicated by a special symbol on the left TFT display (see page 129) while the windscreen wiper is set to **AUTO**, the wipers will be set to intermittent operation with one wipe every 1 second approximately. If this is the case, we recommend that you deactivate the rain sensor and turn on the wipers, if necessary, in continuous mode.

Important note



If this occurs, contact the **FERRARI SERVICE NETWORK** as soon as possible.



Rear window washer/wiper (optional)

Important note



The rear window wiper and washer only work when the ignition key is in position **II**.

The vehicle can be fitted on request with a rear window wiper/washer. The device is operated from button **B** on the end of the windscreen wiper/washer lever.


Quickly press button **B** to start the rear window wiper in intermittent mode. If the windscreen wiper is operating, when button **B** is pressed, the rear window wiper operates synchronously with the windscreen wiper but the interval between wiper strokes is halved.

To deactivate the rear window wiper, press button **B** again.

The rear window wiper is activated in continuous mode by engaging reverse gear when the windscreen wiper is operating.



When rear window wiper operating is requested by the driver by pressing the relative button, it is indicated in the top of the left TFT display as shown in the figure below.

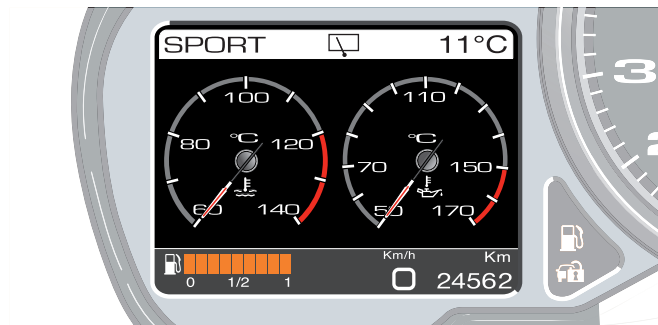



Rear window washer

To activate the rear window washer, hold down button **B**. When washing, the rear window wiper operates in continuous mode. After washing or when the button is released, the rear window wiper does three more wiper strokes in continuous mode and then returns to the preset speed.



Lighting

The external lights and turn indicators only work when the ignition key is in position II.

The external lights can be switched on and off manually or automatically, depending on the ambient light.

Light switch

The switch **A**, on the dashboard to the left of the steering wheel, can be set to five different positions:

- 0** Lights off
-  Running and number plate lights on (*)
-  Low beams on (*)
-  Parking lights
- AUT** Automatic operation of the external lights according to ambient light.

(*) The relative warning light on the instrument panel comes on.



High beams

To turn on the high beams when the light switch **A** is set to , pull back lever **B** on the steering wheel.

When the high beams are on, the relative warning light  on the instrument panel comes on.

Then push lever **B** towards the dashboard or pull it back to turn off the high beams and turn on the low beams.

Flashing the headlights

The headlights can be flashed by pushing the left-hand lever **B** towards the dashboard.

Flashing also occurs with lights off if the ignition key is set to II.

The high beams are used for flashing.





Important note



Follow the Road Regulations of the country you are travelling in for using the high beams.

Parking lights

The parking lights work only with the ignition key in position **0** or with the key removed.

They are activated by turning the light switch **A** to position **P**.

When the parking lights are on, the warning light illuminates on the instrument panel .

When the parking lights are on, hold down one of the two turn indicators **C** buttons on the steering wheel (see page 166) for more than 0.5 seconds to turn on the partial parking lights on the corresponding side; press the same turn indicator again for more than 0.5 seconds to go back to full parking lights.

When the partial parking lights are on (on only one side of the vehicle), the running light warning light  turns off whereas the vehicle symbol indicating which parking light is on (left or right) is displayed on the left TFT display for 10 seconds.

When the light switch **A** is turned to **AUT** and the ignition key is in position **II**, the running lights, low beams and number plate lights turn on and off automatically according to the ambient light detected by the twilight sensor (see page 166).

Important note



The high beams can only be activated manually by pulling back the left-hand lever **B**.

Important note



If the high beam control is activated, the high beams will turn on every time the lights are activated automatically. We recommend therefore that you turn them off every time the twilight sensor deactivates the external lights.

Warning



If there is fog during the day, the running lights and low beams will not be turned on automatically. The driver must always be ready to turn on the lights manually and also the rear fog lights, if necessary.

Important note



After automatic activation of the external lights, it will always be possible to turn on the rear fog lights manually. When the external lights are deactivated automatically, the rear fog lights are also turned off (if active) automatically. Therefore, if necessary, the driver will have to turn on the rear fog lights manually upon the next automatic activation.

4



Warning



The driver is always responsible for turning on the external lights, depending on the ambient light and in compliance with the regulations in force in the country of use. The automatic system for turning on and off the external lights must be considered an aid for the driver. If necessary, turn the lights on and off manually.

Twilight sensor

The twilight sensor is comprised of a global sensor which measures the ambient light upwards.

Sensor sensitivity can be set to three levels: call up the MENU screen page, select the items “Car setup” and “Light sensor” and use the UP and DOWN buttons to select the desired level.

In the event of sensor failure, the system switches on the low beams and running lights, regardless of the daylight conditions; a failure message will appear on the instrument panel display.

The failure indication will be displayed as long as the light switch is turned to AUT. If this occurs, we recommend that you deactivate the automatic system and turn on the external lights manually if necessary.

Important note



If this occurs, contact the FERRARI SERVICE NETWORK as soon as possible.

Day lights

The LEDs on the headlights serve as front turn indicators and day lights. To activate or deactivate the day running lights, call up the MENU screen page on the left TFT display, select the items “Car setup”, “Day lights” and select ON to activate the function and OFF to deactivate it.


Turn indicators

Quickly press the left indicator or right indicator button **C** on the steering wheel to switch on the relevant turn indicator.

The relative warning light  or  on the instrument panel comes on.

The turn indicator goes off when the steering wheel is realigned.

Holding down one of the two **C** buttons (for more than 0.3 seconds) temporarily switches on the relevant turn indicator: it is switched off after 3 flashes (“lane change” function).

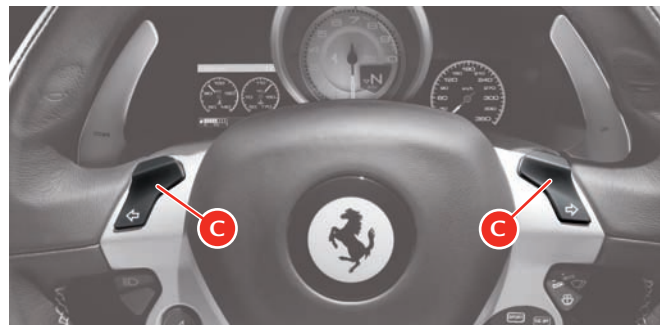




Rear fog lights

The rear fog lights are turned on only if the high beams or low beams are on when button **D** is pressed; the relevant warning light **E** on the instrument panel comes on to indicate that they have been turned on.

Important note



Use the rear fog lights only in poor visibility conditions.

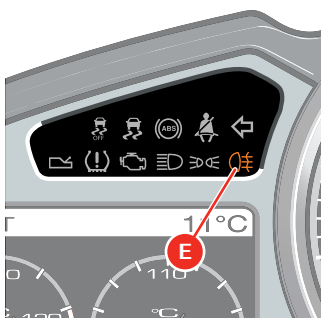

Hazard warning lights

Press button **F** to turn on the hazard warning lights. All the turn indicators will start blinking intermittently; these lights will operate with the ignition key in any position.


When the hazard warning lights are on, the relative warning lights on the instrument panel and the button flash.

To turn them off, press the button again.

“Auto Hazard” function

The “Auto Hazard” function automatically switches on the hazard warning lights in the event of sharp braking.

To activate or deactivate the function, call up the MENU screen page, select the items “Car setup”, “Auto Hazard” and select either “ON” or “OFF”.

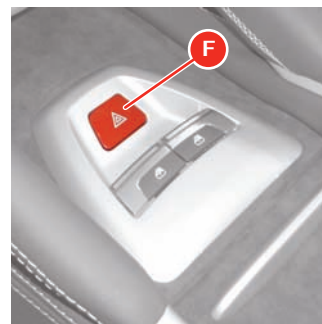



“Follow me home” function

With the “Follow me home” function, the low beams stay lit for a preset period of time once the engine has been turned off and light up the area around the vehicle to help the driver and passengers see their way in the dark.

The function can be manually activated by pressing the high beam/flashing lever **B** (see page 164) when the ignition key is in position **0** or removed, within 3 minutes of switching off the engine (time that is reduced to 30 seconds if the driver- side door is opened). Each time lever **B** is pressed, the period of time that the low beams remain on increases by 30 seconds up to a maximum of 210 seconds.

Each time lever **B** is pressed, the message “Follow me” appears on the left TFT display followed by the preset period of time that the low beams remain on.

AFS2 adaptive headlights (optional)

The AFS2 adaptive headlight system (available on request) enables synchronous movement of the left and right front beams (high and low) and has been designed to illuminate the road better and reduce areas of shadow in the vehicle's trajectory.

The headlights' swivel angle, which ranges from 8° inwards and 15° outwards, is defined by the steering angle.

The AFS2 system also uses a “Dynamic Levelling” device that directs the light beam vertically when accelerating and braking by moving the headlights up to 1.9° upwards when braking and up to 1° downwards when accelerating.

The adaptive headlight system deactivates its corrective action when driving round bends at low speed.



Dome light

When the doors are closed, the dome light **D** on the roof can be turned on or off using the switch **E**.


Switches **F** and **G** turn the driver-side and passenger-side spotlights on and off.

The dome light activates automatically in the following conditions:

- when a door is opened, for approx. 3 minutes
- when all the doors are closed and the key is in position 0, for approx. 10 seconds
- when the key is removed, for approx. 10 seconds
- when the doors are unlocked, for approx. 10 seconds
- when the inertia switch is activated, for approx. 15 minutes.

The dome light deactivates automatically in the following conditions:

- after the preset activation time expires
- when the doors are closed and the key is in position II
- when the doors are locked
- when the inertia switch is reactivated.

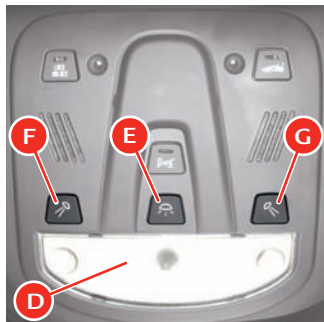

Roof panel controls

Door lock/unlock

Both doors can be locked by activating/deactivating the “LOCK/UNLOCK” **H** button. For further information, see page 94.

Deactivating the anti-lift alarm

Press button **L** to deactivate the anti-lift alarm system. For further information, see page 18.

Front parking sensors (optional)

On vehicles fitted with front and rear parking sensors, the front parking sensors are activated/deactivated by pressing button **M**. When the front parking sensors are activated, the light on the button comes on.





Driving the vehicle

Running-in

The latest manufacturing techniques have allowed us to achieve high precision and accuracy levels in the construction and assembly of components. Nonetheless, the vehicle movable parts undergo a settling process, basically during the first hours of operation.

Engine and transmission

Avoid exceeding 5,000 RPM for the first 1,000 km (620 mi).

After starting, do not exceed 4,000 RPM until the engine has warmed up (oil temperature: 65-70 °C/149-158 °F).

Do not let the engine run at a constantly high speed for a prolonged time.

Warning



BEFORE YOU DRIVE

Check that the seat belts are fastened

Check that the doors are closed

Check that the seat is properly adjusted

Check the rear-view mirror adjustment (central and sides).

Before a trip

Preliminary checks

Check the following at regular intervals and always before long trips:

- tyre pressure and condition
- levels of fluids and lubricants
- condition of the windscreen wiper blades
- proper functioning of the warning lights and external lights.

Important note



In any case, it is advisable to perform these checks at least every 1000 km (620 mi) and always comply with the maintenance schedule.

It is also advisable to:

- clean the glass covers of the external lights and all the glass surfaces
- properly adjust the mirrors, steering wheel, seats and seat belts.

Refilling

Warning



Use unleaded fuel only!

Using leaded fuel would permanently damage the catalytic converters.

For specifications and quantities of lubricants and fluids, refer to the “Refilling” table on page 32.



Starting and driving the vehicle

System start-up

After turning the ignition key to position II (key-on), both TFT displays are activated on the instrument panel and system diagnosis is performed. During diagnosis, which lasts 5 seconds, a check is performed on the warning lights on the panel and the presence of any faults is checked.

If diagnosis detects any errors, they are only displayed once the 5 seconds required for the check have elapsed. The cases listed below are an exception and errors are displayed as soon as the key is turned to on, even during diagnosis:

- Low engine oil pressure (see page 125)
- Inertia switch triggered (see page 124)
- Electronically controlled gearbox safety warnings
- Deactivation of EPB warning (see page 190).

If the next scheduled maintenance deadline is approaching, each time the key is turned to on, information on scheduled maintenance is automatically displayed after diagnosis. For further information, refer to the “Maintenance Schedule” paragraph on page 260.

Finally, each time the key is turned to on, the message for activation of the alarm when an intrusion has been attempted (see page 19) is also displayed (after diagnosis).

Once the system check has been completed, the gearbox display is activated and the letter “P” (Parking) or “N” (Neutral) will be displayed.


Important note



BEFORE YOU DRIVE

If the warning light A does not turn off after diagnosis, indicating a fault in the gearbox also shown by the symbol and special message on the left TFT display (see page 130), contact the **FERRARI SERVICE NETWORK**.

4

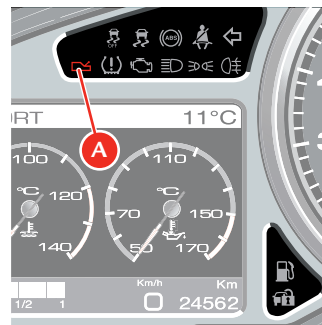



Important note



The vehicle is equipped with an electro-hydraulically controlled gearbox system operated by means of paddles on the steering wheel.

The default setting for the DCT gearbox is always “Automatic” mode (see page 176).

Every time the vehicle is started, the DCT gearbox is in “Auto easy exit” mode (see page 176) unless the vehicle was in “Automatic” mode when the engine was turned off.

To exit the “Auto easy exit” mode operate the **UP** and **DOWN** paddles (while the vehicle is moving) or press the **AUTO** button on the centre console.

Important note



Immediately release the **UP** and **DOWN** paddles or button **R** after the gearbox display shows that the gear has been engaged; a prolonged manoeuvre would cause the gearbox failure warning light to turn on (see page 130) and triggering of the buzzer.

Important note



None of the gears can be engaged if the luggage compartment lid is open or not properly closed. When the vehicle is stationary, with the driver-side door open or not properly closed and the brake pedal released, the system disengages the gear engaged after approximately two seconds.

Starting the engine

Before starting the engine, make sure that the alarm system and all electrical devices with high power absorption are turned off.

- Make sure that the electric parking brake is applied and that the doors are closed.
- Hold the brake pedal down when starting the engine.

Warning



Do not press the accelerator pedal.

- Turn the ignition key to position **II** and wait for the gearbox display to come on.
- Press the **ENGINE START** button (see page 156) and release it as soon as the engine starts.

Do not hold the **ENGINE START** button down for a long time.

If the engine does not start, turn the key back to position **0** and wait for the gear display to go off before retrying.

Warning



Hold the brake pedal down while starting the engine.



If the engine fails to start after several attempts, check for one of the following causes:

- insufficient speed of the starter motor (flat battery)
- ignition device faulty
- electrical contacts faulty
- fuel pump fuses blown.

Warming up the engine

Do not run the engine at high speed until the engine oil temperature has reached at least 65-70 °C (149-158 °F), approximately.

Starting the vehicle

With the engine started, the vehicle stationary and the brake pedal pressed, pull the right-hand **UP** paddle towards the steering wheel to engage **1st** gear.

Release the brake pedal and press the accelerator to start off.

With the engine running and the vehicle stationary, you can change directly from **1st** or **2nd** gear to “**R**” (reverse) by pressing **R** on the centre console and from reverse to **1st** by moving the **UP** paddle.



Warning



If the **UP** and **DOWN** paddles are not working, the message “Depress brake pedal and press LAUNCH to engage gear” will appear on the left TFT display; you can therefore engage the gear by pressing the **LAUNCH** button on the centre console (see page 157) and the brake pedal.

In these cases, the “Launch Control” function is not available.

If the engaged gear was **R**, the **LAUNCH** button must be pressed twice to engage **1st** gear.

Important note



When reverse is selected, an acoustic safety signal beeps intermittently as long as “**R**” is engaged.

4

If the system automatically selects **2nd** gear when attempting to shift from “**R**” to **1st** gear, this indicates that **1st** gear has jammed. Therefore, this is not a malfunction since it is part of the system operating logic. For the same reason, when shifting from **1st** gear to “**R**”, the system will automatically engage “**N**” if the gear has jammed.

During prolonged stops with the engine running, it is advisable to keep the gearshift in “**N**”.

Important note



If you allow the vehicle to move forward in **N**, when **UP** or **DOWN** is requested, a gear will be engaged that corresponds to the speed of the vehicle.



UP-shifting

Use the right-hand **UP** paddle without releasing the accelerator pedal.

An “**UP**”-shift request is not accepted when engagement of the requested gear forces the engine to underrev or if an “**UP**”-shift is already in progress because of engine overrevving.

In any event, it is advisable to:

- Shift gears without releasing the accelerator pedal if pressed.
- Wait until gearshifting has been completed before requesting the next shift, avoiding a rapid sequence of multiple requests.

UP-shifting due to overrevving

The system “automatically” engages a higher gear if the accelerator pedal is pressed and the engine approaches the “runaway speed rate” (overrevving).

Important note



This will not occur when the system is in “COMFORT”, “SPORT” and “ESC OFF” driving mode.

DOWN-shifting

Use the left-hand **DOWN** paddle without releasing the accelerator pedal.

A “**DOWN**”-shift request is not accepted if engagement of the requested gear forces the engine beyond a certain RPM, depending on the gear requested, or if a “**DOWN**”-shift is already in progress because of engine underrevving.

In any event, it is advisable to:

- Shift gears without releasing the accelerator pedal if pressed.
- If **DOWN**-shifting is requested to start overtaking which requires quick acceleration, press the accelerator pedal just before using the paddle.
- Wait until gearshifting has been completed before requesting the next shift, avoiding a rapid sequence of multiple requests.

DOWN-shifting due to underrevving

- The system shifts down “automatically” if the engine goes below a minimum number of revs (1250 RPM).
- The “**DOWN**”-shift request from the paddle is ignored if gearshifting is already in progress due to engine underrevving.

Sequential downshifting

During deceleration, with the brake pedal pressed and the ABS system disabled, sequential downshifting can be performed by holding the left-hand “**DOWN**” paddle down.

The sequential gearshifting request is accepted until the second gear is engaged.

This system is only activated when the “Manettino” is set to COMFORT, SPORT or ESC OFF.



“N” (Neutral) request

With the engine running, pull both **UP** and **DOWN** paddles towards the steering wheel at the same time without pressing the brake pedal to request neutral “N”.

If necessary, “N” can be requested at any speed. Subsequently, if an “**UP**” or “**DOWN**” shift is requested, the system will engage the gear most suited to the speed of the vehicle.

Stopping the vehicle

When the vehicle stops, the system automatically engages **1st** gear unless Neutral has already been requested.

When the vehicle is stationary and the engine is running, hold the brake pedal down until ready to move off again.

Switching off the engine

The engine can be switched off with the gearbox either in “N” or with a gear engaged.

After turning the ignition key from position **II** to position **0**, the gearbox display will remain on for a few more seconds to display the engaged gear. If the gearbox is in “N” a buzzer will sound. Before switching off, the letter “**P**” is displayed on the gearbox display to inform the driver that the Park Lock has been activated.

Warning



Never leave the vehicle with the gearbox in “N”. Always make sure that the letter “**P**” (Parking) appears on the gearbox display.

Warning



Never leave the vehicle with the engine running.

Important note



If the vehicle is not in Parking mode (the letter “**P**” must be displayed on the gearbox display), the key cannot be removed.

For information on the Park Lock, see page 192.



“Automatic gearbox” mode

The “Automatic gearbox” mode is enabled/disabled by pressing the **AUTO C** button on the centre console. When the “Automatic” mode is enabled, the word “auto” appears on the gearbox display. To exit the “Automatic” mode, you must press the **AUTO** button until the word “auto” on the gearbox display disappears.

When the “Automatic Gearbox” mode is enabled, the system will automatically UP-shift and DOWN-shift according to vehicle speed, engine revs and the torque/power request of the driver.

When you are in “Automatic” mode, you can however manually shift gears using the **UP** and **DOWN** paddles. The system remains in “Automatic” mode: this is indicated by the word “auto” that remains on the gearbox display in flashing mode when the paddles are used.

When the vehicle is stationary, a “N”, 1st gear or “R” request will not result in a change from “Automatic” to “Manual”.



“Auto easy exit” mode

Every time the vehicle is started, the gearbox starts in “Auto easy exit” mode unless it was in “Automatic” mode when the engine was turned off. In this case, it remains in “Automatic” mode the next time the engine is started.

Activation is signalled by the word “auto” and an arrow ▼ in the gearbox display.

In this mode, the system will automatically UP-shift and DOWN-shift according to vehicle speed, engine revs and the torque/power request of the driver.

To exit the “Auto easy exit” mode and go to “Manual” mode, operate the **UP** or **DOWN** paddle (while the vehicle is moving) or press the **AUTO** button on the centre console.

If the “Automatic” gearbox mode is then requested by pressing the **AUTO** button, the system will apply all the characteristics of the “Automatic” gearbox mode.

Push start

Warning



Push starting is not allowed.



Safe driving

For safe driving, it is essential that the driver be aware of the best driving techniques suited to various circumstances. Always try to prevent dangerous situations by driving with caution.

Before you drive

- Adjust the position of the seat, steering wheel and rear-view mirrors, in order to obtain the best driving position.
- Adjust the backrest so that your chest is upright and your head is as close to the headrest as possible.
- Ensure that nothing (e.g. mat covers, etc.) is blocking the pedals.
- Check that the lights and headlights are working properly.
- Ensure that any child restraint systems (e.g. child seats, cradles etc.) are properly fixed on the passenger seat.
- Your reflexes are quicker if you eat lightly before driving: avoid heavy meals before a trip.
- Do not drink alcoholic drinks before and during the journey.

At regular intervals, check the following:

- Tyre pressure and condition.
- Engine oil level.
- Engine coolant level and system condition.
- Brake fluid level.
- Steering fluid level.
- Windscreen washer fluid level.

While travelling

- Caution is the number one rule for safe driving, which also means you should take other people's behaviour into consideration.
- Follow the Road Regulations in force in the country you are driving in and always respect the speed limit.
- Always make sure that the driver and passengers have their seat belts fastened and that all children are travelling in suitable child seats.
- Good personal physical conditions ensure you can drive long distances safely.

Warning



Driving under the influence of drugs, some medicines and alcohol is dangerous to yourself and others as well as contravening road regulations and legal norms.

Travelling without your seat belt fastened increases the risk of serious injury and death in the event of a collision. Always fasten seat belts and use child seats, if present.

Do not travel with objects lying on the floor, especially in front of the driver's seat: in the event of braking, these could slide under the pedals, making it impossible to brake or accelerate.

Additionally, ensure that any loose floor mats sit correctly.

Water, ice and salt spread on icy roads may deposit on the brake discs and reduce the efficiency of the initial braking.



- Make regular stops to loosen up your limbs and refresh yourself, and avoid driving for hours on end.
- Keep a constant air circulation in the passenger compartment.
- Never coast downhill with the engine off: in these conditions the engine brake, servo brake and power steering are inefficient, braking requires greater pressure on the pedal and steering will be harder.

Driving at night

When you are travelling at night, follow these fundamental rules:

- Reduce speed, particularly on dark roads.
- Driving conditions are more demanding at night, so take particular care.
- If you start feeling tired or sleepy, stop immediately: to continue driving would be a risk for yourself and for others. Continue only after you have had a rest.
- At night, it is difficult to judge the speed of vehicles in front of you as you can only see their taillights: keep at a greater safety distance than you would during the day.
- Use the high beams only outside of urban areas and when you are sure that they will not disturb other drivers.
- Turn off the high beams when you see oncoming vehicles and use the low beams.
- Keep the lights and headlights clean.
- Watch out for animals crossing the road when travelling outside urban areas.

Driving in the rain

Rain and wet roads can cause hazardous situations.

All manoeuvres are more difficult on a wet road since tyres have significantly less grip on the road. This means that the braking distances increase considerably and road-holding decreases.

Here is some advice for driving in the rain:

- Slow down.
- Keep a greater safety distance between yourself and the other vehicles and reduce your speed.
- When it is raining very hard, visibility is also reduced. In these cases, to make yourself more visible to others, turn on the low beams even during the day.
- Drive through puddles at low speed to avoid losing control of the vehicle (“aquaplaning”): if this occurs, grip the steering wheel firmly.

Warning



If the road is wet, reduce your speed to avoid “aquaplaning” (when the tyre no longer touches the road surface because the side channels of the tyre tread are not capable of removing all the channelled water due to their particular shape or insufficient depth and a layer of water is placed between the road surface and the tyre. The fluid pressure generated is so high that it supports the vehicle's weight making it virtually impossible for the driver to control the vehicle).



- Use the ventilation system to demist the windscreen (see page 210) and avoid visibility problems.
- Periodically check the condition of the windscreen wiper blades.

Driving in fog

Whenever possible, avoid travelling if there is thick fog. If you have to drive in misty conditions, or if there is thick fog or fog banks, follow these rules:

- Keep a moderate speed.
- Turn on the low beams, also during the day, and use the rear fog light. Avoid using the high beams.

Warning



On stretches where visibility is good, turn off the rear fog light, it may be annoying for the occupants of the vehicles behind you.

- Remember that fog makes the road damp and therefore all manoeuvres are more difficult and braking distances are longer.
- Keep a safe distance from the vehicle in front of you.
- As far as possible, avoid suddenly changing speed and direction.
- As far as possible, avoid overtaking.
- In the event of an emergency stop, (e.g. failures, inability to proceed due to poor visibility conditions, etc.) try to free the main driving lane. Then turn on the hazard warning lights and, if possible, the low beams. On approaching another vehicle, sound the horn rhythmically.

Driving on mountain roads

Below is some advice for driving on steep mountain roads:

- To prevent the brakes from overheating when driving downhill, use the engine to brake by engaging a lower gear.
- Never coast downhill or drive downhill with the engine off or in neutral, nor with the ignition key removed from the steering column.
- Drive at a moderate speeds and do not “cut” corners.
- Remember that overtaking uphill is slower and requires a longer free stretch of road. If you are overtaken when driving uphill, ensure that the other vehicle can pass easily.

Driving on snowy or icy roads

Below is some advice for driving in these conditions:

- Keep a very moderate speed.
- Keep a safe distance from the vehicles in front of you.
- Fit snow tyres approved for the vehicle.
- Given the poor grip, use the engine brake as much as possible and avoid sudden braking.
- Avoid sudden acceleration and sharp changes in direction.
- During the winter season, even apparently dry roads can have icy sections.

Therefore, be careful when driving along stretches of road in the shade as there may be icy patches.



Driving with the “ABS” braking system

The ABS system assists the driver as follows:

- It prevents the wheels from locking and skidding during emergency braking, particularly in low-grip conditions.
- It allows braking and changing direction at the same time. This feature is affected by the physical limits and lateral grip of the tyres.
- When the ABS is activated, you will feel a slight pulsing of the brake pedal during emergency braking or in low-grip conditions. DO NOT release the pedal but continue to push it to give continuity to the braking action.
- The ABS prevents the wheels from locking, but it does not increase the physical limits of grip between the tyres and the road: keep a safe distance from the vehicles ahead and reduce speed before curves.

Power steering system

The power steering system uses the power produced by the engine to help the driver steer more precisely while exerting less force on the steering wheel.

Important note



Remember that power steering does not work when the engine is switched off and more force is therefore needed when steering.

Warning



Do not keep the steering wheel fully turned (locked position) to the right or the left for more than 15 seconds when the engine is running. This may damage the power steering system.

Important note



If the power steering system is not working properly, as indicated by a symbol which appears on the left TFT display (see page 126), contact the FERRARI SERVICE NETWORK.



Suspension damping control

This vehicle uses latest generation MagneRide™ magnetorheological suspension, a system developed by Delphi and perfected by FERRARI for continuous automatic damping control.

By processing data received from the vehicle dynamics sensors and sensors that detect bodyshell movements, the ECU interprets the driving conditions and the road surface and immediately adjusts suspension response by varying the control current of each shock absorber.

These sensors allow the ECU to calculate the vehicle speed, vertical and lateral acceleration, steering angle and instantaneous pressure in the braking system, and hence to control suspension damping.

This system not only ensures an optimal compromise between racing-style performance (handling) and comfort, but is capable of emphasising either aspect by using the different adjustments available controlled by the “Manettino” driving mode control switch. Three different setting levels are available on this vehicle.

Level 1 (ICE)

Setting optimised to obtain the best traction in low- and very low-grip conditions, for example on snow or ice (Manettino set to ICE).

Level 2 (COMFORT)

Slightly more rigid setting, optimised to better absorb road unevenness and provide a better grip on wet road surfaces (Manettino set to WET and COMFORT).

Level 3 (SPORT)

Even more rigid setting optimised for sports-style driving and high speed (in medium-high grip conditions or on the race track) without significantly affecting comfort (Manettino set to SPORT and ESC OFF).



4WD traction system

This vehicle has an innovative four-wheel drive traction system, developed by FERRARI, which has been designed to apply the torque to the front wheels only in specific low-grip conditions.

The torque, modulated by the new electronic control system, FERRARI Dual Drive, is applied to the front wheels via the Power Transfer Unit (PTU), a compact transmission system on the front axle connected directly to the crankshaft.

Warning



The 4WD system is not available if the ESC stability and traction control system is not working properly.

4WD system malfunctioning alarm devices

If the 4WD traction system is not working properly, a special symbol (see page 127) is displayed on the left TFT display together with a message which varies according to the failure.

4WD system failure

The special symbol on the left TFT display accompanied by the message “4WD system failure. Go to dealer” indicates there is a 4WD system failure.

The system is not available.

Warning



Slow down and drive carefully, especially in low-grip conditions. Contact the FERRARI SERVICE NETWORK as soon as possible.

Important note



Contact the FERRARI SERVICE NETWORK even if the message disappears.





4WD system temperature too high

The special symbol on the left TFT display accompanied by the message “4WD system overheated” indicates that the system has overheated.

To allow the temperature to decrease more rapidly, the system temporarily deactivates the Power Transfer Unit: 4WD traction is therefore not available as long as the failure remains displayed.

Warning



Slow down and drive carefully, especially in low-grip conditions.

Low 4WD system oil pressure

The special symbol on the left TFT display accompanied by the message “Low 4WD ATF oil pressure” indicates that the 4WD system oil pressure is too low.

If this is the case, the 4WD traction system reduces the torque applied to the front wheels via the Power Transfer Unit: the 4WD traction system functions are therefore reduced as long as the failure remains displayed.

Warning



Slow down and drive carefully, especially in low-grip conditions.

4





Driving using the driving mode control switch (“Manettino”)

The driving mode control switch on the steering wheel allows the driver to use the vehicle potential in a fast and intuitive way.

There are five modes available, which correspond to the grip level (from low to high) and consequently to the level of driving assistance required (from high to none).

ICE mode

In “ICE” mode, performance is optimised to obtain maximum stability which is essential for use in very low-grip conditions (snow or ice). Suspension damping is optimised to provide the best possible absorption and traction on snow or ice (Level 1); the ESC system is at its maximum level.


If “ICE” mode is selected, it is indicated on the left TFT display as shown below:



WET mode

“WET” mode ensures stability on dry as well as on wet roads. It is therefore recommended for low grip conditions (e.g. rain) and on slippery or extremely uneven roads, but also to enhance comfort during city driving. Suspension damping is optimised to provide the best possible absorption (Level 2); the ESC system switches to Level 2.

If “WET” mode is selected, it is indicated on the left TFT display as shown below:

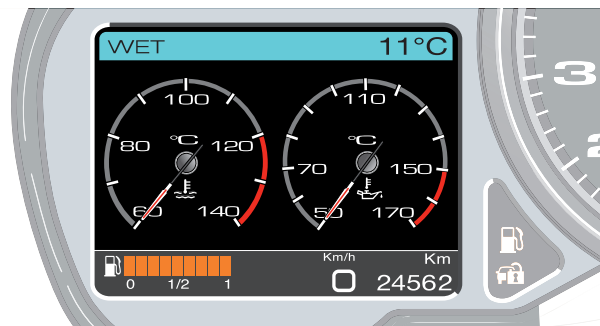



COMFORT mode

The “COMFORT” mode offers an optimal compromise between performance and comfort and is recommended for everyday driving in medium-high grip conditions. Suspension damping remains at the same level as the previous setting whereas the ESC system switches to Level 3.


If “COMFORT” mode is selected, it is indicated on the left TFT display as shown below:



SPORT mode

“SPORT” mode is for sports-style driving in high-grip conditions. This mode is designed to ensure stability only in medium-high grip conditions. Suspension damping shifts to Level 3 and gearshifting is more racy. The ESC system also switches to a different level offering you greater driving freedom.

If “SPORT” mode is selected, it is indicated on the left TFT display as shown below:

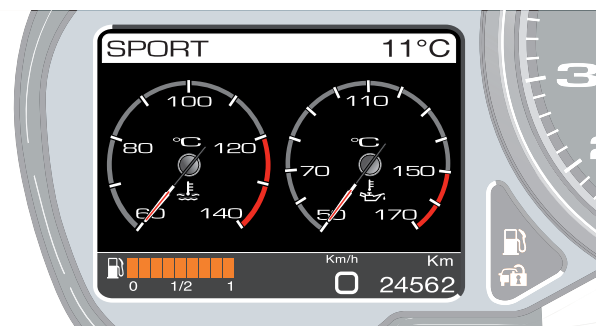



ESC OFF mode

In “ESC OFF” mode the ESC system is disabled. No electronic systems other than the E-Diff and the 4WD system control vehicle stability and the driver is allowed complete freedom and control of the vehicle for track use.

Warning



In low- to medium-grip conditions (e.g. wet, icy, sandy roads), do not deactivate the **ESC** system.

Important note




When “ESC OFF” mode is selected, the Manettino lever automatically goes back to “SPORT” mode: this occurs because each time the engine is started, the **ESC** system is reactivated.

Important note



When the brake pedal is pressed, traction control is activated via the VDC system (vehicle dynamics control via the braking system).

If “ESC OFF” mode is selected, this is indicated on the left TFT display as shown below:

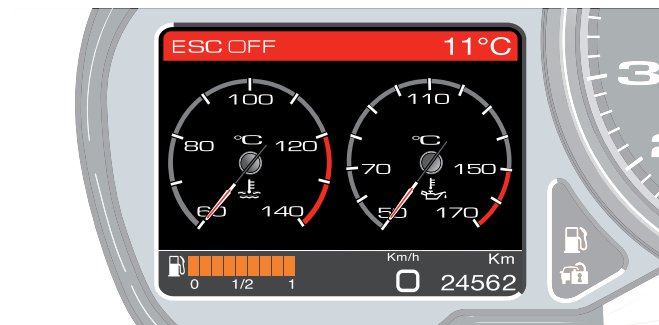



Warning



Use of the vehicle on race tracks: after each start, cover the first straight stretch of the track (at least 500 meters/0.3 mi) at a constant speed so that the traction control system and the ABS can calculate exactly how much grip is available and the diameter of the tyres (the calculation is reset every time the engine stops).

Failure to observe this rule may lead to reduced system performance.

4



Suspension damping delink button

The driver may decide to separate the suspension setting from the logic of the “Manettino” driving mode control switch using the special button **A** on the steering wheel.

By pressing button **A** with the SPORT or ESC OFF mode activated, the suspension setting shifts to Level 2 (COMFORT).

Position of Manettino	Suspension setting	Button A pressed
ICE	ICE	remains ICE
WET	COMFORT	remains COMFORT
COMFORT	COMFORT	remains COMFORT
SPORT	SPORT	shifts to COMFORT
ESC OFF	SPORT	shifts to COMFORT




If button **A** has been pressed and subsequently the position of the Manettino is changed, the suspension setting follows the operating logic dictated by the Manettino.

Important note



Upon turning off and restarting the vehicle, the suspension setting depends on the position of the Manettino.

When the Manettino is set to SPORT or ESC OFF, shifting to the COMFORT suspension setting by pressing button **A** is indicated by displaying the special symbol and “Bumpy road” message on the left TFT display for 5 seconds.

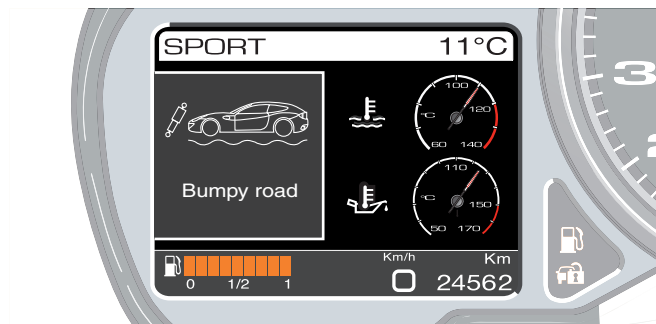



After 5 seconds, next to the Manettino status in the top of the display, the suspension symbol continues to be displayed as shown in the photo below (example shows Manettino in “SPORT” mode).

4





EPB - Electric parking brake

On this vehicle the parking brake is actuated by an electric motor. The parking brake can be applied and released by pulling a special lever **B** on the dashboard to the left of the steering wheel. With the ignition key in position **II**, a special warning light comes on on the panel to indicate that the parking brake has been applied (see page 130).

To release the parking brake, pull lever **B** and keep the brake pedal pressed. If the ignition key is in position **II**, the warning light will go out when the parking brake has been fully released.

The electric parking brake can be used as an emergency brake when the vehicle is in motion. If this is the case, the system acts on all four wheels until button **B** is released by communicating with the ESP system which prevents locking.



Warning



Always apply the parking brake when the vehicle is parked. The vehicle should be blocked. If this is not the case, please contact the **FERRARI SERVICE NETWORK**.

Drive Away function

The electric parking brake (EPB) has a “Drive Away” function: when a gear is engaged and the driver presses the accelerator pedal with the engine running and seat belt fastened, the system recognises the driver's intention to drive off and automatically deactivates the parking brake.

EPB deactivation warning

If you try to deactivate the electric parking brake by moving lever **B** without depressing the brake pedal, the message “Depress brake pedal and deactivate EPB”, is immediately displayed on the left TFT display (even during system diagnosis, see page 171) accompanied by an acoustic signal.



Autopark function

The EPB Autopark function automatically activates the electric parking brake when the engine is switched off. The Autopark function is activated every time the key is turned to on: this means that the driver does not have to apply the parking brake every time the engine stops.

However, the function can be temporarily deactivated before switching off the engine by pressing the **AUTO PARK C** button: the message “PARK OFF” is displayed on the left TFT display for 5 seconds. If this is the case, the parking brake should be manually applied by pulling lever **B** once the engine has been switched off. To enable automatic insertion of the EPB the next time the engine is switched off, press button **C** again; the message “PARK ON” is displayed on the left TFT display for 5 seconds.

“Automatic Vehicle Holding” AVH function

The electric parking brake provides optimised release when the vehicle starts up due to its Automatic Vehicle Holding function: once the engine has started, the system keeps the vehicle braked through intervention of the braking system rather than through the parking brake shoes.

4





Park Lock

The Park Lock is a locking device built into the gearbox.

This device is used to prevent the vehicle from moving when the multi-disc clutches are open, i.e., with the engine off and/or without the hydraulic pressure required for gearbox operating.

The device operates automatically every time the key is turned to off: if a gear is engaged when the key is turned to off, the Park Lock is immediately activated. If the gearbox is in “N” (neutral), the Park Lock starts operating after a minimum preset time (needed for the Carwash procedure, see next paragraph). To inform the driver that the Park Lock has been engaged, the letter “P” is displayed on the gearbox display.

The Park Lock is deactivated when the engine is running, the first gear or “R” is requested (with the brake pedal pressed) and the luggage compartment lid has been closed correctly.

Carwash procedure

The Park lock device can be electrically disabled on a temporary basis when the engine is switched off by performing the Carwash procedure.

This procedure is necessary when the vehicle has to be moved with the engine off and when washing the vehicle.

Warning



When the Park Lock device is electronically deactivated (Carwash procedure), the vehicle may move. The vehicle is only kept stationary by the parking brake which must be applied.

To perform the Carwash procedure, do the following:

- with the engine running, select the first gear;
- select neutral “N”;
- switch off the engine;
- turn the key to position II (key-on) within 3 seconds of switching off.

The message “Carwash mode activation” will appear on the left TFT display.



Launch Control

The “Launch Control” mode is a performance start function. Activating this function optimises vehicle acceleration from a standing start.

The device transfers the necessary torque to the ground and avoids skidding of the wheels during acceleration.

To start the vehicle in “Launch Control” mode, do the following:

- the vehicle must be stationary
- the gearbox must be in “Manual” mode
- hold the brake pedal down and select first gear
- press the **LAUNCH L** button on the left of the centre console: an acoustic signal informs the driver that the device has been switched on and the word “launch” appears on the gearbox display
- press the accelerator pedal and release the brake pedal.



Warning



Only use the “Launch Control” function in an appropriate context.

Important note



The “Launch Control” function is not available in presence of:

- a sloping road surface, even slight
- high clutch temperatures



Stop&Start system (optional)

On vehicles with optional HELE (High Emotion Low Emissions) technology, there is a Stop&Start system, which automatically stops the engine when the vehicle is stationary and restarts it, again automatically, when the driver wants to set off again.

The aim of the Stop&Start function is to increase vehicle efficiency by reducing CO₂ emissions especially when driving around town.

Automatic stopping and restarting of the engine is controlled by sensors and control strategies which, while reducing the impact on vehicle flexibility and comfort to a minimum, guarantee full operating of the safety systems and all the on-board systems even when the engine is switched off, without affecting climate comfort.

Warning



Never leave the vehicle without turning the ignition key to position **0**.

Always remember to remove the key from the ignition when you get out of the vehicle!

Never leave children unattended in the vehicle.

Warning



Make sure that the engine is switched off with the ignition key in position **0** before refuelling.

Warning



Always make sure that the Stop&Start system has been deactivated before carrying out any repair and/or maintenance work as indicated on the special labels in the engine compartment and underneath the vehicle.

Failure to comply with the above may pose a risk of serious injury to people working on the vehicle.

Warning



The driver is personally responsible for leaving the key in the ignition in position **II** when getting out of the vehicle: the driver must always turn the ignition key to position **0** before getting out of the vehicle.

Warning



Leaving the vehicle with the ignition key in position **II** puts those who are in the vicinity of the vehicle at serious risk if the engine starts unexpectedly.

Warning



Always turn the ignition key to position **0** before changing the tyres.



System operating

If activated, the Stop&Start system decides when to switch off the engine and when to restart it according to the driving conditions, the climate comfort on board and the operating status of the vehicle. The system logic does not require drivers to make any change in the way they drive the vehicle.

Manual activation and deactivation button

The driver can activate/deactivate the Stop&Start system at any time by pressing button **A** on the roof panel. If the system is activated, pressing button **A** will deactivate it: the message “Stop&Start OFF” appears for 5 seconds on the left TFT display accompanied by a special symbol.

Once the system has been deactivated, pressing button **A** again reactivates the system: the message “Stop&Start ON” appears for 5 seconds on the left TFT display accompanied by a special symbol.

If the Stop&Start system is activated, the LED on button **A** comes on whereas if the system is deactivated, the LED goes off.

Deactivation of the system by pressing button **A** while in a stopped vehicle condition (when the engine has been automatically switched off by the Stop&Start function) automatically restarts the engine.

4





Important note




Each time the ignition key is turned to position II (Key-on), the Stop&Start system remains in the same state it was in when the key was turned to position 0 (Key-off). If the function was activated at Key-off, it remains activated at the next Key-on and the LED on button A will flash for a few seconds.

Automatic engine stop mode

The engine stops automatically when the vehicle is stationary and the brake pedal is pressed and restarts when the brake pedal is released.

The left TFT display informs the driver that the Stop&Start system has been activated by displaying the message “Stop&Start active” accompanied by a special symbol. The message is displayed as long as the vehicle remains in a stop state. To interrupt the display cycle and reduce the message to an icon, press the **MODE** button with “ESCAPE” function.

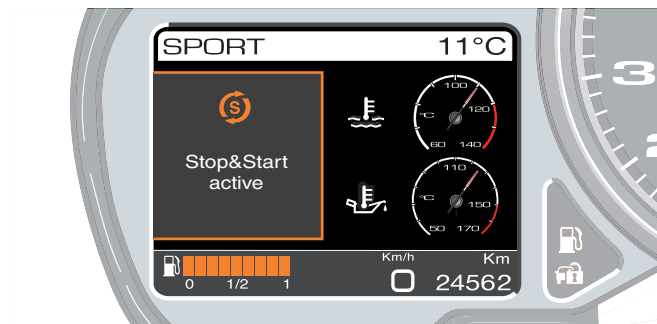



Conditions required to activate automatic engine stop

To activate the automatic engine stop while driving:

- **the Stop&Start system must be activated by pressing the button on the roof panel (LED on)**
- **the driver's seat belt must be fastened.**

For safety reasons and to guarantee driving comfort and correct operating of the entire vehicle, automatic engine switching-off is deactivated when:

- the accelerator pedal is depressed;
- a potentially dangerous situation is identified (steep road, vehicle stationary with wheels turned, i.e. when turning at a crossroads or on a roundabout);
- the system recognises vehicle motion in slow traffic or a parking manoeuvre (checking reverse gear engagement, time elapsed since last stop, driving speed);
- maximum air conditioning and heating system performance is requested ("low", "max defrost" or "rear screen demisting");
- external temperatures are very low or very high;
- the gearbox is in the "N" position;
- the "LIFT" system has been activated;
- the DCT gearbox Park Lock has been manually released;
- a failure interferes with proper system operating;

The system also constantly monitors some of the vehicle operating parameters (battery charge level, engine coolant temperature, catalytic converter temperature, clutch oil temperature, 4WD system clutch temperature, vacuum level in brake servo, climate comfort in passenger compartment) so that engine switching off can be deactivated in certain conditions to guarantee safety and vehicle operating and minimise the impact on on-board climate comfort.

Important note



After the first cold start, the Stop&Start system may take a few minutes before it is ready. This time period allows some of the engine parameters (catalytic converter temperature, for example) to reach the values required to reduce emissions.

Important note



After disconnecting the battery from the electrical system and reconnecting it, the Stop&Start system is not available the first time the engine is started. To reuse the system, the vehicle must be left parked for 6 hours once the battery has been reconnected. This period of time is needed to calibrate the battery sensor.

Important note



If the engine continues to run when the vehicle is stationary and the brake pedal is pressed, even if the Stop&Start system appears to be activated, it means that the system has disabled automatic switching off of the engine. When this happens, no specific signal is displayed on the instrument panel: this is to be considered normal.



Information on automatic restarting of engine

With the Stop&Start system activated in a stopped vehicle condition, the driver can restart the engine by:

- releasing the brake pedal
- **UP**-shifting
- engaging reverse gear
- pressing the accelerator pedal.

Warning



If the engine is switched off accidentally and not by the Stop&Start system, it must be restarted manually by the driver by pressing the **ENGINE START** button and reengaging the gear using the shift paddles located behind the steering wheel. This condition is indicated on the left TFT display by the message “Press ENGINE START button to restart”, accompanied by an acoustic signal.

For safety reasons and to guarantee comfort when the vehicle is stationary and correct operating of the entire vehicle, the Stop&Start system also automatically restarts the engine when:

- the **ENGINE START** button on the steering wheel has been pressed
- the function has been deactivated by pressing the button located on the roof panel
- the driver's seat belt has been unfastened
- the driver-side door has been opened
- the “LIFT” system has been activated
- rear screen demisting has been requested or the air conditioning and heating system set to “low” or “max defrost”.

The system also constantly monitors some of the vehicle operating parameters (battery charge level, engine coolant temperature, catalytic converter temperature, clutch oil temperature, 4WD system clutch temperature, vacuum level in brake servo, climate comfort in passenger compartment, vehicle speed) so that the engine can be automatically started in certain conditions to guarantee safety and vehicle operating and minimise the impact on on-board climate comfort.



Permanent deactivation of automatic restarting and manual start procedures

After automatically switching off the engine using the Stop&Start system, automatic restarting requested by the driver may not always be possible: this means that the vehicle systems have permanently deactivated automatic restarting.

If this occurs, the vehicle must be restarted manually: this condition is indicated on the TFT display by the message “Press ENGINE START button to restart”, accompanied by an acoustic signal.

Warning



If automatic restarting is permanently disabled, the vehicle behaves in the same way as a vehicle with no Stop&Start system: to restart, the driver must perform a manual start by pressing the **ENGINE START** button and using the shift paddles located behind the steering wheel.

Permanent deactivation of automatic restarting occurs when:

- the engine compartment lid is open;
- automatic engine restarting has not been successful;
- a failure has been detected that may interfere with operating of the Stop&Start system.

At times, depending on the seriousness of the failure, the **ENGINE START** button may have to be held down for a few seconds to restart the engine: this condition is indicated on the left TFT display by the message “Press and hold ENGINE START button to start”.

4





System failure

If malfunctioning, the Stop&Start system is disabled. The driver is informed of the failure by a special symbol that appears on the left TFT display for 20 seconds accompanied by an acoustic signal and the following message which corresponds to two different alarm levels:

- “Stop&Start failure” (orange symbol)
- “Stop&Start failure. Go to dealer” (red symbol).

Important note



Contact the **FERRARI SERVICE NETWORK** immediately.

When the display cycle ends (20 seconds), or the **MODE** button with “ESCAPE” function is pressed, the message disappears and the symbol is reduced to an icon.

Precautions to be taken during maintenance work

Always turn the ignition key to position **0** before carrying out any repair and/or maintenance work on the vehicle. If work has to be carried out on the vehicle with the ignition key in position **II**, check that the Stop&Start has been deactivated by performing the following procedure before doing any repair and/or maintenance work:

if the ignition key is in position **II**, turn it to position **0** before turning it to **II** again and press the special Stop&Start system activation/deactivation button on the roof panel (see page 195). If the message “Stop&Start ON” appears on the left TFT display when the button is pressed, press the button again. Check that the message “Stop&Start OFF” appears on the left TFT display for 5 seconds. The button LED must be off.

Warning



NEVER work on the vehicle if the message “Stop&Start active” appears on the left TFT display.





Dome light controls (with HELE system only)

On vehicles with the optional HELE system, the central dome light **B** can be switched on or off by holding down button **C** or button **D** (for more than 0.8 seconds).

The driver-side spotlight and the passenger-side spotlight can be switched on and off by pressing and quickly releasing buttons **C** and **D** respectively.

4






“LIFT” system (optional)

On request, the vehicle can be fitted with a “LIFT” system: this device acts on the front and rear suspension and raises the vehicle by approximately 40 mm (1.6 in.) to make particularly snowy or uneven stretches of road, i.e., access to garages or steep ramps easier and avoid damaging the car.

The system can be activated when the engine is running at a speed of below 40 km/h (25 mph) by pressing button **A** on the dashboard to the left of the steering wheel. At speeds of over 40 km/h (25 mph), the system is deactivated whereas if it is already activated, it is automatically deactivated when exceeding 40 km/h.

Throughout the entire LIFT system activation cycle, the special warning light (see page 129) remains on in flashing mode whereas the vehicle symbol with an arrow pointing upwards and a message “LIFT moving” appears on the left TFT display. When the system has been activated (vehicle fully raised), an acoustic signal is emitted and the message “LIFT ON” appears for 5 seconds whereas the warning light on the panel stays on in fixed mode until the system is deactivated.

To deactivate the system, press button **A** again: at the start of the deactivation cycle, the warning light on the panel starts to flash again whereas the vehicle symbol with an arrow pointing downwards and the message “LIFT moving” appears on the left TFT display. The message remains until the system has been completely deactivated (vehicle fully lowered).

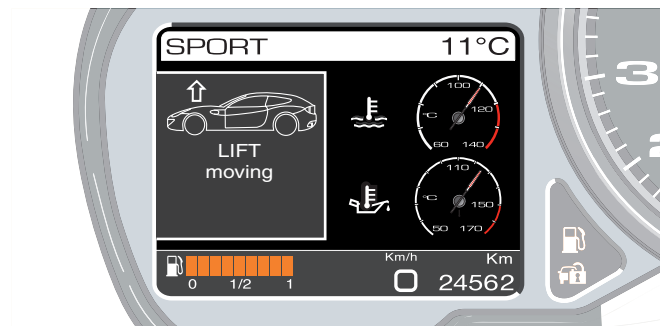



If the engine is turned off with the front suspension lift activated, the message “LIFT ON. Set LIFT to OFF” appears on the left TFT display at key-off. Turn the key back to position II (key-on) and press button **A** to lower the vehicle. If it is not manually deactivated by pressing the button, within 15 seconds of turning off the engine, the system is automatically deactivated.

Warning



The system has not been designed to remain activated when the engine is turned off and the vehicle is stationary. If the engine is turned off with the front lift activated, the vehicle is automatically lowered after 15 seconds.

Do not use the suspension lift to park the vehicle on obstacles (e.g. pavements); these obstacles may come into contact with the lower part of the vehicle and damage it once the system has been deactivated.


In the event of engine failure, the “LIFT” system can however be activated by pressing button **A** for 10 seconds. In this way, the vehicle can be lifted even in emergencies when the engine is turned off (for example, to load it onto the ramp of a breakdown vehicle).

Important note



The front suspension lift should only be used for the purposes described above and not to drive over speed control systems (e.g. traffic calmers) more quickly.

4

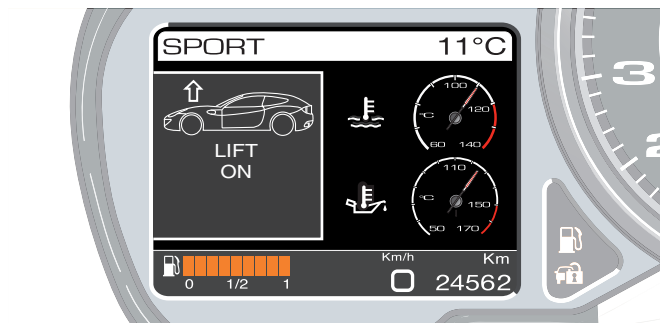



Seat adjustment

Warning



As with all adjustment, seat adjustment must be performed when the vehicle is stationary.

Warning



Never place your hands under the seat or near its moving parts when adjusting. If you do so, movement of the seat may cause injury to hands or fingers.

Correct adjustment is very important for enhanced driving comfort and maximum efficiency of the passive safety systems.

The seat position can be electrically adjusted using the special controls.



Three adjustments are possible using control **D**:

- backward/forward adjustment: push the control forwards or backwards
- height adjustment: push the control up or down
- seat inclination (tilting): push the front or rear end of the control up or down to adjust seat inclination.

Warning



Forward/backward adjustment must take into account the fact that airbag devices are placed in front of the driver and the passenger.

Correct adjustment ensures there is adequate space between the airbag and the driver/passenger (see page 71).

Seat back rake adjustment

Use control **E** to adjust the seat back rake. Push the control forward or backward to adjust the seat back rake.





Lumbar support adjustment (Full Electric option)

Use control **F** to adjust the seat backrest lumbar support. Push the horizontal arrows on the control left or right to increase or decrease lower lumbar support. Push the vertical arrows on the control up or down to increase or decrease upper lumbar support.

Backrest and cushion side width adjustment (Full Electric option)

Use control **G** to pneumatically adjust the width of the backrest and seat cushion sides. Push the horizontal arrows on the control left or right to increase or decrease the width of the seat cushion sides. Push the vertical arrows on the control up or down to increase or decrease the width of the backrest sides.




Driver's seat position memory (Full Electric option)

When a door is open and the key is in position 0, the seat can be moved for a limited period (approx. 15 sec.). Each time a door is opened or both doors are closed and the key is set to OFF, the seat can be moved again for a limited period.

The seat position can only be memorised when the key is in position II, by pressing one of the three buttons 1, 2 or 3 (**H**) each one corresponding to a memorisable position. Pressing one of these buttons for longer than 3 seconds memorises the position of the driver seat, rear-view mirrors and steering wheel (confirmed by emission of a double tone).

To recall the memorised position, press one of the buttons **H** and release it within 3 seconds. Operation begins as soon as the button is released.

Recalling the memorised position is not allowed when the vehicle is in motion. If the vehicle starts to move while the memory recall is being operated, the seat and column do not stop moving and reach the memorised position.

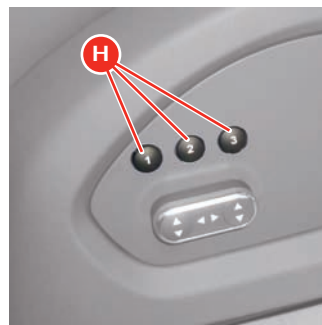

4



With reverse gear engaged, the position of the passenger external rear-view mirror can be adjusted to a position other than the driving position, to help parking manoeuvres. This position can be memorised along with all the other memorisable positions.

If the personalised reverse gear position is never set, when the reverse gear is engaged, the passenger external rear-view mirror will in any case move slightly downwards and inwards (compared with the driving position).

Seat heating system (Full Electric option)

Turn control **N** to activate the seat heating function.

When this function is activated on one or both seats, the symbol appears on the left TFT display for 5 seconds. Using control **N**, the driver can adjust the heating, choosing from 3 levels identified on the control with the numbers 1, 2 and 3. In position 0, seat heating is not activated.



Seat ventilation system (optional)

The seat ventilation system is activated by turning control **P**.

When this function is activated on one or both seats, the symbol appears on the left TFT display for 5 seconds. Using control **P**, the driver can adjust the ventilation, choosing from 3 levels identified on the control with the numbers 1, 2 and 3. In position 0, seat ventilation is deactivated.





Tilting the backrest

To tilt the seat, pull lever **L** up and push the backrest towards the front of the vehicle.


When the backrest goes back into position, it will automatically block once it has reached the correct position.

To facilitate access to the rear seats or exiting the vehicle, the front seats are equipped with a “rear seat Easy Entry” device (only operative when doors are open or vehicle is stationary): when the backrest is tilted forwards, the front seat is lowered and automatically slides forward to the end of its travel. When the backrest is raised, the seat moves back into position.

Warning



Do not use the electric seat adjustment controls when the backrest is tilted.

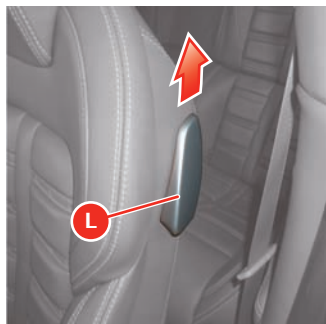

Adjusting the steering wheel

The steering wheel can be electrically adjusted for rake and reach. It can only be adjusted if the ignition key is in position **II**.

Move control **A** (to the left of the steering column) in the four directions to adjust the steering wheel.


On versions equipped with a driver's seat with memory, the position of the steering wheel is memorised together with the position of the external rear-view mirrors when the seat position is memorised.

Warning



Do not adjust the steering wheel when the vehicle is moving.

4

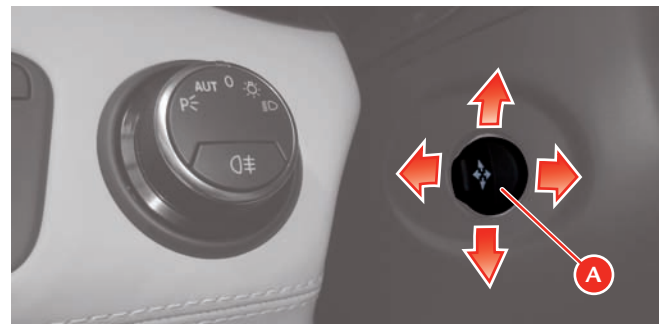



Rear-view mirrors

Internal rear-view mirror

Hold the internal rear-view mirror and move it to the required position.

On request, the internal rear-view mirror can be fitted with an electrochromic mirror that automatically darkens to reduce the dazzling effect of the reflected light on the driver. The speed with which the mirror darkens depends on the intensity of the light.

By pressing button **B** you can activate/deactivate the electrochromic mode. When the electrochromic mode is activated, the green LED **D** comes on.



External rear-view mirrors

These mirrors can be electrically adjusted using the control **C** (with the ignition key in position **II**) and are equipped with defogging elements.

- 1) Mirror selection: turn control **C** to the left or right lock position to select the mirror that requires adjusting.
- 2) Mirror positioning: move control **C** in the four directions (up – down – right – left) to adjust the selected mirror.
- 3) Mirror closure (optional): turn control **C** to the lower central lock position to close the rear-view mirrors.

Once adjusted, move the control **C** into the upper central position where it will be locked in order to avoid changing the external mirror setting inadvertently.

The mirrors will yield in both directions in the event of a collision: if necessary, the mirrors can be pushed both backwards and forwards.





On versions equipped with a driver's seat with memory, every time the seat position is memorised, the external rear-view mirror position is also stored automatically, both for the normal travelling direction and reverse manoeuvring.

To memorise a new position of the external rear-view mirrors, turn the ignition key to position II and adjust the position of the mirrors; then engage reverse and reposition the external mirrors to ensure the best possible visibility to perform the manoeuvre, then disengage reverse gear.

Finally, press one of the buttons 1, 2 or 3 on the seat (see page 161), each one corresponding to a memorisable position, until a double tone confirms that the procedure is complete.

The new position of the external rear-view mirrors will be automatically memorised together with the seat position.

In addition, the mirror positions can be adjusted for both the normal travelling direction and for reverse manoeuvring.

Warning




The rear-view mirrors must always be positioned correctly while driving.

Do not adjust the rear-view mirrors when the vehicle is moving.

On request, the external rear-view mirrors can be fitted with an electrochromic mirror.

4

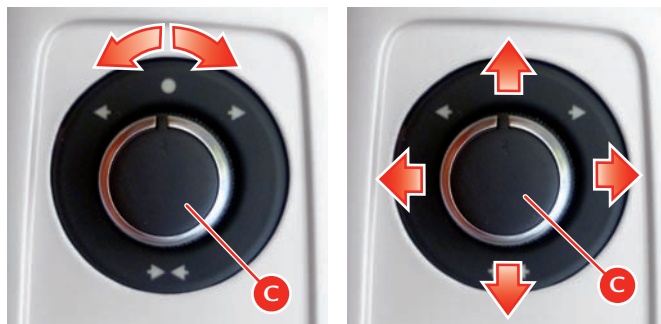



Air conditioning and heating system

Operating modes

Automatic

This mode automatically adjusts the air distribution, temperature and ventilation levels according to the temperature set by the user.

Partially Automatic


This mode allows the user to adjust certain parameters manually, while others remain automatic.

Manual

This mode allows the user to set the values to suit the passengers' needs.

Controls

- 1 Left-hand temperature setting and **AUTO** button
- 2 A.C. compressor activation/deactivation
- 3 Single-zone mode activation/deactivation
- 4 Air distribution fan speed
- 5 Rear window demist activation/deactivation
- 6 Windscreen demist activation/deactivation
- 7 Right-hand temperature setting and **AUTO** button
- 8 Right-hand air distribution mode setting
- 9 Air recirculation
- 10 Left-hand air distribution mode setting

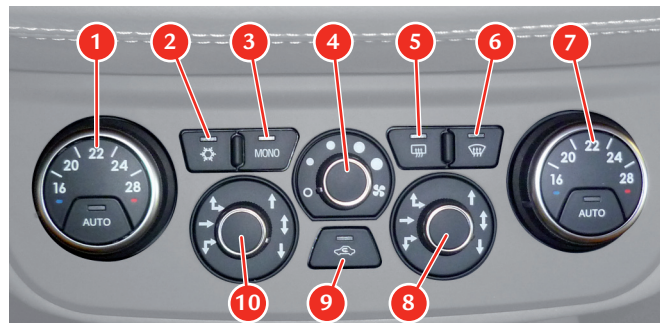



Left-hand temperature setting and AUTO button (1)

This is used to select the required air temperature in the left-hand side of the passenger compartment; the **AUTO** button is used to activate automatic operation (LED on).

A.C. compressor activation/deactivation (2)

This is used to activate (LED on) or deactivate (LED off) the A.C. compressor.

Single-zone mode activation/deactivation (3)

This is used to activate (LED on) or deactivate (LED off) the single-zone operating mode.

Air distribution fan speed (4)

The four setting positions allow the occupants to select the air flow rate.



Rear window demist activation/deactivation (5)

Press this button (LED on) to activate rear window defogging/demisting.

Windscreen demist activation/deactivation (6)

Press this button (LED on) to activate windscreen defogging/demisting.

4

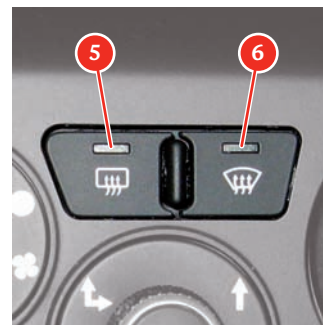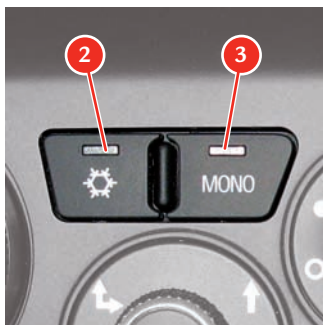




Right-hand temperature setting and AUTO button (7)

This is used to select the required air temperature in the right-hand side of the passenger compartment; the AUTO button is used to activate automatic operation (LED on).

Right-hand air distribution mode setting (8)

This is used to select one of the six air flow distribution modes in the right-hand side of the passenger compartment.

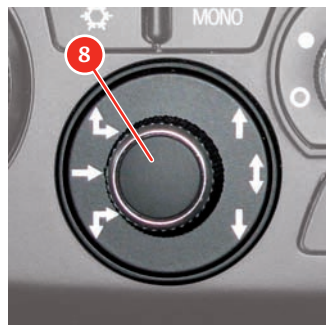

Air recirculation (9)

If released (LED off), the air flow comes from outside the passenger compartment.

When outside temperatures exceed 32 °C (90 °F), the air recirculation feature remains on with a 60-second pause every twenty minutes to refresh the air.

If you activate the windscreen washer function, the air recirculation feature activates for 20 seconds, to prevent any smell of detergent products from entering the passenger compartment.

If pressed (LED on), the air flow comes from inside the passenger compartment.

The recirculation increases air heating or cooling.

Left-hand air distribution mode setting (10)

This is used to select one of the six air flow distribution modes in the left-hand side of the passenger compartment.

Once the internal temperature has stabilised at the desired level, you are advised not to change the position of the temperature selection switch unless the external temperature changes drastically.





Maintenance

The pollen filter must be replaced every year, as indicated in the “Maintenance Schedule”.

Important note



The air coming out of the vents does not correspond to the temperature requested by the user, but is the temperature required to maintain the desired temperature inside the passenger compartment.

Important note



We recommend keeping the air flow set to open and directing the air flow to a neutral position.

Adjusting the air vents

The adjustable air vents are positioned on the sides and in the central section of the dashboard.

Use control **A** to adjust the air flow direction and rate.

Turned clockwise: open.

Turned counterclockwise: closed.

4





Placing luggage in the luggage compartment

Warning




All luggage must be very carefully placed and secured in the luggage compartment. Luggage or heavy items that are not secured could be projected into the passenger compartment at high speed in the event of a sudden change in direction, sharp braking or an accident and increase the risk of serious injury.

Important note



To secure small, light loads in the luggage compartment, use, if possible, a rope or luggage net fastened to the special eyebolts shown in the figure.

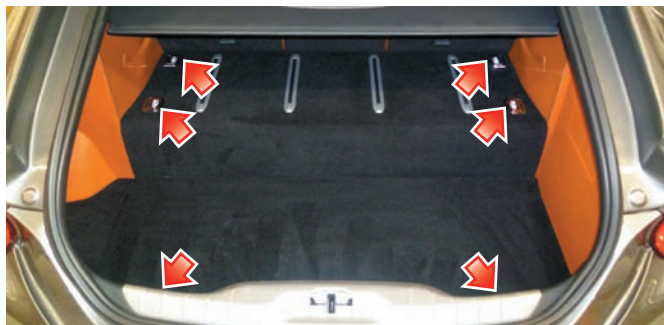

Warning



Never use the top tether anchors for child seats on the back of the rear seat backrests to secure luggage in the luggage compartment.

Warning



Do not transport heavy items in the passenger oddment storage compartments.

Warning



Do not stack luggage in the luggage compartment above the level of the rear seat backrests: when braking, the load could be projected into the passenger compartment at high speed and increase the risk of serious injury.

Important note



Heavy loads affect vehicle handling: spread the weight evenly when placing luggage in the luggage compartment and try and place the heaviest items as low down and as far forward as possible.



Parcel shelf

The parcel shelf **C** is a detachable panel that separates the luggage compartment from the passenger compartment.

The parcel shelf is held in position by two pins at the ends which run along the special guide.


To increase space vertically, the parcel shelf can be removed: pull the parcel shelf back slightly to free the rear pin from the guide, then turn the shelf downwards and fix it in position by inserting the rear pin in the lower guide.

Warning



Do not transport items on the parcel shelf: they could be projected into the passenger compartment at high speed in the event of a sudden change in direction, sharp braking or an accident and increase the risk of serious injury.

4

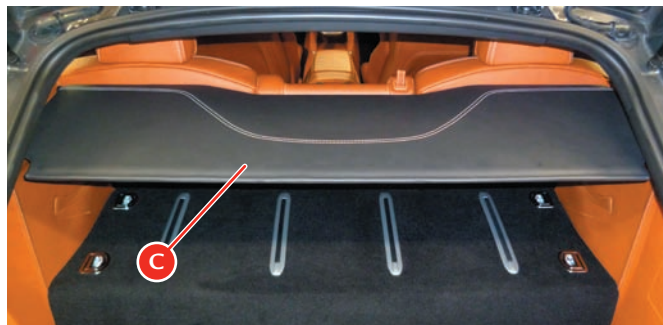



Partition between passenger compartment and luggage compartment

To transport bulky luggage (for example, a pair of skis in a ski bag), the luggage compartment and the passenger compartment can be connected by lowering the partition between the two rear seats.


To lower the flap, unfasten it by pulling the tab **A** and then lower it towards the front of the vehicle.

To close the flap, put it back into its original position and press until it clicks into place.

Warning



After closing the panel, always make sure it has clicked back into place properly to prevent it accidentally opening while driving.

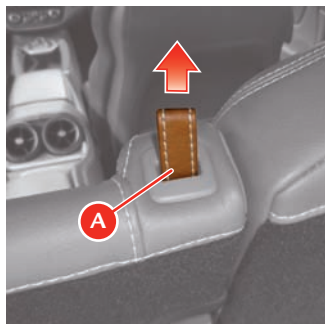



Folding forward of rear seats

To increase space in the luggage compartment, the backrest of one or both rear seats can be lowered.


To lower the rear seat backrest, pull the release lever **B** and then lower it towards the front of the vehicle.

Warning



After putting the backrest back into a vertical position, always make sure it has clicked back into place properly to prevent the backrest accidentally tilting forward while driving.

4

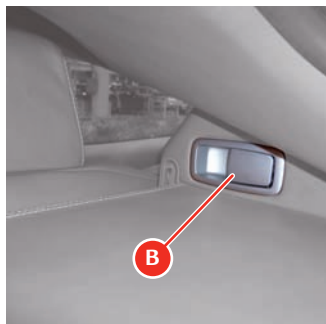



Passenger compartment accessories

Glove compartment

This is located on the passenger side of the dashboard. To open it press the **OPEN C** button: the glove compartment will move down slowly by way of a damped opening mechanism.

The glove compartment is illuminated by an internal light that comes on automatically when it is opened.

Warning



Keep the glove compartment closed while driving.

To close the glove compartment, push the top part until you hear the click of the lock.

Opening of the glove compartment can be deactivated by pressing button **C**. Call up the MENU screen page on the left TFT display (see page 108) and then select the items “Car setup”, “Glove box key” and OFF. To reactivate opening using the button, select ON.

Sun visors

The sun visors can be moved by pulling them down towards the windscreen and sideways by unhooking them from the fastener and turning them towards the door glass.


There is an illuminated mirror on the back of the passenger sun visor.





Oddment storage compartments

There are several oddment storage compartments in the passenger compartment located on the lower part of the doors, on the centre console - under the front and rear arms - and on the back of the front seat backrests.

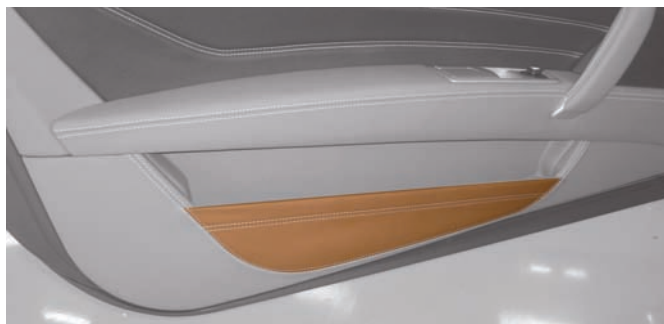

Cup holders

There are two cup holders on the centre console, one for the front occupants and one for the rear seat passengers: both have a slide opening.



4



Cigarette lighter


The cigarette lighter **D** is located under the centre console armrest and can be accessed by opening the flap **E**, as shown in the figure.

To operate the cigarette lighter (with the engine running or with the ignition key in position **II**), push it in. The cigarette lighter can be used when it pops back into its normal position.

Warning



Hold the cigarette lighter by its special handle. You may burn your hands if you hold or touch other parts of the cigarette lighter.

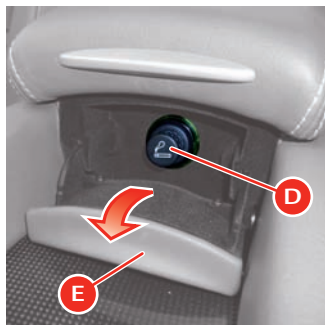

12V power sockets

The vehicle has two power sockets **F** and **G**, located in the passenger compartment, in the oddment storage compartment under the rear arm, and on the right-hand side of the luggage compartment.


The sockets can be used to power small electrical appliances including mobile phones, lights, vacuum cleaner and any other accessory with absorption not exceeding 140 Watts and a voltage of no more than 12 Volts.

Warning



Prolonged use of this device may discharge the battery.

Do not try to insert plugs into the power socket that are not the right size and shape.

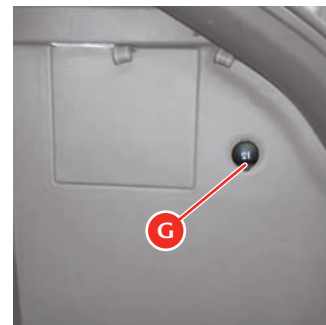



Warning



Use the power socket to connect the tyre repair and inflation kit in an emergency **ONLY** for the amount of time strictly necessary.

Fire extinguisher (optional)

The vehicle can be equipped on request with a fire extinguisher mounted on special fastening brackets on the passenger side door sill.

Powder filled, with 2 kg capacity (effective discharge time 8 seconds); it does not contain chlorofluorocarbons.

Periodically check the gauge to make sure the pressure is correct and the extinguisher is fully charged.

The extinguisher must be kept mounted on the fastening brackets. If not used, we recommend removing the whole unit to increase space in the passenger footwell area taken up by the fastening brackets.

Important note



To use the extinguisher, follow the instructions written on it.

4

Toolkit	224
Replacing light bulbs	229
Replacing a fuse	232
Replacing a wheel	241
Towing.....	244
Battery.....	246
Battery conditioner.....	250
EPB emergency release	254
Park Lock emergency release	256



5



ADVICE FOR EMERGENCY SITUATIONS



Warning



Repair work using the toolkit requires:

- suitable protective equipment (e.g. gloves)
- adequate precautions to be taken (e.g. during tyre replacement never lie under a vehicle raised by a jack)
- minimum specific expertise when working in contact with electrical parts/components (e.g. battery).

Toolkit

Tool kit

Stored in the luggage compartment, it contains the necessary tools for emergency repair jobs:

- pair of cotton gloves;
- set of fuses;
- pliers for removing fuses;
- tow hook;
- insulated cutting pliers;
- funnel for emergency fuelling;
- screwdriver for slotted and crosshead screws;
- EPB emergency release tool;
- Park Lock emergency release tool;
- emergency tyre repair and inflation kit.





Warning



The Electric Parking Brake (EPB) emergency release tool and the Park Lock emergency release tool may only be used by specialised workshop technicians, as indicated on the label on the tool kit.

5



Emergency tyre repair and inflation kit

Stored in the luggage compartment, it can be used in the event of a puncture or low tyre pressure to repair and/or inflate a tyre enough to continue the journey safely.

Important note



To use the tyre repair and inflation kit correctly, refer to the instruction booklet provided with the kit.

Warning



Give the instruction manual supplied with the kit to the personnel that will handle the tyre repaired with the tyre repair kit.

Warning



In the event of damage caused by foreign objects, tyres can be repaired with cuts of up to **4 mm** in diameter on the tyre tread and shoulder.

Warning



Punctures cannot be repaired on the sides of the tyre. Do not use the tyre repair kit if the tyre has been damaged after driving with a flat tyre.

Warning



Damage to the wheel rim that causes air leaks cannot be repaired. Do not remove foreign objects (screws or nails) that have penetrated the tyre.

Warning



After using the repair kit, the vehicle must be considered in an emergency situation: drive with the greatest care (maximum permissible speed 80 km/h - 50 mph).

Warning



Apply the sticker supplied with the kit where it can easily be seen by the driver to indicate that the tyre has been treated with the tyre repair kit.

Drive carefully especially on bends.

Avoid sudden accelerations or braking.

Warning



The kit is to be used to temporarily repair only one tyre punctured by small objects: the kit may not be useful in the case of large punctures or tearing.



Important note



After driving for approximately 10 minutes, stop and recheck the tyre pressure.

Remember to apply the parking brake.

Warning



If the pressure has decreased below **1.8 bar** (26.11 psi), do not continue driving: the kit cannot guarantee the correct hold because the tyre is too damaged. Contact the FERRARI SERVICE NETWORK.

If the tyre pressure is at least **1.8 bar** (26.11 psi), restore the correct pressure and continue driving.

Drive very carefully to the nearest FERRARI SERVICE NETWORK.

Warning



The repaired tyre must be replaced as soon as possible and the workshop personnel must be informed that the tyre was treated with tyre repair fluid.

Warning



Keep the kit in its box and out of children's reach.

Do not inhale or swallow the fluid contained in the cartridge and avoid contact with the skin and eyes.

Warning



The spray contains ethylene glycol and latex.

The latex may cause an allergic reaction, is harmful if swallowed and is irritating to eyes. May cause sensitisation by inhalation and skin contact. Avoid contact with eyes, skin and clothing. In case of contact, rinse immediately with plenty of water. If swallowed, do not induce vomiting, rinse mouth, drink plenty of water and seek immediate medical advice. Keep out of reach of children. The product should not be used by asthma sufferers. Do not inhale vapours during use. In the event of an allergic reaction, seek immediate medical advice. Store the spray can in its special case away from sources of heat.

The liquid sealant has an expiry date: the expiry date is indicated on the kit.

5



Environment



Replace the spray can containing the expired liquid sealant. Do not dispose of the spray can and sealant in normal domestic waste. Dispose of in accordance with national and local regulations or ask the FERRARI SERVICE NETWORK to take care of disposal.

Warning



The sealant in the kit cartridge can damage the sensor inside the wheel rim on vehicles fitted with a tyre temperature and pressure monitoring system (TPMS).

If this occurs, the sensor must be replaced. Contact the FERRARI SERVICE NETWORK.

Warning



Wear the protective gloves supplied with the tyre inflation and repair kit.

Useful accessories

In addition to the tools supplied with the vehicle, the hazard warning triangle and fluorescent safety jacket should always be kept on board in order to signal hazardous situations in compliance with regulations.



Replacing the front and rear light bulbs

Important note



To replace the front and rear light bulbs, contact the FERRARI SERVICE NETWORK.


To adjust the headlight beam, please contact the FERRARI SERVICE NETWORK.

Replacing number plate light bulbs

To replace a number plate light bulb, proceed as follows:

- remove the light from the right side where there is a spring clip;
- remove the transparent cover **A** from its housing;
- replace the bulb by removing connector **B** from its housing;
- refit the connector and transparent cover by inserting it first from the left side and then pressing on the other side.

5

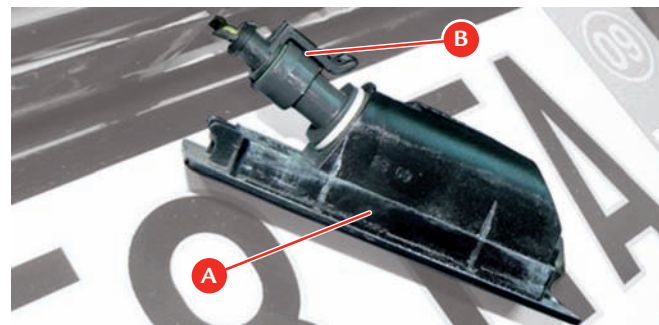




Replacing other light bulbs

Roof dome light


- Use a screwdriver to gently prise under the edge of the transparent cover **C** of the dome light and remove it from the roof panel.
- Replace the bulb **D** or **E** or **F**.
- Refit the dome light and make sure that the wires are not trapped by inserting it first from the connector side and then pressing on the opposite side.

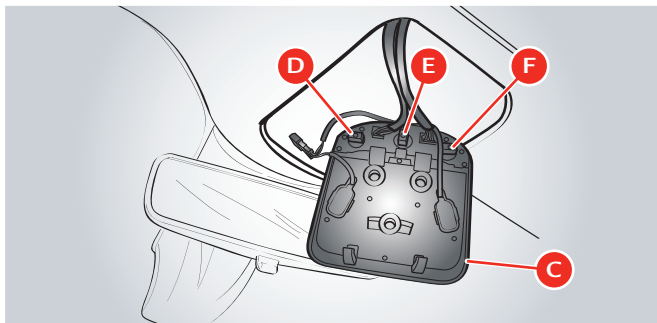

Glove compartment, underdoor and luggage compartment bulbs

- Use a screwdriver to gently prise under the edge of the transparent cover **G** and lift it.
- Completely remove the transparent cover from its housing.
- Take the bulb out of its clips.
- Replace the bulb.
- Refit the transparent cover and make sure that the wires are not trapped by inserting it first from the connector side and then pressing on the opposite side.

Follow the same procedure for replacing the underdoor light bulbs and the luggage compartment dome light bulbs.

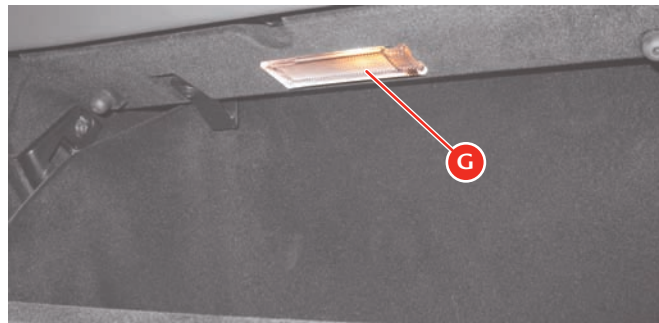



Light bulbs (12 V except for high beam and low beam)

	Type	Power
Low beams and high beams	gas-discharge (XENON)	Das
Front running lights	LED	
Front turn indicator lights	LED	
Side turn indicator lights	incandescent	T4W
Running and stop lights	LED	
Reverse lights	incandescent	H6W
Supplementary stop lights	LED	
Rear turn indicator lights	LED	
Rear fog lights	incandescent	H21W
Number plate lights	incandescent	5W
Passenger compartment dome light	incandescent	8W
Spotlights	incandescent	5W
Rear dome lights	incandescent	5W
Glove compartment light	incandescent	5W
Underdoor courtesy lights	incandescent	5W
Luggage compartment lights	incandescent	5W



Replacing a fuse

When an electrical device is not working, check that the corresponding fuse is not blown.

A - Unblown fuse.

B - Blown fuse.

Important note



If the problem persists, contact the **FERRARI SERVICE NETWORK**.



Important note



When replacing a fuse, always use fuses of the same amperage (same colour).

The tool bag contains spare fuses.

To remove the fuses, use the pliers **C** in the tool bag.

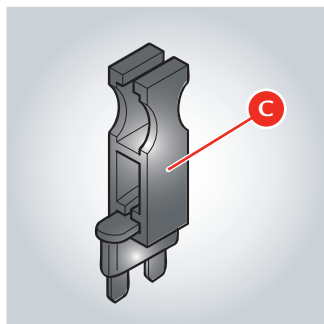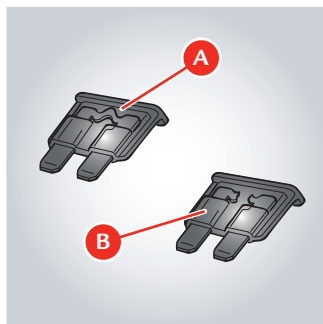

Fuse colours

	Ampere
yellow ochre	5
brown	7.5
red	10
light blue	15
yellow	20
white	25
green	30


Maxi fuse colours

	Ampere
yellow	20
green	30
orange	46
red	50
blue	60



Location of the fuse and relay boxes

- A** - Fuses and relays in battery compartment
(right-hand side of engine compartment)
- B** - Body Computer fuses and relays
(dashboard to left of steering wheel)
- C** - Fuses and relays in passenger compartment on passenger side
(under passenger side footrest)
- D** - Fuses and relays on centre console
(under rear cup holder compartment)
- E** - Fuses and relays in luggage compartment
(behind right-hand luggage compartment shield)

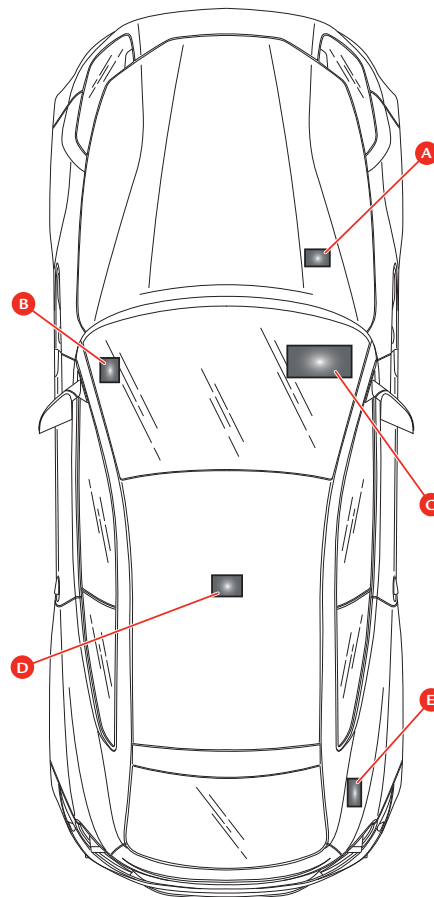



Fuses and relays in battery compartment

To access these fuses:

- open the engine compartment lid and remove the cosmetic shield on the right-hand side of the engine compartment by unscrewing the screws shown in the figure;
- remove the cover of box **A** located above the positive terminal.


Important note



Only open the boxes containing the fuses that need to be checked to avoid damaging other components.

Box **A** contains these fuses:

Ref.	Amp.	Use
CAL5	CAL5	Power supply (starter motor and alternator)
F-70	150	Engine relay and fuse ECU power supply (SCM)

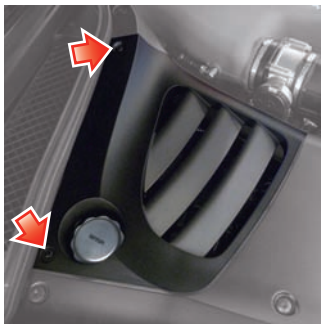

F-71	50	Front lift pump
F-72	40	Parking brake power
F-73	70	Dashboard ECU power

Body Computer fuses and relays


To access these fuses, remove the dashboard panel **1** to the left of the steering wheel.

Important note



Only open the boxes containing the fuses that need to be checked to avoid damaging other components.




Box **B** contains these fuses and relays:

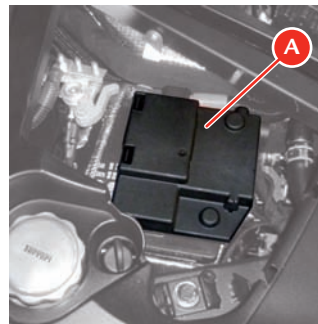

Ref.	Amp.	Use
F-12	15	Right high beam
F-13	15	Left high beam
F-31	7.5	INT/A for air conditioning and heating system, Body Computer Node
F-32	10	Foot well and step lights, luggage compartment lights, side marker relay, glove compartment relay coil
F-33	30	Electronically controlled Gearbox Node
F-35	7.5	High beam relay coils, headlight washer, illumination of buttons, adaptive headlight ECU, headlights, power steering, entertainment system
F-36	10	Parking sensors, fuel filler flap relay coil
F-37	10	Instrument Panel Node
F-38	15	Luggage compartment lock actuator, wiper control ECU

F-39	15	EOBD socket, anti-theft system siren, Air Conditioning Node
F-40	30	Heated rear window
F-41	15	Windscreen washer nozzle demisting power supply
F-42	7.5	Alternator
F-43	30	T28, T29, T26, T27 relay power supply
F-44	20	Passenger seat heating, cigarette lighter
F-47	30	Driver-side door, driver-side power window
F-48	30	Passenger-side door, passenger-side power window
F-49	7.5	Rain sensor, parking sensors, seats, suspension lift, Japan navigation system, electrochromic mirror
F-50	7.5	Airbag Node
F-51	7.5	Electronically controlled Gearbox Node, ignition button

5

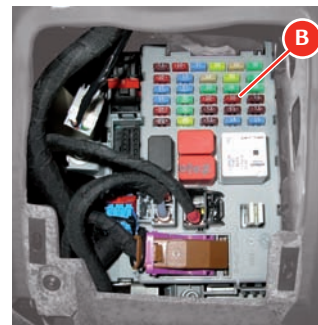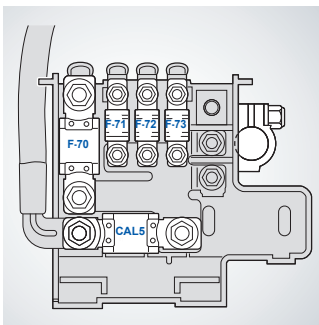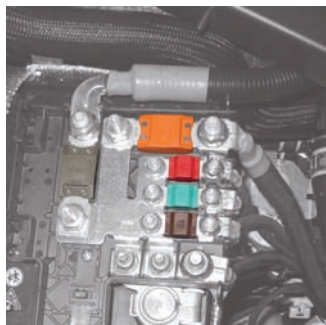




F-52	15	Power socket, driver's seat heating, wiper control ECU relay
T01	20	Low beam relay
T11	30	Heated rear window relay
T12	30	Service relay 1 (dependent on INT/A ignition switch)
T13	50	Jumper (service power supply 2)

Fuses and relays in passenger compartment on passenger side

To access these fuses, remove the passenger side footrest **2** by unscrewing the screws as shown in the figure.

Box **C** contains these fuses and relays:


Ref.	Amp.	Use
F-01	40	+30 electric radiator fan 2
F-02	40	+30 ABS (valves)
F-03	70	Bus bar power supply for F-107, F-108, F-91, F-92, F-109, F-104, F-103
F-04	50	+30 ABS (pump)
F-05	40	+30 Air conditioning Node
F-06	40	+30 electric radiator fan 1
F-07	20	+30 Horn relay
F-08	7.5	Air conditioning and heating system compressor
F-09	7.5	+30 Alternator sensing

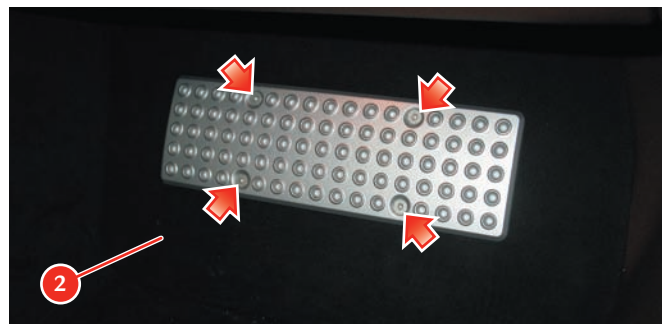

F-10	30	+30 Bus bar for F-94, F-95, F-106
F-11	25	Left bank oxygen sensors
F-14	15	+30 High beam relay
F-15	30	+30 Ignition switch
F-16	25	+30 Right bank engine control power supply
F-17	25	+30 Left bank engine control power supply
F-20	30	+30 Right cylinder bank injection system power supply
F-21	30	+30 4WD system hydraulic pump relay
F-22	15	Left bank (ignition coil)
F-24	15	Right bank (ignition coil)
F-30	30	+30 Starting relay
F-81	50	+30 Fuel pump ESD ECU
F-82	70	+30 Dashboard ECU and luggage compartment ECU power supply
F-83	50	+30 Air pump relay
F-84	30	+30 Suspension Control Node
F-85	25	Headlight washer
F-87	25	Right bank oxygen sensors
F-88	10	+15 Left cylinder bank injection system
F-89	10	+15 Right cylinder bank injection system
F-90	7.5	+15 4WD front differential ECU

F-91	7.5	+30 Tyre pressure node, LH headlight LED module relay
F-92	10	+30 RH headlight LED module relay, EPB-activated stop light control relay
F-94	15	+30 Radio/CAN box/ICP/clock spring/Japan navigation system stabiliser
F-95	10	+30 Current stabiliser
F-102	10	+30 ABS (electronic)
F-103	20	+30 4WD front differential ECU
F-104	15	+30 4WD electric cooling fan relay
F-105	30	+30 ABS (valves)
F-106	7.5	+30 Passenger compartment control lighting
F-107	10	+30 Right cylinder bank injection system power supply
F-108	10	+30 Left cylinder bank injection system power supply, starting relay


5

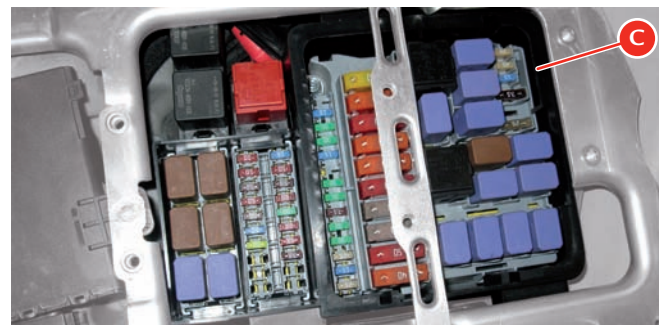



F-109	7.5	+30 Supplementary stop light relay
T02	30	High beam relay
T03	30	Passenger compartment control lighting relay
T05	30	Supplementary stop light relay
T06	30	Battery cooling fan relay (preset)
T07	50	Horn relay
T08	30	Air conditioning and heating system compressor relay
T09	30	Left cylinder bank injection system main relay
T10	30	Right cylinder bank injection system main relay
T14	30	4WD system electric cooling fan relay
T17	10/20	INT/A relay (devices excluded at ignition)
T19	30	EPB-activated stop light control relay

T20	30	Starting relay
T26	30	Windscreen wiper first speed relay
T27	30	Windscreen wiper second speed relay
T28	30	Windscreen washer pump relay
T29	30	Rear window washer pump relay
T30	50	Air pump relay
T31	30	Headlight washer pump relay
T37	30	Radiator fan relay 2
T38	30	Left headlight LED module power supply relay
T39	30	Right headlight LED module power supply relay
T40	30	Radiator fan relay 1

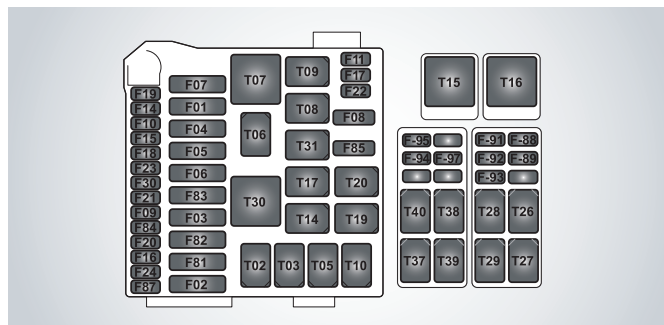





Fuses and relays on centre console

To access these fuses, remove the rear cup holder compartment 3.

Box **D** contains these fuses and relays:

Ref.	Amp.	Use
F-54	30	+30 HiFi amplifier
F-56	30	+30 Driving Position Node
F-57	7.5	Side Markers 1 (LH front and RH rear)
F-59	7.5	Reverse light power supply
F-60	30	+30 Passenger Position Node
F-61	20	+30 Cigarette lighter relay
F-63	15	+30 Electronically controlled gearbox main relay
F-64	7.5	Fuel filler flap actuator power supply
F-65	20	+30 Door lock actuator
F-66	30	+30 Bus bar in CS-SCM3

F-67	7.5	Side Markers 2 (RH front and LH rear)
F-78	15	+30 Wiper control ECU relay
F-80	30	+30 Bus bar in CS-SCM3 power supply
T21	50	Side Marker relay
T22	30	Reverse light relay
T23	30	Fuel filler flap relay
T25	30	Electronically controlled gearbox main relay

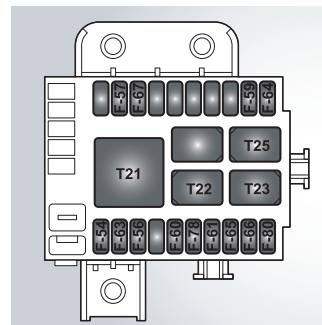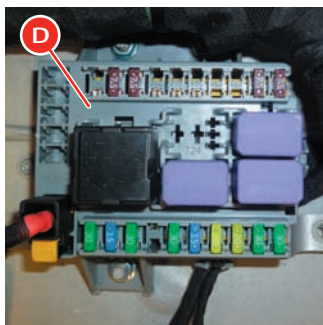





Fuses and relays in luggage compartment

To access these fuses, remove the shield **4** on the right-hand side of the luggage compartment by pulling the tabs shown in the figure.

Box **E** contains these fuses and relays.

Ref.	Amp.	Use
F-96	10	+30 Luggage compartment lock relay
F-97	10	+30 Electronic Passenger Position Node, luggage compartment striker plate
F-98	15	+30 Battery conditioner socket
F-100	7.5	+30 Driving Position Node, suspension lift ECU
F-101	10	+30 Entertainment components
T40	30	Glove compartment lock relay
T41	30	Luggage compartment lid lock relay
T42	30	Wiper control ECU relay
T43	30	Cigarette lighter relay

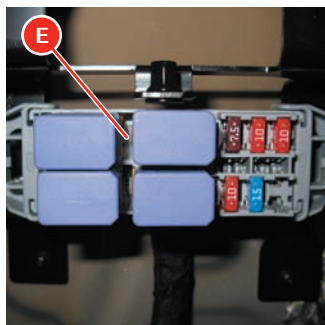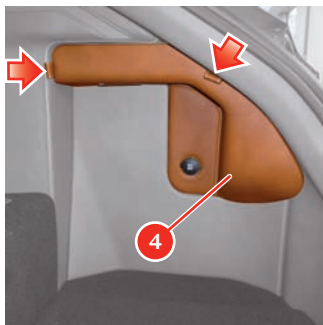



Replacing a wheel

Important note



If one or more wheels need to be replaced, proceed as follows:



- replace the wheel stud bolts with damaged threads or tapers
- carefully clean the wheel stud bolts before fitting
- do not lubricate the contact surfaces between the stud bolt and the wheel rim and between the wheel rim and the brake disk.

In order not to remove the antilock coating, do not clean the wheel rim cones with solvents or aggressive products.

Collapsible spare wheel (optional)

On request, the vehicle comes with a kit containing:

- collapsible spare wheel **A** with space-saving tyre; label **B** indicates the maximum speed allowed of 80 km/h (50 mph);

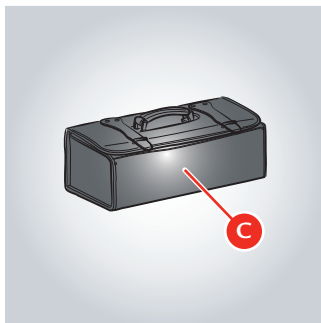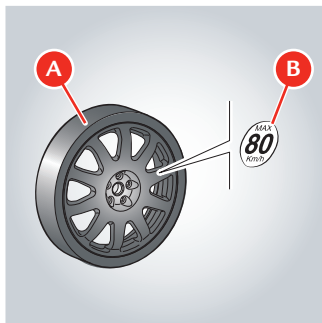

- additional tool bag **C** containing the jack for raising the vehicle and the socket wrenches for operating the jack and tightening the wheel stud bolts.

Warning



The spare wheel must only be used for short trips in the event of an emergency.

When the spare wheel is fitted, never exceed the maximum speed of 80 km/h (50 mph) and drive carefully, especially around bends and when overtaking, avoiding sudden acceleration or braking.

Do not exceed the approved weight limits.

Do not fit snow chains on the spare wheel.

Never fit more than one spare wheel at a time.

Important note



Failure to comply with these instructions could lead to loss of control of the vehicle and consequently damage to the vehicle and injuries to its occupants.

5



Replacing a wheel


- Position the vehicle on an even surface, then block the rear wheels by applying the parking brake.

Warning



Make sure that the vehicle is in a safe position by applying the parking brake.

- If necessary, switch on the hazard warning lights and place the hazard triangle at the required distance from the vehicle.
- Take the spare wheel and tools out of the luggage compartment.
- Loosen the five wheel stud bolts approximately one turn each using wrench **D** supplied.
- Place the base of the jack **E** on flat firm ground under one of the jacking points **F** on the underfloor as shown in the figure.

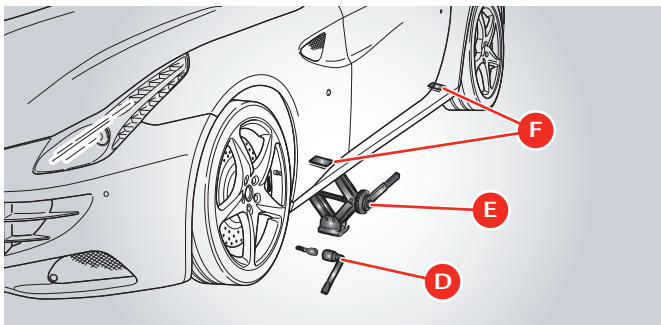

- Raise the vehicle carefully using jack **E** until the wheel is off the ground.

Warning



If the jack is not positioned correctly, the vehicle could slip off.

Make sure that no part of the body is underneath the vehicle while changing the wheel.

The supplied jack must only be used for changing wheels.

- Unscrew the five stud bolts and remove the wheel.
- Fit the uninflated collapsible spare wheel.
- Screw the stud bolts into place but do not tighten them.

Warning



Inflate the collapsible spare wheel before lowering the vehicle to avoid damaging the rims.

- Inflate the collapsible spare wheel using the inflation kit.



Warning



The kit must be used in “tyre inflation” mode. Refer to the instruction manual supplied with the kit.

- Inflate the spare wheel to the indicated pressure (see page 29).
- Lower the vehicle and remove the jack.
- Tighten the stud bolts, alternately going from one stud bolt to one that is diametrically opposite.

As soon as possible, tighten the stud bolts with the torque wrench to a torque of 100 Nm.

Warning



The spare wheel does not have a tyre pressure monitoring sensor (see label on spare wheel tool bag). After fitting, it is not checked by the system but complies with international regulations ECE R64/01.

After fitting, we recommend that you go to the nearest FERRARI SERVICE NETWORK.



Towing

When towing the vehicle, avoid using anchor points that are not designed for the tow hook inserted in housing **B**.


Proceed as follows:

- Take the tow hook out of the tool bag.
- Tightly screw the tow hook into housing **B**.
- Release the EPB.
- Release the Park Lock.

Warning



If there is an electrical system failure, release the EPB and Park Lock manually (see pages 254-256).

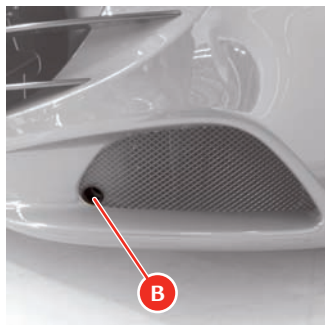

Warning



While towing the vehicle, you must comply with Road Regulations.

Warning



Do not tow the vehicle by attaching to levers, suspension and wheel rims but only to the tow hook properly fitted in place.

Keep the key in position **II** to enable the lights to work and prevent the steering wheel from locking if it is turned; when towing the vehicle, do not start the engine.

Important note



Remember that when the engine is switched off, the power steering and brake servo functions do not work.



Fuel inertia switch

The fuel inertia switch is a safety device which deactivates the fuel pump relays if a collision occurs.

A symbol appears on the left TFT display and the hazard warning lights come on to indicate that the switch has been activated.

When the fuel inertia switch is activated, the doors are also unlocked (if locked) and the central dome light comes on.

Warning



The fuel pump relays can be reactivated by pressing button **A** on the floor in front of the driver's seat.





Battery

The battery is located on the right-hand side of the engine compartment: to access it, remove the cosmetic shield by unscrewing the two screws shown in the figure.

Checking the battery

Warning




The battery does not need topping up with distilled water or sulphuric acid.

Warning



The battery must only be removed from the vehicle by the FERRARI SERVICE NETWORK. Removal of or damage to the battery affect the vehicle software ECUs and may result in error codes, data loss or inaccurate data.

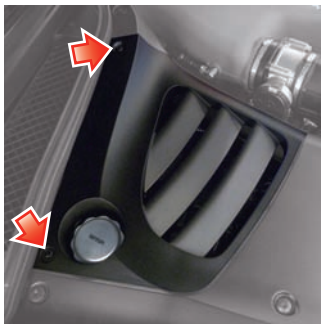

Warning



Do not place the battery near sources of heat, sparks or naked flames.

The vehicle is equipped with a sealed lead acid battery that does not require maintenance.

- Periodically check that the terminals and pins are clean and firmly secured.
- Visually inspect the outer casing for any cracks.
- If the battery overcharges, it will wear out quickly. Have the vehicle electrical system checked if the battery tends to discharge easily.

Disconnecting the battery

Before disconnecting the battery, deactivate the electronic alarm using the remote control.

Warning



Never disconnect the battery from the electrical system when the engine is running.

Before disconnecting the battery, lower the side windows by at least 2-3 centimetres (0.8-1.2. in.) to avoid damaging the strips when opening and closing the doors.



Warning



When the battery is connected and charged, this operation is automatically performed when the doors are opened and closed. The windows must remain lowered until the charged battery is reconnected. If the battery is discharged and the windows are fully up, only open the doors when strictly necessary and take great care; do not close them again until the windows can be lowered.

Important note



We recommend using the battery conditioner if the vehicle is going to left unused for a long period.

To cut off the power supply from the battery to the electrical system, use the quick release **C** on the left side of the battery. Use the locking lever to loosen the terminal.



Detach the terminal from the battery: the power supply from the battery to the electrical system is cut off.

Warning



The battery quick release must only be used if the battery conditioner cannot be connected.

Warning



Place the terminal so that it does not come into contact with the battery terminal or other metal parts of the vehicle.

Reconnecting the battery

Place the clamp on the battery and fasten it by closing the locking lever.

Each time the battery is reconnected, do the following before starting the engine:

- close both doors and close the luggage compartment lid; unlock and lock the doors using the remote control; open the luggage compartment lid using the remote control;
- adjust the clock (date and time on instrument panel);
- close both doors and fully raise the driver side and passenger side windows to their upper limit; check that the windows move down to the “target position” when the doors are opened.

5



Warning



Before starting the engine, wait at least 60 second with the ignition key in position **II** to allow the electronic system that controls the motor-driven valves and the AC ECU to run a self-acquisition process.

During this period, no devices must be activated.

The Motronic ECU self-acquisition cycle will only function correctly when the intake air temperature is above 5 °C (41 °F).

After removing the battery from the vehicle or disconnecting it from the electrical system using the battery master switch, it is important to check that the external temperature is within the indicated values when reconnecting before performing the self-acquisition cycle.

Emergency starting

If the battery is flat, you can perform an emergency start by connecting the special jump leads to the battery of another vehicle, a portable jump starter or an external battery.

Important note



Emergency starting can only be performed with batteries with a nominal voltage of 12 V.

Important note




For emergency starting, only use leads that do not allow reverse polarity, with sufficient cross-section and insulated clamps.





To perform an emergency start, do the following:

- Apply the parking brake.
- Deactivate all the electrical devices.
- Remove the cosmetic shield on the right-hand side of the engine compartment by unscrewing the screws shown in the figure.
- Remove the cover **A** of the fuse box located above the positive terminal.
- If emergency starting is performed using the battery of another vehicle, leave the engine on the other vehicle to idle.
- Using the jump leads, connect the positive terminal of the battery to the positive terminal of the portable jump starter or external battery going from the battery on your own vehicle.
- Connect the negative terminal of the portable jump starter or external battery to an earthing point on your vehicle using the jump lead going from the external battery.

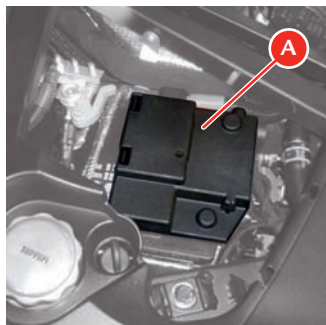

- Start the engine.
- Disconnect the jump lead from the earthing point and then from the positive terminal of the battery on your vehicle.

Warning



After emergency starting, go to the nearest FERRARI SERVICE NETWORK immediately to get the battery checked.

5



Battery conditioner

The vehicle is equipped with a battery conditioner to maintain and recharge the battery.

Important note





Using the battery conditioner will extend the life of the battery.

The device is kept in a pocket inside the car cover bag supplied with the vehicle.

The battery conditioner connection socket **D** is located on the right-hand side of the luggage compartment behind cover **B**.

To access the socket **D**, remove the cover **B** by pulling the two tabs shown in the figure.

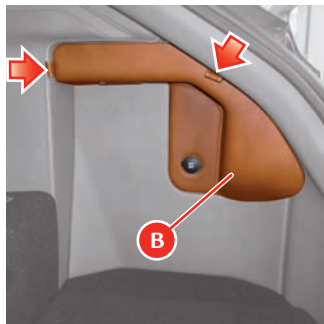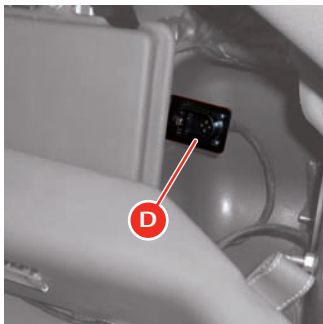

Warning



Place the battery conditioner where it can be easily seen away from heat sources and out of children's reach.

After connecting the battery conditioner to the socket in the vehicle, run the connection cable underneath the luggage compartment lid near the bottom corner.

Important note



Do not run the connection cable out of the vehicle in positions other than those indicated to prevent damaging the seals and/or the cable.

If you do not plan to use the vehicle for over a week, we recommend you connect the battery conditioner to keep the battery in perfect working order.





Warning



The engine cannot be started as long as the battery conditioner is connected to the vehicle socket.

Important note



Additional technical information on the use of the device can be found in the manual provided inside the pocket of the car cover bag.

Exhaust system overheating alarm devices ("Slow Down" function)

If the engine is running unevenly resulting in exhaust system overheating, the "Slow Down" function is activated: a special symbol (see page 126) appears on the left TFT display accompanied by a message.

The message varies according to three alarm levels:

- **Temperature high:** "Catalysts temp. high. Slow down".
- **Temperature too high:** "Catalysts temp. too high. Engine performance limited".
- **Catalytic converter temperature system failure:** "Catalysts temp. not plausible. Go to dealer slowly".

Displaying of the message is controlled by the thermistor via the engine control ECU.

Warning



Incorrect use of the vehicle may cause the "Slow Down" function to be activated.

Warning



If the temperature is **high**:
slow down immediately so that the exhaust system temperature decreases.

5



Warning



If the temperature is **too high**:

the temperature in the catalytic converters has reached a dangerous level and could damage them; if you continue to drive, the engine control ECU intervenes and reduces the torque produced by the engine.

The torque limit remains active until the catalytic converter temperature goes down to normal operating values.

Warning



If catalytic converter temperature system failure information is displayed:

- the engine control ECU intervenes and reduces the torque produced by the engine
- the driver must slow down and slowly drive to the nearest FERRARI SERVICE NETWORK to have the engine parameters checked.

Warning



If the EOBD warning light (see page 124) comes on at the same time as the “Slow Down” message, go to the FERRARI SERVICE NETWORK to have the ECU error memory checked. Do not proceed in any other way.

Clutch overheat alarm devices

Extremely high performance use of the vehicle at high engine speeds for prolonged periods and at high ambient temperatures may cause the DCT gearbox clutches to overheat. In this case, the following safety warnings will be displayed on the left TFT display, corresponding to two different alarm levels:

- The message “Clutch overheated”
- The message “Clutch overheated” accompanied by an acoustic signal.

When the message “Clutch overheated” is displayed, the driver may notice a difference in the behaviour of the system during gearshifts and/or during standing starts.





Important note



Certain high-performance actions (including but not limited to: “LAUNCH” control start, standing start with wheelspin with Manettino set to ESC OFF, etc.) may be inhibited to prevent excessive overheating of the clutches: the system warns the driver that the action is not permitted by displaying the message “Operation not admissible” on the left TFT display.

Warning



As soon as any of the warnings described above appear on the left TFT display, the driver must slow down, continue driving at an engine speed between 2,000 and 3,000 rpm and minimise gearshift frequency to allow the clutches to cool down as quickly as possible. These driving conditions must be maintained until the message “Clutch overheated” is no longer displayed.

Engine malfunction alarm devices

If the “**engine control system failure**” (EOBD, see page 124) warning light flashes or comes on permanently while the engine is running, it indicates that the engine or the emission control system may be malfunctioning.

The electronic system detects and isolates the error preventing damage to the engine or the production of harmful emissions.

Warning



When the “engine diagnostic system failure” warning light comes on, engine performance may be considerably reduced. Drive carefully, avoiding sudden acceleration and high speeds. Contact the **FERRARI SERVICE NETWORK** immediately.



Replacing the brake pads and discs

Brake pads

The front brake pads have a wear detector connected to the brake warning light; if this warning light comes on or braking is not even, have the pad thickness and the state of the braking surfaces checked.

The minimum brake pad thickness is 3 mm - 0.12 in. (thickness of the friction material only).

Replacing brake pads

When the brake failure warning light comes on, it means that the front brake pads are excessively worn and must be replaced immediately.

Warning



To guarantee the quality of the components and proper installation, we recommend that you have the brake pads replaced at a FERRARI SERVICE CENTRE.

After replacement, avoid sudden braking until the new pads are seated properly (approximately 300 km - 186 mi).

Emergency release of the electric parking brake (EPB)

Warning



The release procedure must only be carried out by specialised workshop technicians.


If the system cannot be released, contact the nearest FERRARI SERVICE CENTRE.

Warning



When the electric parking brake is deactivated manually, the vehicle may move.

To keep the vehicle stationary, the Park Lock safety device must be applied: make sure that the letter “P” appears on the gearbox display.

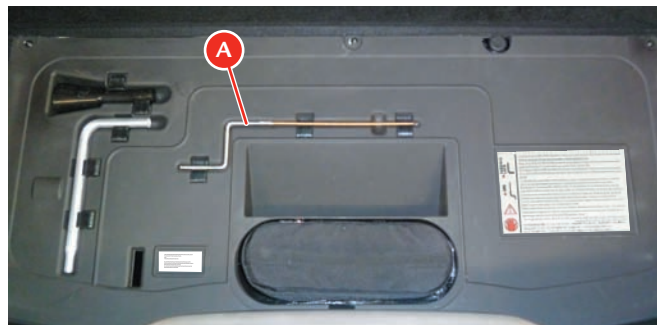



If the vehicle needs to be moved but the electric parking brake cannot be deactivated because the battery is flat or there is a failure in the electrical system that controls it, the emergency release procedure described below must be performed.

- Take wrench **A** for EPB emergency release out of the tool bag.

Warning



Wrench **A** may only be used by specialised workshop technicians, as indicated on label **C** on the tool kit.

- Using the special rectangular slot **B** on the LH side of the tool kit (indicated by a label), place the wrench in the EPB release housing (in the lower part of the slot, as shown in the figure) and turn it clockwise: this loosens the parking brake cables.



Important note



To release the brake completely, the wrench needs to be turned 50 times and it starts to be released after approximately 20 turns.

Once the electric parking brake has been manually released, the EPB node records a failure at the next key-on and a special symbol and the following message are displayed on the left TFT display: “Parking Brake system revision. Go to dealer”.

Warning



The parking brake resumes normal operation, but it is important to go to the nearest workshop to have it calibrated and delete any errors in the error memory.

Go to a FERRARI SERVICE CENTRE.

Calibration is necessary for safety reasons.



5



Park Lock emergency release

Warning



The emergency release procedure must only be carried out by specialised workshop technicians.

If the system cannot be released, contact the nearest FERRARI SERVICE CENTRE.

Warning



This should be avoided unless absolutely necessary:

- to tow the vehicle;
- if there is a Park Lock failure (displayed on the left TFT display with the message “Only manual unlock gearbox allowed: See handbook”).

Warning



When the Park Lock safety device is deactivated manually, the vehicle may move unexpectedly.

The vehicle is only kept stationary by the parking brake, if applied.

The Park Lock manual emergency release device is found in the top right of the tool kit, as shown by the arrow in the figure.

To perform the Park Lock emergency release procedure, do the following:

- Take wrench **D** out of the tool kit.

Warning





Wrench **D** may only be used by specialised workshop technicians, as indicated on label **C** on the tool bag.





- Remove the rubber protection cap **E**.
- Place wrench **D** in the manual release device housing **F**.
- To perform the emergency release, turn wrench **D** clockwise for a quarter turn.

If the electrical system allows it, check that the letter “N” appears on the gearbox display by turning the ignition key to position **II**. The following message will appear on the left TFT display: “Gearbox not in Parking position”. At the same time, an audible signal is repeated four times to indicate that it has been released.

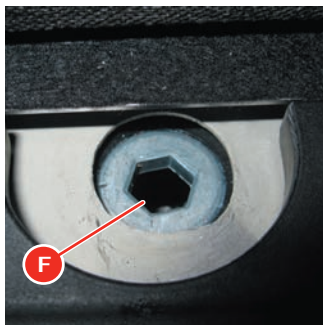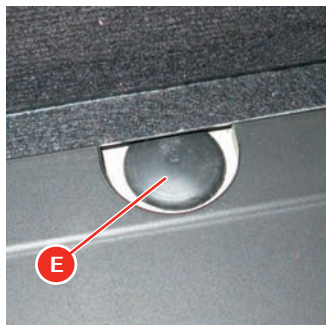

Warranty Booklet	260
Maintenance	260
Level checks.....	262
Wheels and tyres	269
Maintenance of seat belts and pretensioners.....	271
Cleaning the vehicle	271
If the vehicle is stored for long periods	275



6



CARE OF THE VEHICLE



Warranty Booklet

The vehicle comes with a “Warranty Booklet”.

This contains the vehicle’s warranty validity conditions.

Warning



The warranty booklet also contains special blank spaces where the FERRARI SERVICE NETWORK can register the regular maintenance services performed, as indicated in the maintenance schedule.

Maintenance

It is essential to always keep the vehicle in proper working order to ensure a long working life and to prevent any running defects, caused by negligence or lack of maintenance, and consequently to avoid hazardous situations.

Important note



All repair work on any safety system component must be performed by the FERRARI SERVICE NETWORK.

Maintenance schedule

At the intervals prescribed, the FERRARI SERVICE CENTRES must perform all the fine-tuning and checking operations indicated in the “Warranty Booklet”.

It is however advisable to report any small fault which occurs when using the vehicle (e.g. small leaks of essential fluids) to the FERRARI SERVICE NETWORK immediately and not wait until the next service is due to correct the problem.

Periodic maintenance services must be performed at least once a year even if the specified mileage limit has not been reached (see “Annual Maintenance” in the “Warranty Booklet”).

Displaying information on scheduled maintenance

If the next scheduled maintenance deadline is approaching, at key-on, the message “Service Stop within:” is displayed for 5 seconds on the left TFT display followed by the number of kilometres or days before vehicle servicing. The information is provided in kilometres or days according to the deadline that comes first.





Information on scheduled maintenance can also be displayed on the left TFT display if requested by the driver irrespective of the scheduled deadlines. To do this, call up the MENU screen page (see page 94) and select “Service”.

Chassis and bodywork maintenance

The chassis has technological and manufacturing specifications that require that any operation be performed by staff specially trained to work with this innovative technology.

It is of crucial importance to use equipment tested by FERRARI if the repair work is to be performed in accordance with rules of good workmanship. Proper execution of repair work ensures that the commercial value of the vehicle is preserved and the safety standards are complied with.

Important note




If the chassis is damaged in an accident, FERRARI advises customers to contact the FERRARI SERVICE NETWORK who will perform the necessary safety checks.

The chassis, under standard conditions of use, requires no maintenance; it is however advisable to contact the FERRARI SERVICE NETWORK at the intervals indicated in the “Warranty Booklet” in order to have it checked.



Level checks

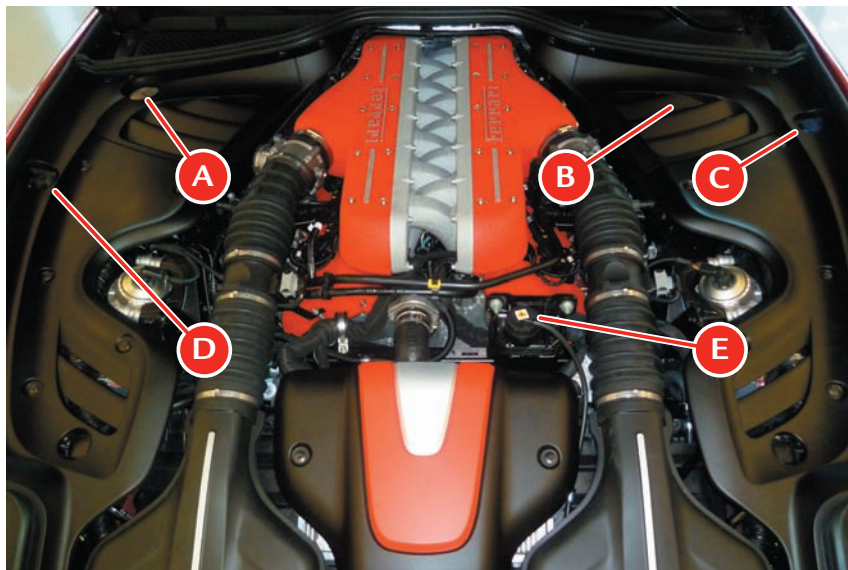

Ref.

- A** Engine oil tank cap
(page 264)
- B** Brake fluid tank cap
(page 267)
- C** Windscreen and headlight washer fluid
tank cap (page 268)
- D** Coolant tank cap
(page 266)
- E** Power steering system oil tank cap
(page 266)



Important note



The level checks must be performed at the intervals indicated in the “Warranty Booklet” or, in any case, before starting a long journey.

Environment



All the materials used for the following operations (e.g. cloths soaked with oil or grease, pans, etc.) must be disposed of in compliance with the environmental protection regulations.

Important note



Only use lubricants and/or fluids recommended by FERRARI (see the “Refilling” table on page 32).



Checking the engine oil level

Warning



The engine oil level must be checked when the engine is idling and warm and the vehicle is on level ground.

DO NOT add oil with different characteristics from those of the oil already in the engine.

The symbol, shown below, on the left TFT display and the message “Check engine oil level” inform the driver that the engine oil level must be checked.



Proceed as follows:

1. Run the engine until the engine oil temperature has reached 85 - 90 °C (185 - 194 °F).
2. Leave to idle for at least 4 minutes.
3. Run the engine at between 4,000 and 4,500 RPM for 1 minute.
4. Leave to idle for 2 minutes and then (before the 3rd minute elapses) check the oil level.

Important note



If the oil is checked after 3 minutes, repeat stages 3. and 4. and check the level again.

5. Remove the cosmetic shield on the right-hand side of the engine compartment by unscrewing the screws shown in the figure and then remove the filling cap **A**, remove the dipstick **F** and check the level: the level must be between the **MIN** and **MAX** notches on the dipstick.

Important note




The distance between the **MIN** and **MAX** notches corresponds to approximately 1.5 litres of oil.

6. If the level is low, top up with the recommended oil and make sure you do not fill beyond the **MAX** level on the dipstick.

Warning



If the oil level is below **MIN**, top it up and then have the system checked by the **FERRARI SERVICE NETWORK**.

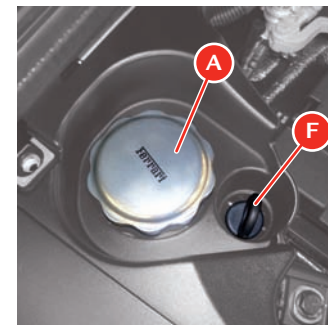



7. Screw cap **A** back on tightly.

After topping up, the “low oil level” symbol on the left TFT display may remain on for some time. This will allow the system to perform all the necessary checks. You should therefore consider this behaviour normal.

8. When you have added or changed the oil, check the oil level once again as indicated above.

Important note



The first check was performed between the 2nd and 3rd minute and the second check must therefore be performed within the same interval of time.

For example, if the first check was performed after 2 mins 30 seconds, the second check must also be performed after approximately 2 mins 30 seconds.

Environment



Top up with due care to avoid pouring the oil out of the filler neck.

Checking the DCT gearbox oil level

Important note



We recommend that you have the oil level of the DCT gearbox checked by the **FERRARI SERVICE NETWORK** or by skilled staff.



Checking the coolant level

Warning



The coolant in the cooling system reaches very high temperatures and pressures. This procedure must always be performed when the **ENGINE IS COLD**. Never remove the cap from the expansion tank when the engine is running or warm.


- Remove the cap **D** from the expansion tank.
- Check that the level can be seen from the filler neck.
- If the level is low, top it up with the recommended fluid.

Important note



If frequent top-ups are required after short trips, have the system checked by the **FERRARI SERVICE NETWORK**.

- Screw cap **D** back on tightly.

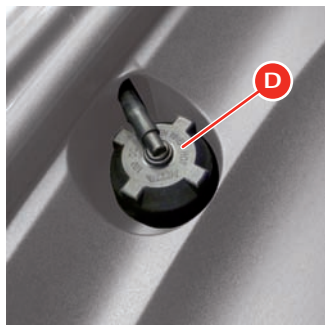

Checking the power steering system oil level

Warning



The power steering oil level must be checked with the engine warm, after having driven at least 15 km (9 mi). If it is checked when the engine is cold, the level may appear to be very low even when the recommended amount of oil is in the system.

Warning



If the oil level is below **MIN**, top it up and then have the system checked by the **FERRARI SERVICE NETWORK**.

Proceed as follows:

- Remove cap **E** with the dipstick from the tank.





- Check that the power steering oil level is between the **MIN** and **MAX** levels on the dipstick.
- If the level is near the **MIN** reference mark, top up with the recommended oil up to the **MAX** level.

Warning



Always use the indicated quantity of new, recommended fluid taken from sealed containers.


The fluid in the circuit is synthetic. The use of mineral-based fluid may irreparably damage the rubber system gaskets.

- Screw cap **E** back on tightly.

Environment



Do not dispose of used fluid in the environment.

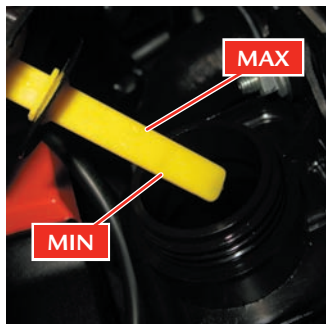

Checking the brake fluid level

Proceed as follows:

- Remove the cosmetic shield on the left-hand side of the engine compartment by unscrewing the screws shown in the figure and check that the level is near the **MAX** mark shown in the figure.

Important note





Clean cap **B** before removing it.

- If the level is near the **MIN** mark shown in the figure, remove cap **B** and top up with the recommended oil to the **MAX** mark.

Warning



Always use the indicated quantity of new, recommended fluid taken from sealed containers.

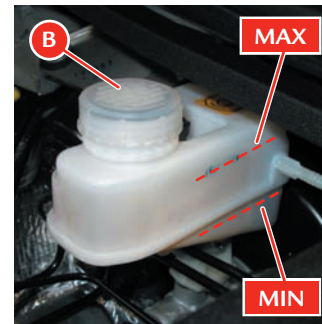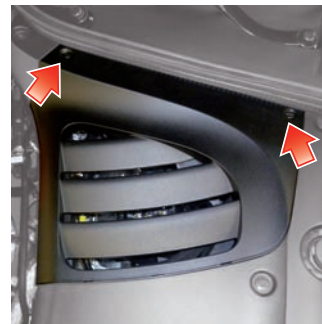

6



Environment



Never dispose of used fluid in the environment.

Warning



The fluid in the brake system may damage plastic, rubber and painted parts and is highly dangerous if it comes into contact with the eyes or the skin.

If the fluid comes into contact with the eyes or skin, wash the affected part thoroughly with running water. To avoid any risk, always use protective goggles and gloves.

Keep out from children's reach!

Warning



The use of mineral-based fluids will irreparably damage the system rubber gaskets.


Do not use fluids other than those already in the system for topping up.

- Screw the cap **B** back on tightly.

Windscreen and headlight washer fluid

The windscreen and headlight washer fluid tank can be accessed by lifting the engine compartment lid.

- Lift cap **C** and fill the tank with the recommended fluid (see the “Refilling” table on page 32) until it can be seen in the fluid filling manifold.
- Close cap **C**.

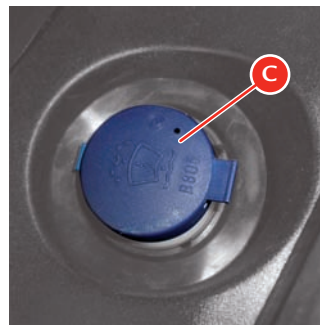



Wheels and tyres

To ensure maximum performance and tyre life and to permit the best tyre adjustment on the wheel rim, it is important to comply with the following instructions for the first 200/300 km (125 - 185 mi) with new tyres:

- avoid sudden acceleration
- avoid sharp braking and steering
- drive at moderate speed on straight roads and on curves.

How to use the tyres

Important note



To ensure safe driving, the tyres must be kept in good condition.

The inflation pressure must correspond to the specified values and must be checked only when the tyres are cold since tyre pressure increases as tyre temperature increases.

Never reduce the pressure if the tyres are hot.

Environment



Periodically check the tyre pressure. Driving with the tyres inflated to the correct pressure helps to reduce fuel consumption.

Low tyre pressure can lead to overheating, internal damage and even destruction of the tyres.

Warning



Inflating the tyres to a pressure which is different from that prescribed will make the TPMS inaccurate.

Sudden impact with pavements, potholes and other obstacles of various types as well as long trips on rough roads can cause damage to the tyres that is not always visible to the naked eye.

Check the tyres regularly for any signs of damage (e.g. scratches, cuts, cracks, bulges, etc.).

If sharp objects penetrate the tyres, they can cause damage which is only visible when the tyre is removed.

Have any damage inspected by an expert as it may considerably reduce tyre life.

Remember that tyres deteriorate over time even if they are rarely used or not used at all.

Cracks in the tread and side walls, possibly accompanied by bulging, are sure signs of ageing.

Winter tyres

Warning



The maximum speed supported by the winter tyres (see page 29) is lower than that supported by the summer tyres. Always check the maximum speed rating indicated on the tyre by the tyre manufacturer.



Warning



The FERRARI SERVICE NETWORK has the necessary equipment for tyre replacement.

Have the tyres replaced by the FERRARI SERVICE NETWORK which has the equipment needed to avoid damage to the sensor inside the wheel rim which could be caused by carelessly performed procedures.

Ensure that tyres are not kept in stock for more than 4 years. The maximum limit for keeping tyres in stock is 4 years provided they are kept away from sunlight, bad weather and damp and where there is a low oxygen content.

Important note



The FERRARI SERVICE NETWORK can certify whether aged tyres are suitable for use. In any case, tyres that have been on a vehicle for more than 3 years must be checked by a FERRARI SERVICE CENTRE.

Warning



We recommend replacing tyres every 4 years under normal use. Frequent use in maximum load conditions and at high temperatures may accelerate ageing.

Never fit tyres of uncertain origin.

Warning



“Directional” type tyres have an arrow on their side wall to indicate the direction in which they must rotate or which side is the outer one. When replaced, maximum performance levels can only be ensured if the rotation direction corresponds with the direction indicated by the arrow.

Tyres on the same axle must always be replaced in pairs.

Regularly check the tyre tread (minimum acceptable depth **1.7 mm**). As the tread wear increases, there is a greater risk of skidding.

Warning



Drive carefully on wet roads to reduce the risk of “aquaplaning”.

Wheel alignment check and adjustment

When you notice unusual wear of the tyres and in any case, at the intervals prescribed in the “Warranty Booklet”, have the FERRARI SERVICE NETWORK check the wheel toe-in and camber.



Maintenance of seat belts and pretensioners

- Periodically check that the screws on the anchor points are tight and that the seat belt is in perfect condition and slides smoothly.
- The seat belt must be kept clean; the presence of any dirt could prevent the seat belt retractor from working properly.
- To clean the seat belt, wash it by hand with mild soap and water, rinse it and let it dry. Do not use strong detergents, bleach or aggressive solvents, as they can weaken the fibres.
- Do not let the seat belt retractors get wet: proper functioning is only ensured if they are kept dry.
- The pretensioner requires no maintenance or lubrication. If immersed in water or mud, the pretensioner must necessarily be replaced.
- The pretensioner must be replaced at the intervals indicated in the “Warranty Booklet”.

Cleaning the vehicle

Cleaning the exterior

Environment



All the materials used for the following operations (e.g. cloths soaked with oil or grease, pans, etc.) must be disposed of in compliance with the environmental protection regulations.

Proper care of the vehicle on the part of the owner is essential for the vehicle long life.

Here is a list of the main precautions to be taken.

- Certain parts of the vehicle should not be left wet or dirty for long periods of time: in particular, the passenger compartment floor and the luggage compartment must always be kept clean and dry. The draining holes under the doors should be kept unclogged to allow any water to drain.
- The underbody and the lower surfaces of the vehicle should be cleaned regularly, and more frequently (at least once a week) if the vehicle is used on salty or rough roads. The vehicle should be cleaned thoroughly and carefully: cleaning that merely wets encrusted mud without removing it completely can prove damaging.
- The vehicle must be washed regularly with suitable equipment. Do not use very hot water or steam to clean the paintwork and the lower surfaces. It is advisable to soften any dirt first, then remove it with a jet of water at room temperature.



Important note



Do not use aggressive products for cleaning the windows. The use of aggressive products could seriously damage the bodywork.

- Do not wash the vehicle in direct sunlight or when the bodywork is still warm: make sure that the jet of water does not blast the paintwork; wash the vehicle with a sponge and a mild soap and water solution; rinse the vehicle again with a jet of water and dry it with a chamois leather.

Important note



When the vehicle has been washed, apply slight pressure to the brake pedal at moderate speed before driving at a normal speed, until the brake discs and pads have cleaned off.

In order to maintain the shine on the paintwork, polish it once or twice a year with products recommended by FERRARI.

- Any areas that are cracked or chipped by stones, scratches or parking manoeuvres, etc., must be immediately repaired by the FERRARI SERVICE NETWORK.
- Do not park the vehicle in damp and/or unventilated areas for long periods of time.

Cleaning and care of matt paintwork (optional)

Warning



The paintwork **MUST NOT** be polished using any type of product.

Owners must take great care of vehicles with matt paintwork (optional).

Here is a list of the main precautions to be taken.

- Wash the vehicle using a steam cleaner and rinse with demineralised water only.
- It must be dried using an automatic dryer or compressed air. Manual drying can **ONLY** be performed using a 3M microfibre yellow cloth that is clean and soaked in demineralised water in the areas where limescale deposits are present. The cloth must be kept in a special clean container.
- To clean any grease or oil marks, a 3M microfibre yellow cloth that is clean and soaked in R107/S solvent (heptane) can be used. A new cloth must be used and it must not have been previously soaked in demineralised water.
- Do not wash the vehicle in direct sunlight.
- Only wash the vehicle when the bodywork and engine are cold.
- Do not apply stickers to the bodywork.



- Any areas that are cracked or chipped by stones, scratches or parking manoeuvres, etc., must be immediately repaired by the FERRARI SERVICE NETWORK.

Important note



DO NOT lean against the vehicle especially if you are wearing clothes with buttons, buckles or are wearing rings, necklaces, etc. This may cause irreparable damage to the bodywork.

Important note



To use suitable products, contact the FERRARI SERVICE NETWORK.

Cleaning of protective anti stone-chipping film (optional)

The film has been designed to protect the bodywork: anything that damages the paint will also damage the film.

Warning



Do not pour denatured ethyl alcohol, acetone, isopropyl alcohol, heptane or substances that contain these compounds on the film.

- Do not apply adhesive elements on the film.
- When cleaning, do not use metal or abrasive substances in general and acid chemical compounds.

Important note



Avoid the film coming into contact with the brake fluid: the film will become opaque.

- Do not use solvents along the edges of the film to them from penetrating inside the adhesive layer.

Important note



Nürburgring Silver, Avus White, Alloy Grey, Met Avio, Ivory, Met Light Blue, Met Sky-Blue and Fuji White vehicles must be washed every month and waxed at least twice a year so that dirt, acid rain, pollutants, etc. do not penetrate the pores of the film and cause it to tarnish.

Important note



We recommend that the film be replaced every 24 months for Nürburgring Silver, Avus White, Alloy Grey, Met Avio, Ivory, Met Light Blue, Met Sky-Blue and Fuji White vehicles, which may show a light visible tarnish due to dirt inside the pores of the film.

It should be noted that timely and accurate cleaning (monthly washing and waxing twice a year at least) will prevent deterioration of the film.



Cleaning the interior

Cleaning and care of the leather upholstery

As indicated in the “Maintenance Schedule” (see the “Warranty Booklet”), proper and regular treatment, at least once a year, will help preserve the quality, natural characteristics and softness of the leather upholstery in your FERRARI.

With this in mind, specific leather care products are also available (“Cleaner” and “Cream”) both tested by FERRARI.

These products can be ordered through the FERRARI SPARE PARTS SERVICE DEPARTMENT, both individually and as part of the “Care Kit” which includes the complete range of products for cleaning the vehicle.

Important note



For use of the “Care Kit” products, contact the FERRARI SERVICE NETWORK.

The following products must be avoided when cleaning the leather: harsh detergents, turpentine, liquid stain removers, petrol, solvents and domestic cleaning products. All of these products damage the natural material.

Cleaning and care of the Alcantara® upholstery

Warning



Do not use steam cleaners.

- Carefully dust the parts to be cleaned
- Use a soft cloth or sponge moistened with clean water
- Thoroughly wring out the cloth and wipe it over the entire Alcantara® area making sure you do not overwet it
- Repeat the procedure
- Let it dry completely
- To recondition the material, gently use a brush with soft bristles.



If the vehicle is stored for long periods

If the vehicle is not used for long periods of time, certain precautions should be taken:

- if possible, park the vehicle on a level surface in a covered and well-ventilated area
- prevent the vehicle from moving by engaging a gear
- bring the tyre pressure to 3.0 bar (43.51 psi) and periodically change the point where the tyres rest on the ground
- connect the battery conditioner

Important note



If you do not want to connect the battery to the battery conditioner in order to keep certain devices functioning such as radio station memory, alarm system, etc., the battery must be recharged at least once a month. If the vehicle is not used for long periods of time without connecting the battery conditioner, the battery must be recharged at least every three months.

- protect the vehicle with a breathable fabric cover and avoid materials that prevent any dampness on the bodywork from evaporating.

Before using the vehicle again after long periods of inactivity, adjust the tyre pressure to the indicated pressure and check the fluid levels of all the systems.

Glossary.....	279
---------------	-----



GLOSSARY



Abbreviation	Meaning
ABS	(Anti-lock Braking System) The ABS prevents wheel locking when braking so that vehicle handling can be maintained.
AC	Air conditioning.
ASR	(Antriebs Schlupf Regelung) Anti-skid regulation during acceleration.
Autopark	Automatic activation of the electric parking brake (EPB) when the engine is switched off. This function can be disabled.
Auto easy exit	Simplified function gear shifting. To exit “Auto easy exit” mode, simply operate one of the two shift paddles.
AVH	Automatic Vehicle Holding Additional function of the electric parking brake (EPB): it allows gradual release of brake shoes/pads when the vehicle starts up. This guarantees an optimised release for the vehicle and is an aid for the driver.
DCT	Dual Clutch Transmission: each clutch is associated with a part of the gearbox, one is designed for engaging even gears, the other for odd gears. Once a gear has been engaged, the system has already preselected the next one. After reaching the correct RPM, a clutch opens and at the same time the other one closes, so that the traction force is not interrupted.
Disposal	The procedure laid down in Directive 2000/53/EC and the implementation standard.
E-Diff 3	Evolved electronic differential integrated with the F1-Trac traction control.
EBD	(Electronic Brake-Force Distribution) Electronically-controlled brake-force distribution.
ECU	Electronic Control Unit.
EPB	Electric Parking Brake: the system operates by means of an ECU and an electric motor on the rear brake shoes.
ESC	Stability and Traction Control. It consists of two systems: VDC and F1-Trac.



Abbreviation	Meaning
F1-Trac	Traction control derived from the technologies used in the racing sector. The system can estimate the maximum available grip in advance by continuously monitoring the relative wheel speed and using an auto-adaptive operating logic. Comparing this information with the vehicle dynamics model stored in the control system, F1-Trac, optimises the vehicle behaviour by controlling engine torque delivery.
Homologation	The procedure laid down in Directive 2007/46/EC and the implementation standard.
Launch Control	Strategy for performance standing starts.
Manettino	The driving mode selector on the steering wheel which allows the driver to use vehicle potential in a quick, intuitive way.
Park Lock	Automatic DCT gearbox park lock. When the engine is off, a mechanical lock is automatically activated to prevent the vehicle from moving if the electric parking brake is not activated.
TFT displays	Multifunction colour displays on the instrument panel that provide vehicle information.
TPMS	Tyre Pressure Monitoring System (optional). Using special sensors fitted inside the wheel rims next to the air valve, the data measured is sent to an ECU. The data and messages are displayed on the left TFT display.
Traction power	Force exerted by the vehicle on the road surface through the wheels; it indicates the grip.
VDC	Vehicle Dynamic Control performed through the braking system and engine torque.
Xenon headlights	Headlights on the front of the vehicle that produce a more intense beam by using a voltaic arc rather than an incandescent spiral.

Table of Contents	284
-------------------------	-----



TABLE OF CONTENTS



Index

Symbols

12V power sockets	220
4WD system failure	182
4WD traction system	182

A

“Automatic gearbox” mode	176
“Auto easy exit” mode	176
Abbreviations	9
ABS	80
Activation of electronic alarm	17
Active safety	55
Adaptive headlights	168
Adjusting display brightness	109
Adjusting the steering wheel	207
AFS2	168
Air conditioning and heating system	210
Air conditioning controls	210
Air recirculation	212
Alarm memory	19
Alarm system	15
Automatic gearbox	176
Automatic Vehicle Holding	83, 191

Autopark function	83, 191
Auto easy exit	176
Auto Hazard	167
Auxiliary Occupant Protection Systems	70
AUX connection	148
AVH function	83, 191

B

Battery	246
Battery conditioner	250
Before a trip	170
Bluetooth connection (audio streaming)	148
Brake fluid	267

C

Capless filler neck	101
Carwash	192
Carwash procedure	192
Checking the battery	246
Child safety	64
Cigarette lighter	220
Cleaning and care of the Alcantara upholstery	274
Cleaning and care of the leather upholstery	274
Cleaning the exterior	271
Cleaning the interior	274
Cleaning the parking sensors	119
Cleaning the vehicle	271
Closing the engine compartment lid	96



Closing the fuel filler flap	100
Closing the luggage compartment lid	98
Clutch overheat alarm devices	252
Collapsible spare wheel	241
COMFORT mode	185
Configuration of vehicle parameters	108
Consulting the manual	8
Consumption	28
Controls on the steering wheel	156
Controls overview	37
Coolant	266
Cruise Control (optional)	154
Cup holders	219

D

“Doors, engine or luggage compartment lid open” function display	123
“DOWN” shift paddle	159
Date and time setting	110
Day lights	166
DCT gearbox oil	265
Deactivating the anti-lift alarm	18
Deactivation of electronic alarm	18
Deformable body	55
Dimensions	27
Disconnecting the battery	246
Disc mode (DISC)	144
Display setting	108

Dome light	169
Doors	36, 94
DOWN-shifting	49, 174
DOWN-shifting due to underrevving	174
Driver-side power window	102
Driver and passenger airbags	71
Driver and passenger airbag operating	72
Drive Away function	190
Driving at night	178
Driving in fog	179
Driving in the rain	178
Driving modes that can be selected with “Manettino”	157
Driving on mountain roads	179
Driving on snowy or icy roads	179
Driving style	10
Driving the vehicle	46, 170
Driving using the driving mode control switch (“Manettino”)	184
Driving with the “ABS” braking system	180
Dual View Camera	136
Duplicating the keys	16

E

“ESCAPE” function	121
E-Diff 3	82
EBD	80
Electrical system	28



Electric parking brake	83, 190
Electronic alarm	17
Emergency opening of fuel filler flap	100
Emergency release of the electric parking brake (EPB)	254
Emergency starting	248
Emergency tyre repair and inflation kit	226
Emissions	28
Engaged gear display	132
Engine compartment lid	96
Engine malfunction alarm devices	253
Engine oil	264
Engine RPM LED on steering wheel	131
ENGINE START	156
Environmental protection	10
EPB - Electric parking brake	83, 190
ESC OFF mode	186
Exhaust system overheating alarm devices	251
External lights	44
External rear-view mirrors	208

F

“Follow me home” function	168
F1-Trac	82
Failure of turn indicators and running lights	122
Fault display	121
FBP - Ferrari Brake Prefill	81
Ferrari CODE system	15

Fire extinguisher (optional)	221
Flashing the headlights	44, 164
Folding forward of rear seats	217
Follow me home	168
Front parking sensors (activation/deactivation)	169
Fuel filler cap and neck	100
Fuel filler neck	100
Fuel inertia switch	79, 245
Fuel level	111
Fuel level gauge	111
Fuses	232

G

Gearbox display	132
Gear engaged	132
General remarks	4
Glossary	279
Glove compartment	218

H

Hard Disk (HDD) mode	146
Hazard warning lights	45, 167
Headlight washer	160
High beams	44, 164
Horn	158
Horn control	158
How to fasten seat belts	58
How to use the tyres	269



I

ICE mode	184
Identification and homologation plates and labels	20
If the vehicle is stored for long periods	275
Ignition switch	43, 99
Indication of AVH system activated	133
Indication of Launch Control activated	133
Infotainment system	138
Infotainment system setting	142
Instruments and gauges	104
Internal rear-view mirror	208

K

Key-on	99
Key codes	14
Key lock	43, 99

L

“LIFT” system (optional)	202
LAUNCH button	193
Launch Control	193
Leather upholstery	274
Left TFT display	106
Left TFT display symbols	124
Level checks	262
LIFT	202
Lighting	164

Light bulbs	231
Light switch	44, 164
LOCK/UNLOCK	169
Locking and opening the doors from the inside	36, 94
Low tyre pressure	85
Luggage compartment lid	97

M

“Manettino” driving mode control switch	156
MAIN	106
Maintenance	260
Maintenance of seat belts and pretensioners	271
Maintenance schedule	260
Main engine specifications	28
MAIN screen page	106
Manettino	156, 184
Manettino status screen page	114
Matt paintwork	272
MEDIA function	144
MENU	108
MENU screen page	108

N

“N” (Neutral)	175
“N” request	49, 175
Navigation: entering a new destination	149
Navigation function (NAV)	149
Neutral	49, 175



O

Oddment storage compartments	219
OK button	106
Opening doors	36
Opening doors from the outside	94
Opening the engine compartment lid	96
Opening the fuel filler flap	100
Opening the luggage compartment lid	97

P

“Parking” mode	133
Parcel shelf	215
Parking lights	165
Parking sensors	117
Parking sensor failure	120
Park Lock	192
Park Lock emergency release	256
Partition between passenger compartment and luggage compartment	216
Passenger-side power window	102
Passenger compartment accessories	218
Passenger display (optional)	137
Passive safety	54
Performance	28
Performance start	193
Placing luggage in the luggage compartment	214
Playing an audio disc	145

Playing a video DVD	145
Power steering	180
Power steering system oil	266
Power windows	102
Pregnant women	59
Pretensioners	62
Push start	176

R

“Rear Parking Camera” screen page	135
RADIO function	143
Rain sensor	161
Rain sensor failure	161
Rear-view mirrors	41, 208
Rear fog lights	45, 167
Rear Parking Camera	135
Rear seat belts	61
Rear Seat Entertainment (optional)	152
Rear window washer	163
Rear window washer/wiper (optional)	162
Reconnecting the battery	247
Refilling	32
Remote control batteries	17
Repetition on display of infotainment system information	142
Replacing a fuse	232
Replacing a wheel	241
Replacing light bulbs	229



Replacing remote control batteries	17
Replacing the brake pads and discs	254
Right TFT display	134
Roof panel controls	169
Running-in	170
Run Flat tyres	31

S

“Slow Down” function	251
“Speedometer” screen page	134
“Speed limit exceeded” message	116
“Stop and Go” function	117
Safe driving	177
Satellite Alarm System	19
Seats	39, 204
Seat adjustment	39, 204
Seat belts	42, 56
Seat belt handover	60
Sequential downshifting	174
Service	8
SETUP	106
Side airbags	76
Side airbag operating	76
Spare parts	7
Special recommendations	52
Speedometer	134
Speedometer display	134
Speed limit setting	116

SPORT 2 screen page	112
SPORT mode	185
SPORT screen page	112
Stability and Traction Control	81
Starting the engine	47, 172
Starting the vehicle	48, 173
Start button	156
STATUS	106
Steering wheel	40, 207
Stop&Start	194
Stop&Start system (optional)	194
Stopping the vehicle	49, 175
Storing radio stations	143
Sun visors	218
Suspension damping control	181
Suspension damping delink button	158, 188
Switching off the engine	49, 175
System start-up	171

T

Telephone function	151
Tilting the backrest	207
Toolkit	224
Tool kit	224
Towing	244
Tow hook	244
TPMS	84
TPMS failure	89



TPMS inactive	89
TPMS not calibrated	88
TPMS temporarily inactive	89
Transmission ratios	28
TRIP	106
TRIP A/B	115
TRIP A and TRIP B screen pages	115
Turn indicators	45, 166
Twilight sensor	166
Tyres	29
TYRES screen page	113
Tyre pressure	29
Tyre puncture	86
Tyre temperature and pressure monitoring system (TPMS)	84

U

“UP” shift paddle	159
Unfastening the seat belts	59
UP, DOWN, LEFT, RIGHT buttons	106
UP-shifting	49, 174
UP-shifting due to overrevving	174
USB/iPod/iPhone connection	147
Use of rear seat belts	61
Use of the vehicle	10

V

VDA	106
Vehicle keys	14
Video DVD playing controls	146
Voice Recognition (VR)	150
Voice training	150

W

“Warning: danger of ice” message	116
Warming up the engine	48, 173
Warning lights on the panel	124
Warranty Booklet	7, 260
Weights	27
WET mode	184
Wheels and tyres	269
Wheel alignment check and adjustment	270
Wheel rims	29
While travelling	177
Windscreen and headlight washer fluid	268
Windscreen washer	160
Windscreen washer/wiper	159
Windscreen washer/wiper lever	159
Winter tyres	29, 269

Equipment and options in FERRARI vehicle models may vary because of specific legal and market requirements. The information contained in this publication is therefore not binding in any way.

FERRARI reserves the right to make any modification to the vehicle models described in this manual, at any time, for either technical or commercial reasons.

Contact the nearest FERRARI Dealer for any further information you may require.

In the interests of efficiency and safety, as well as to preserve the value of the vehicle, we do not recommend modifying the equipment using non-approved parts.

Code no. **84260800**
Catalogue no. **3939/11**

EDITION
1st Edition **April 2011**

EDITING
STAR s.r.l.
Alessandria - Italia

PRINTING
STAR s.r.l.
Alessandria - Italia



Technical Service Department
Via Abetone Inferiore, 4
41053 Maranello
Modena - Italia